



Front lip disassembly manual


Product list

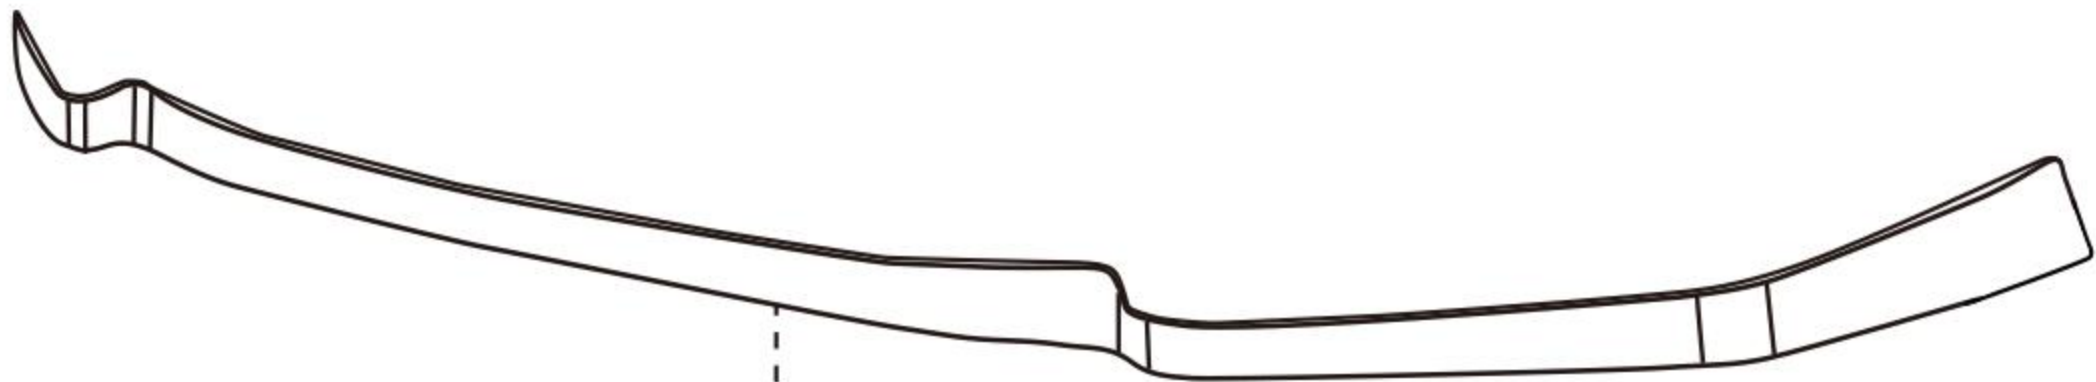


1 Upper front lip

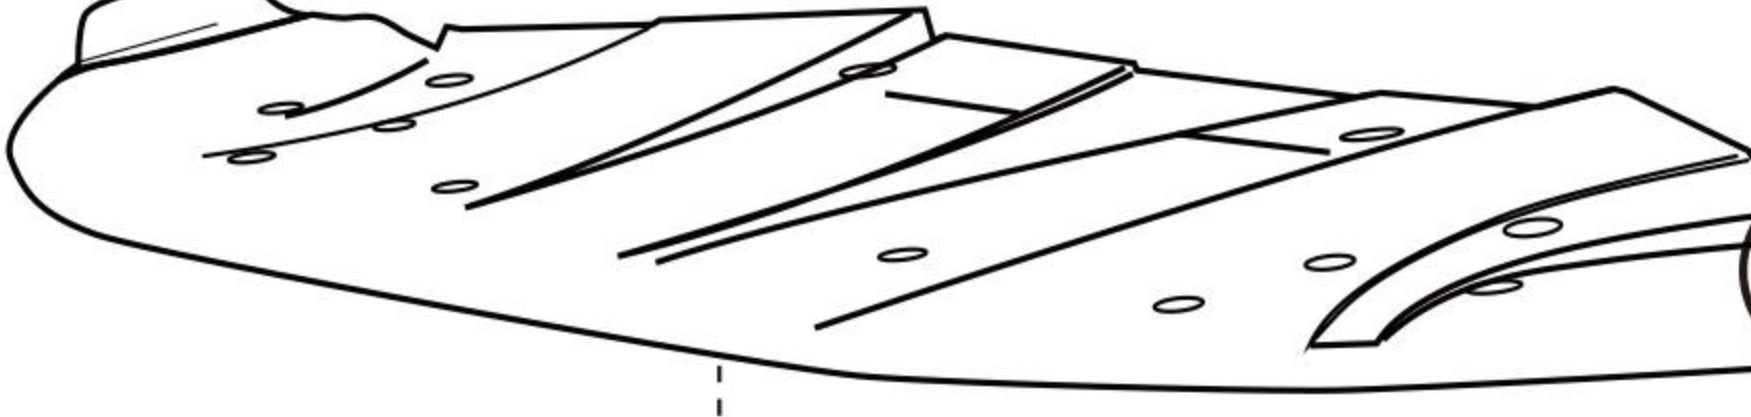

2 Lower spoiler

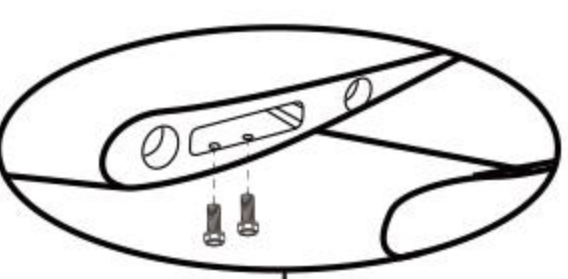


2-1 Wind knives

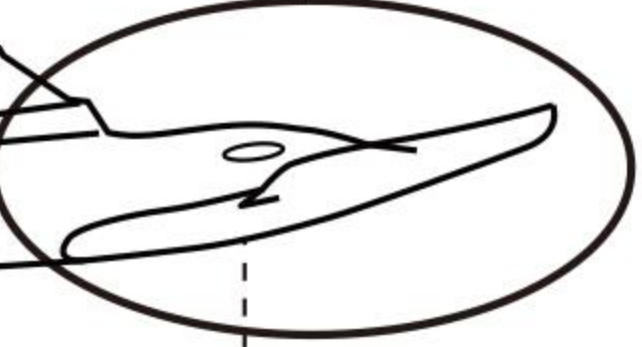

2-1 Wind knives

1	x1		Upper front lip
2	x1		Lower spoiler
2-1	x2		Lower spoiler left and right air knives

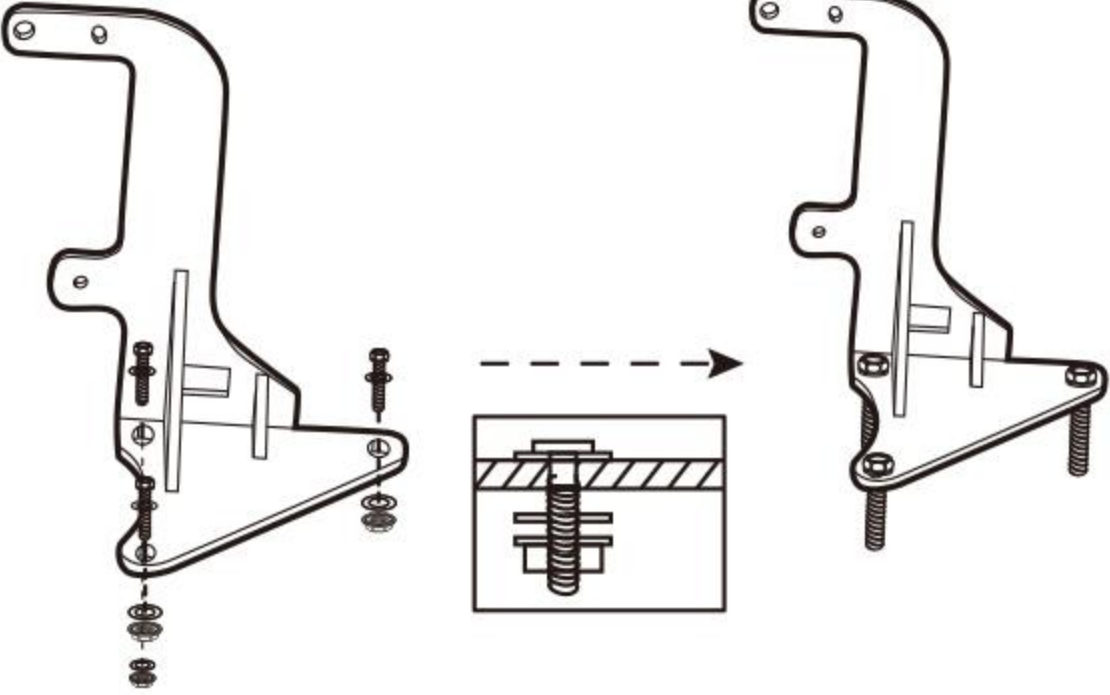

x2 Metal bracket

Parts list


Metal frame parts

			
x2	x6	x12	x6
Metal frames	screw M6X60	gasket M6X2X24	nut M6

Lower base plate parts


					
3M glue/A-sealant	x2	x2	x2	x2	x12
	screw M6X35	Hexagon screw M10X1.5X110	gasket M10X3X25	nut M6	gasket M6X2X24

Step 1: Remove the front bumper and remove the lower skid plate of the original chassis

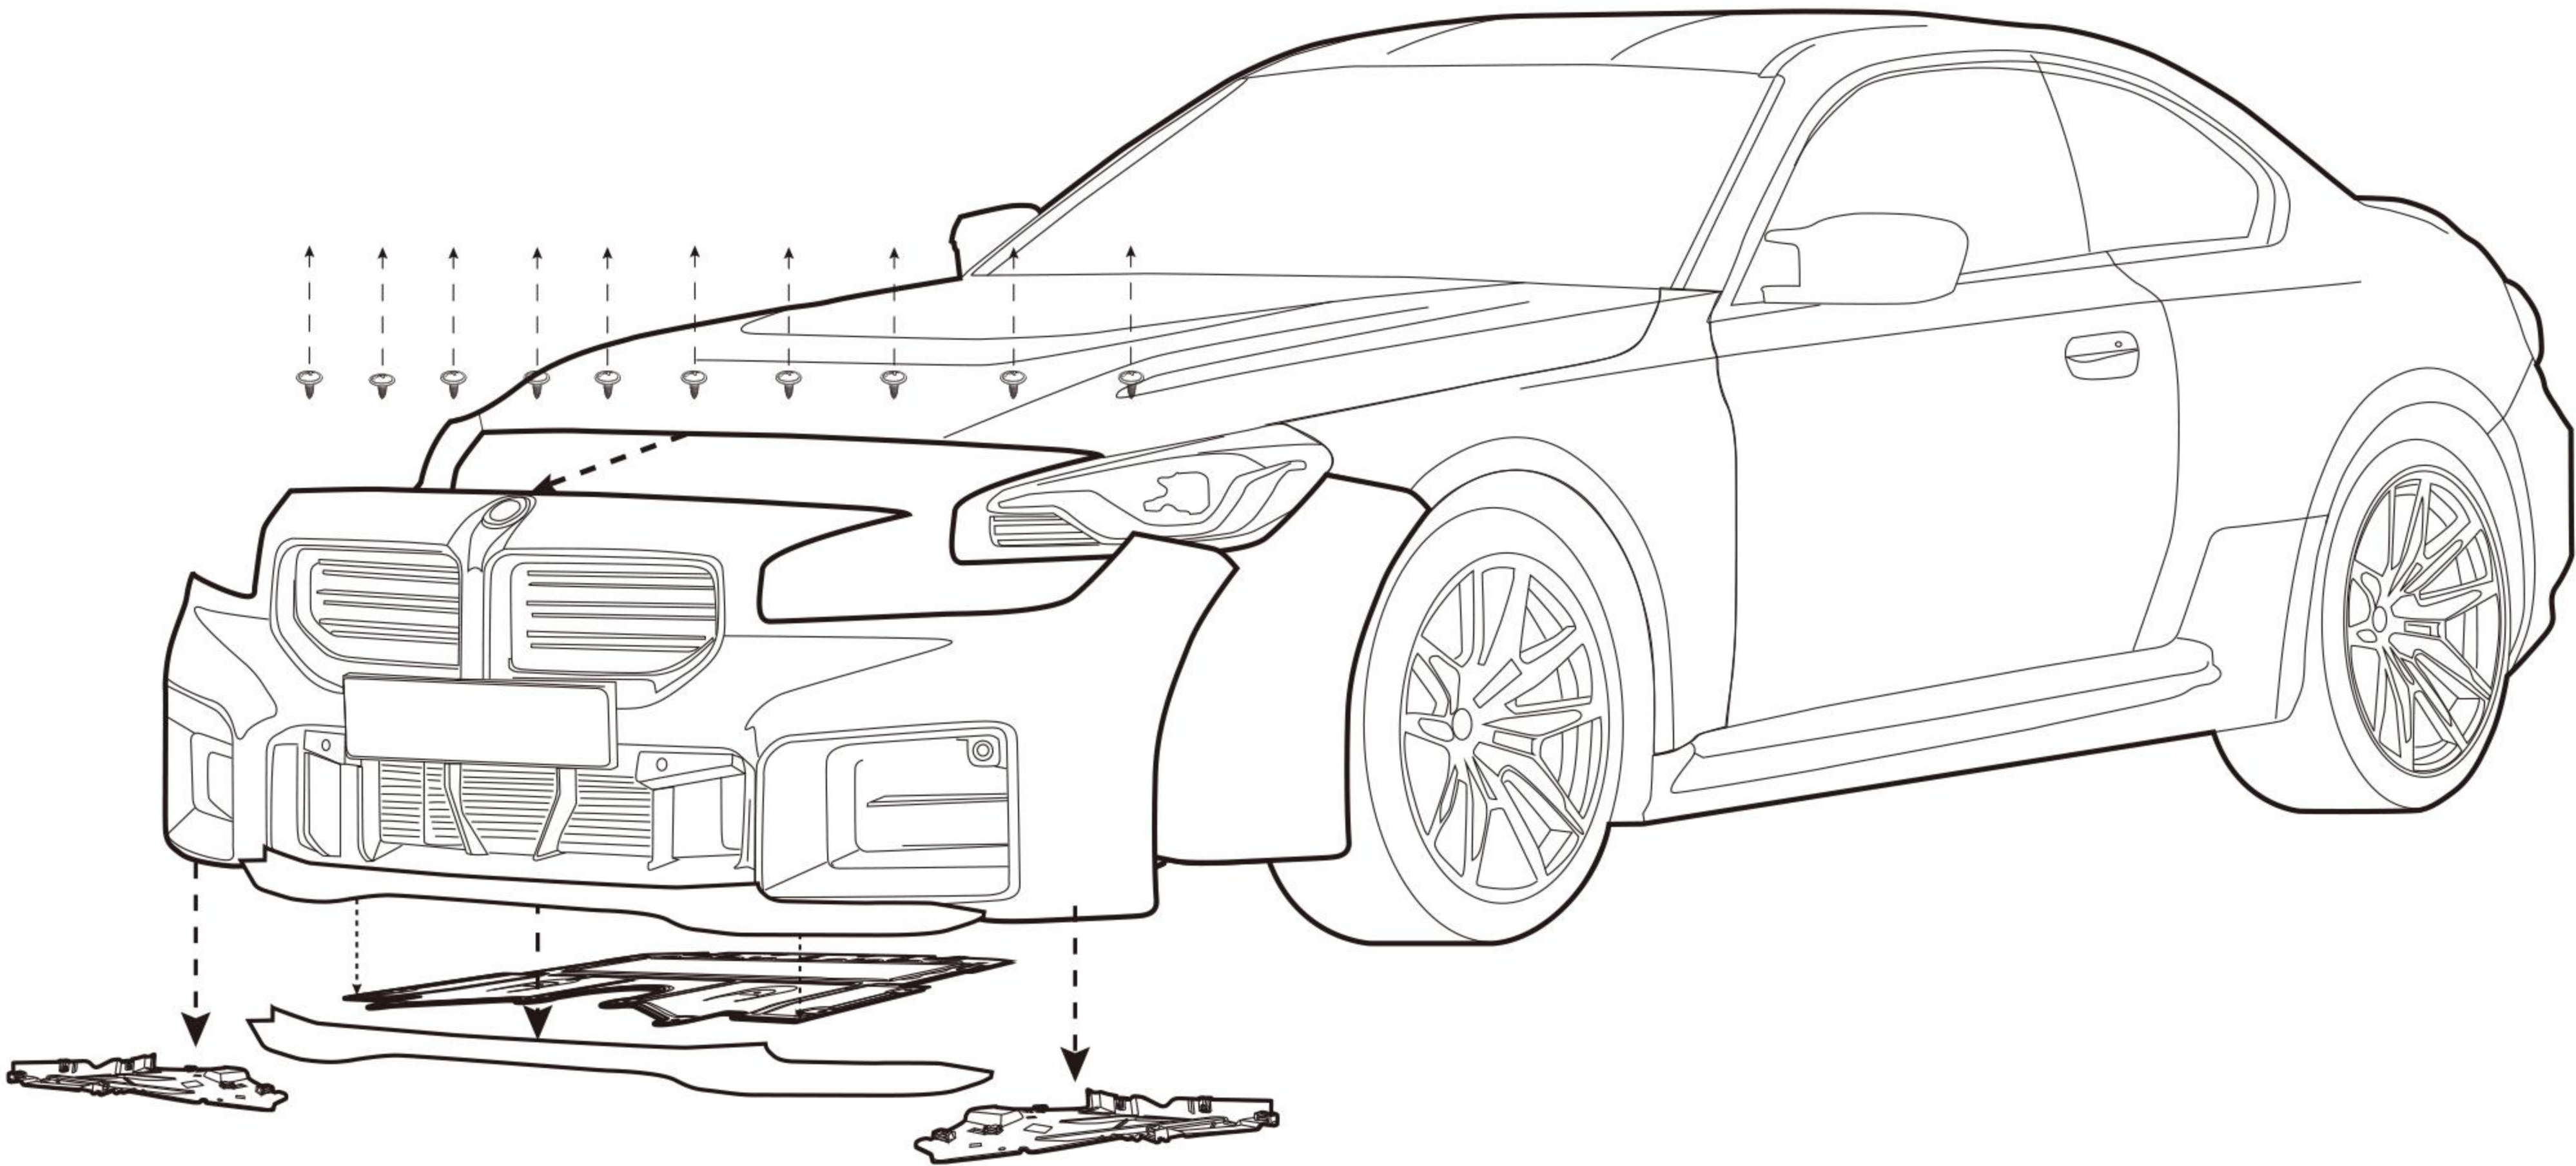


Front lip disassembly manual


Step2: Remove the lining of the left and right air inlets

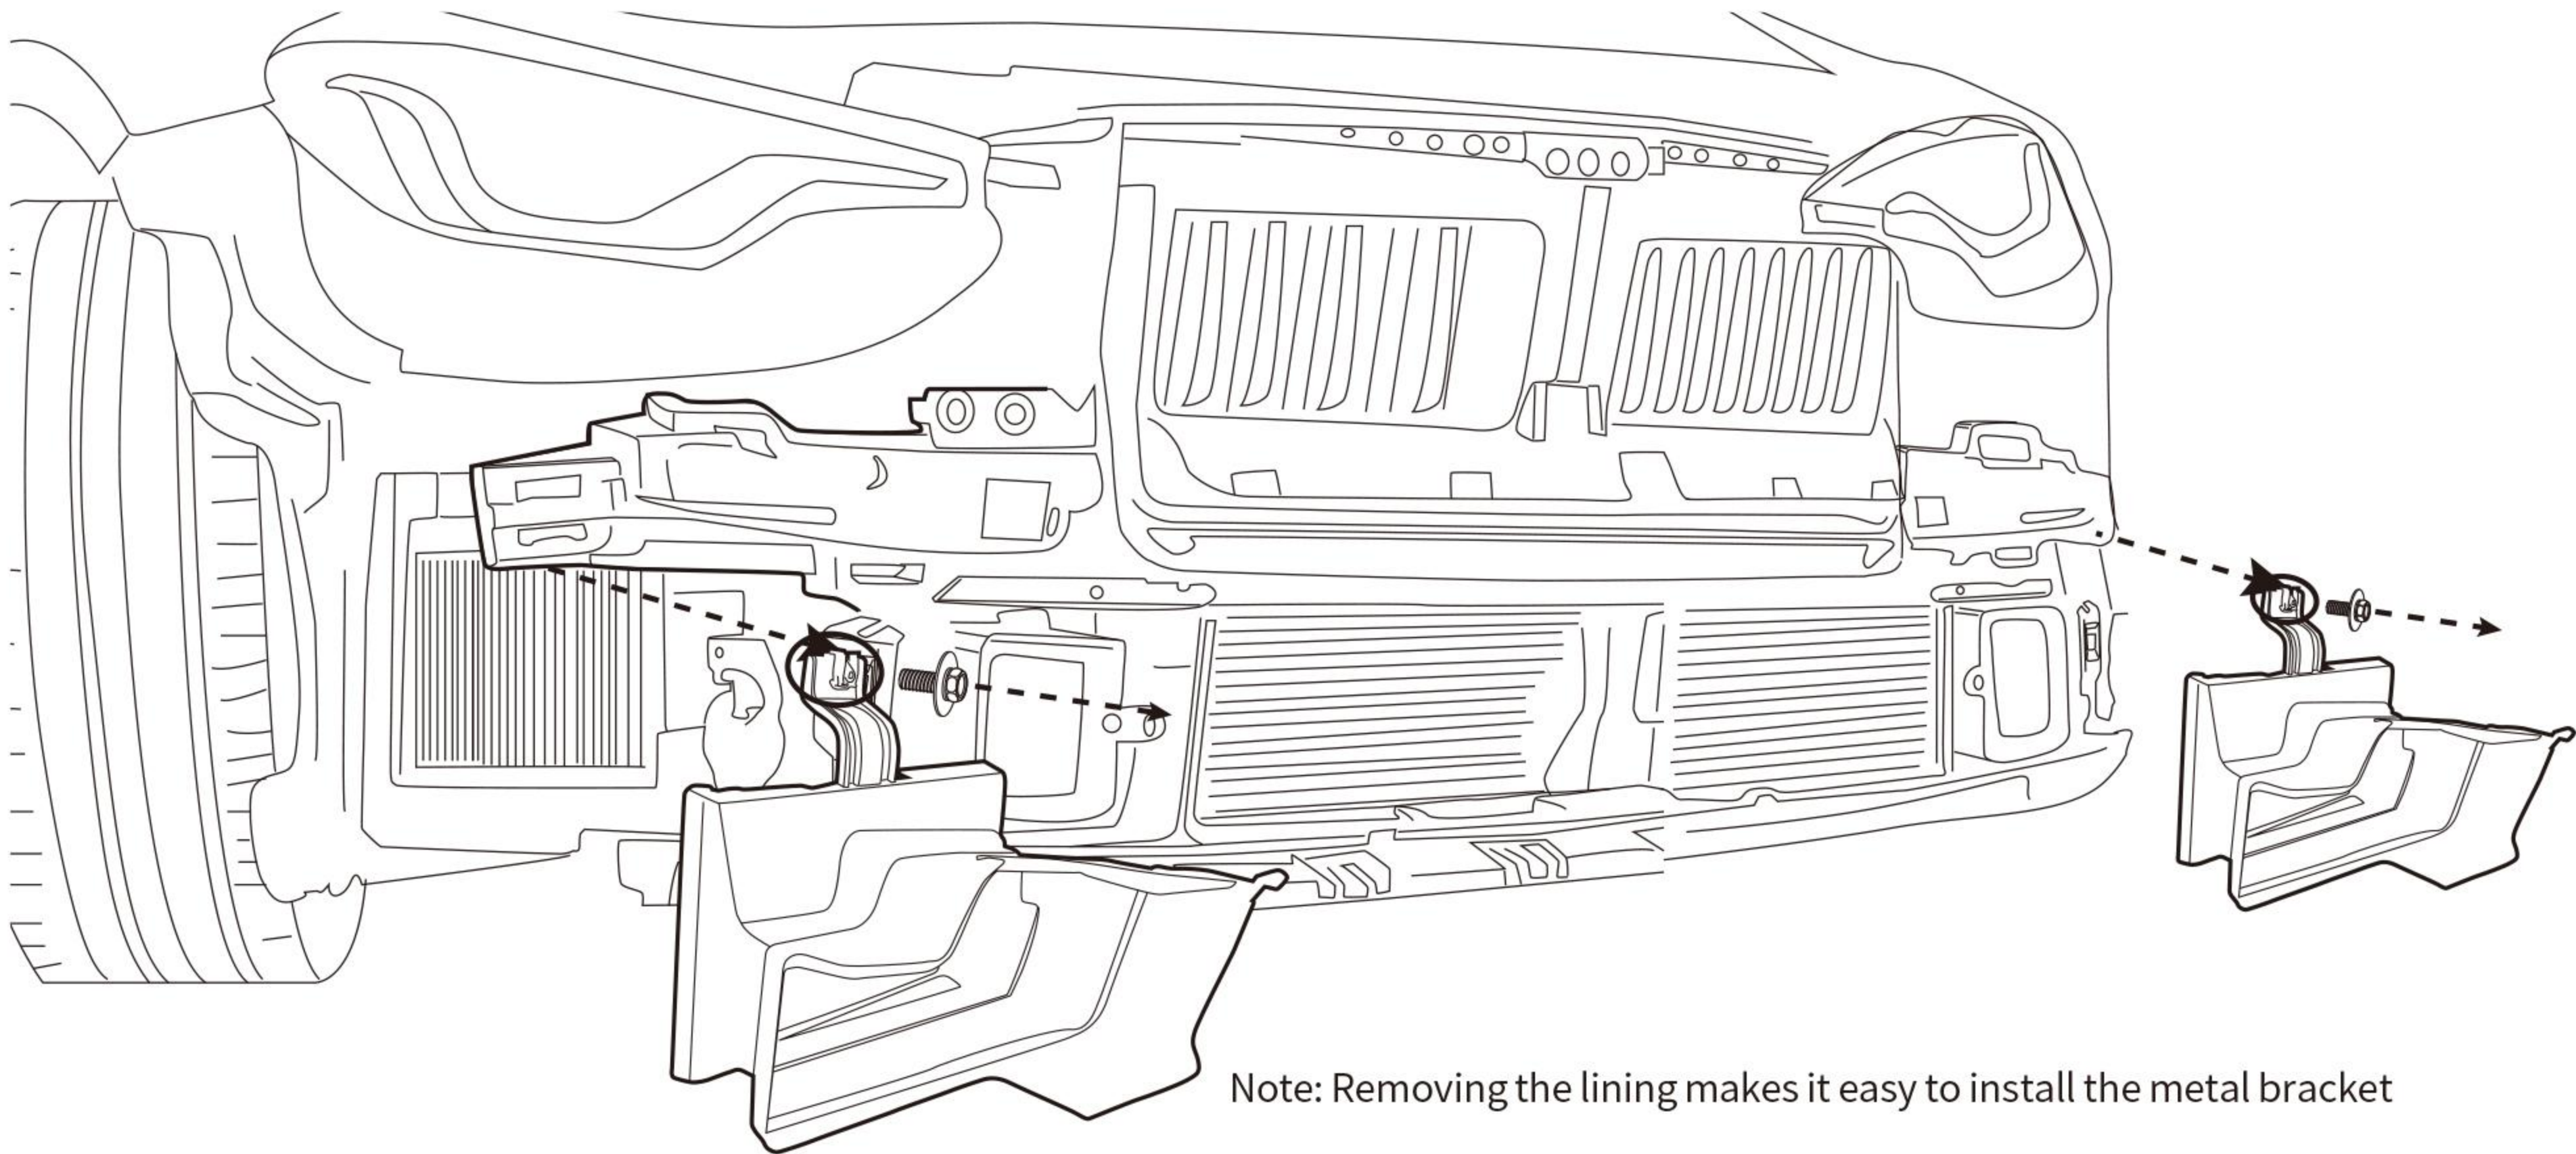

Step 1: Install the left and right metal brackets and restore the left and right air inlet linings

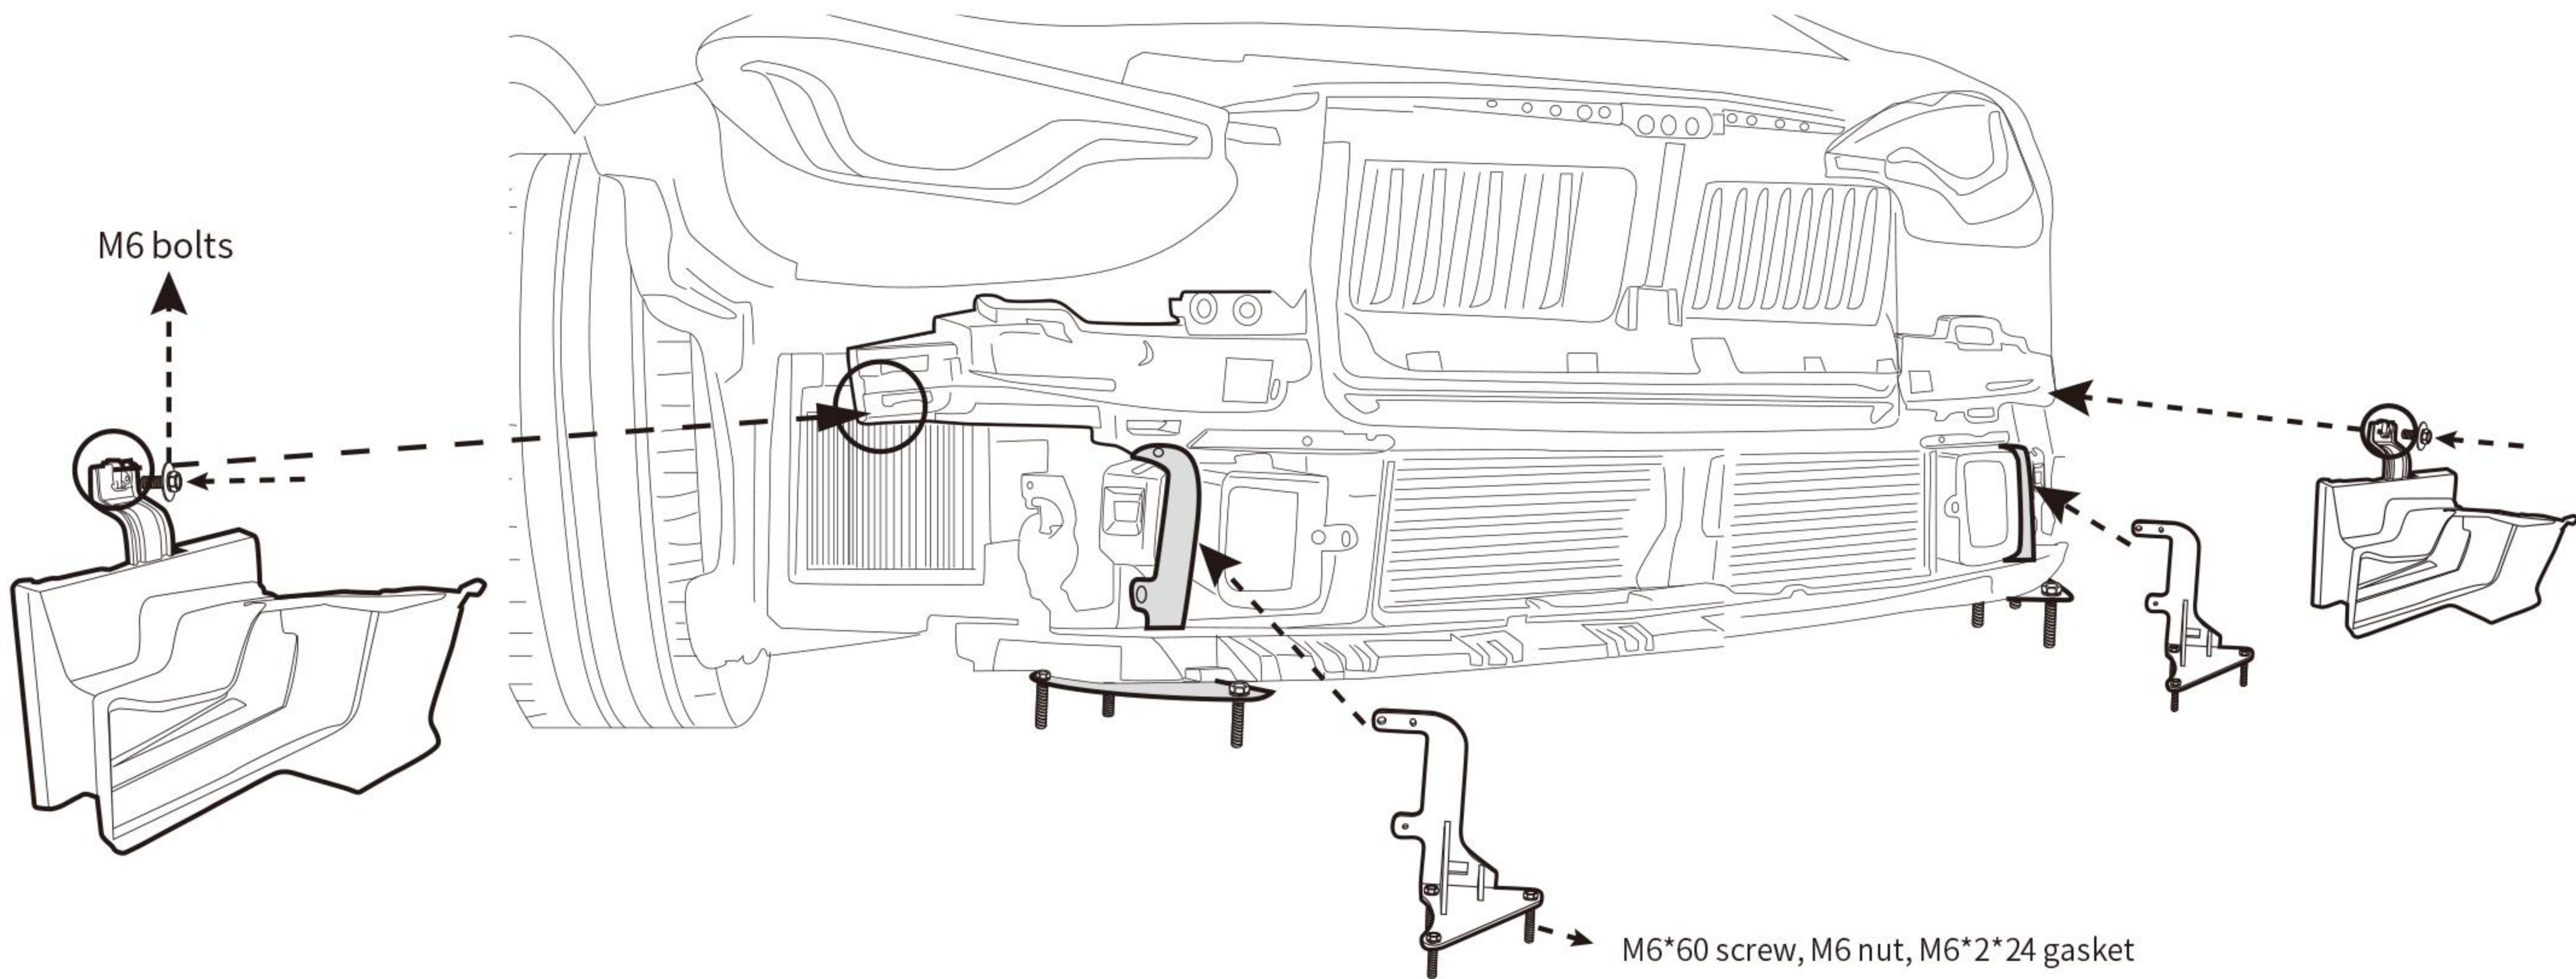


Step 2: Install the front bumper

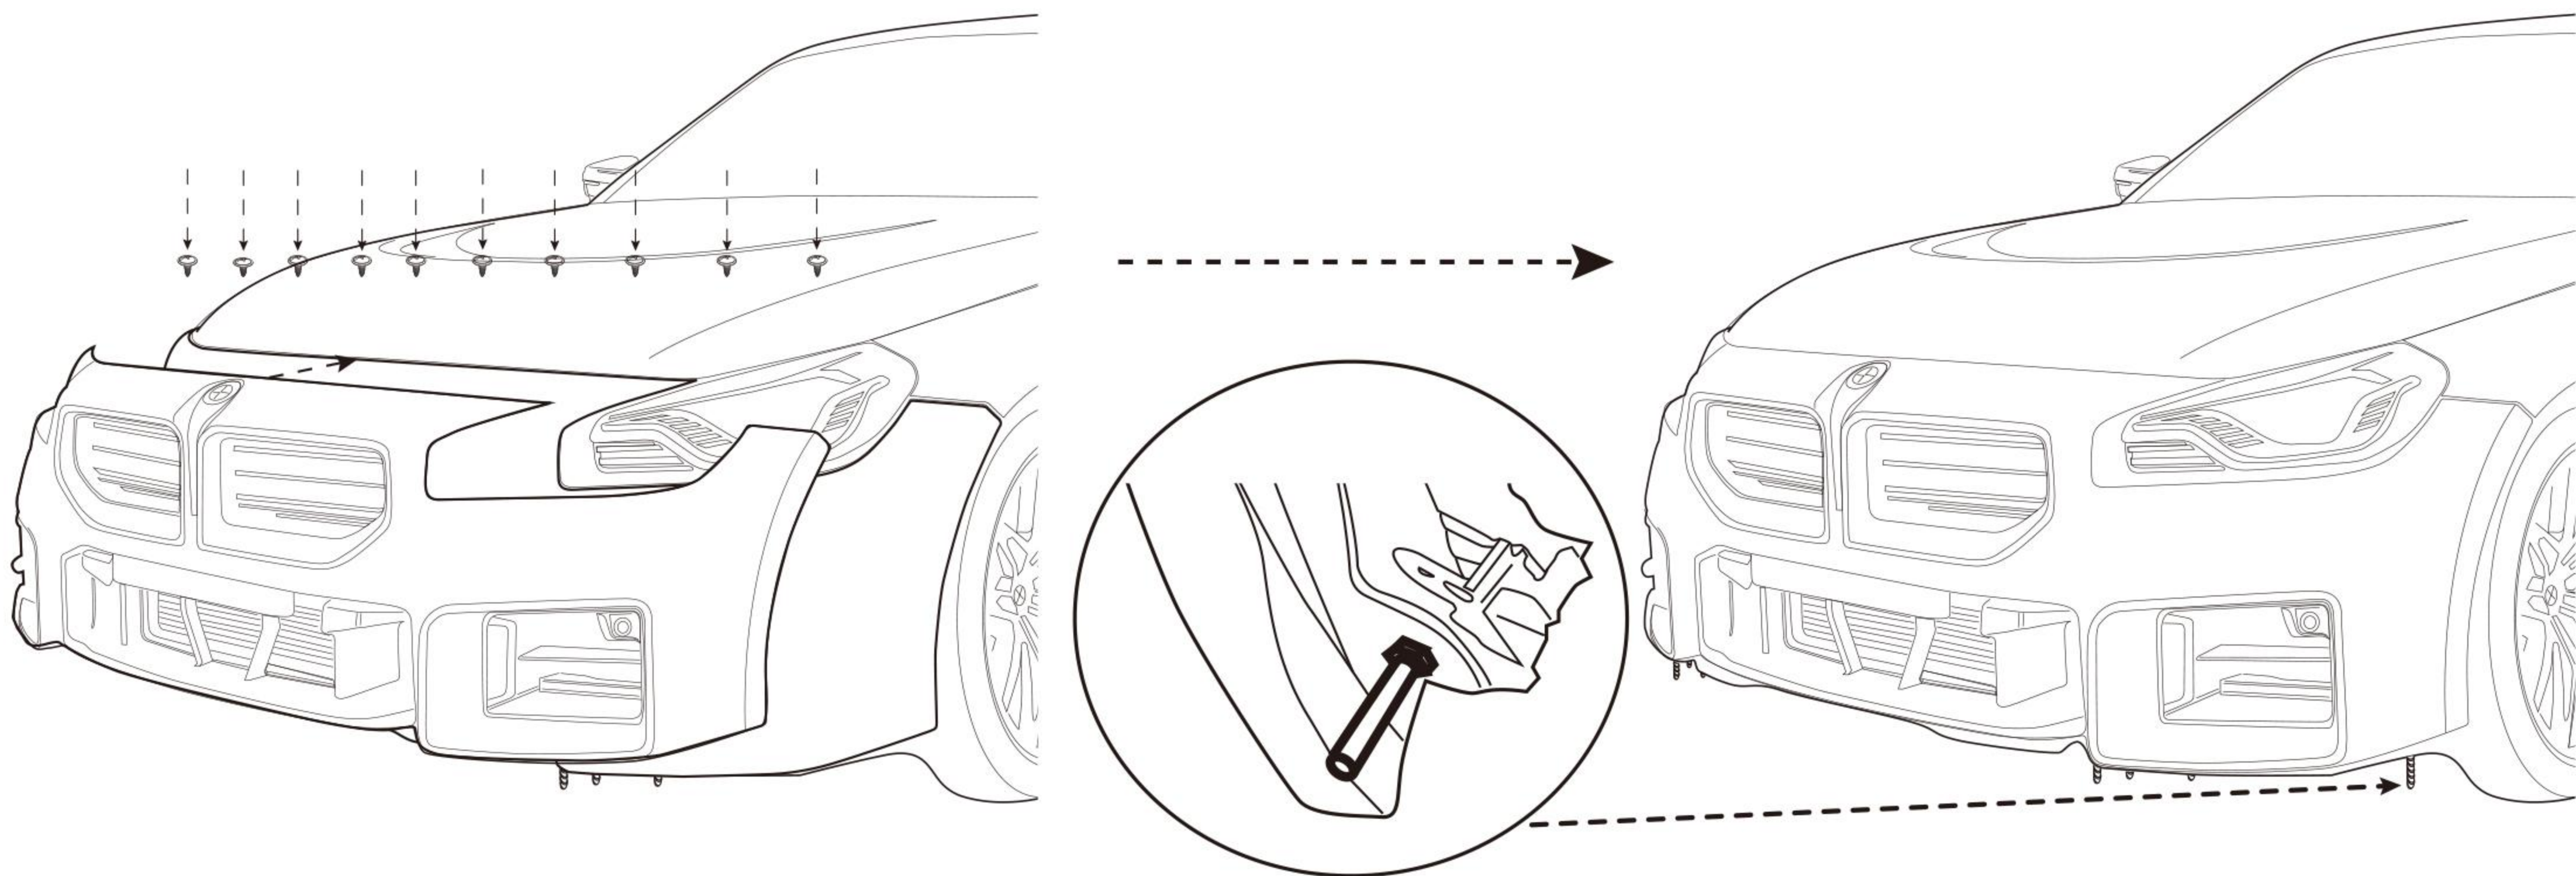

Front lip disassembly manual

Step 3: Install the small carbon fiber front lip

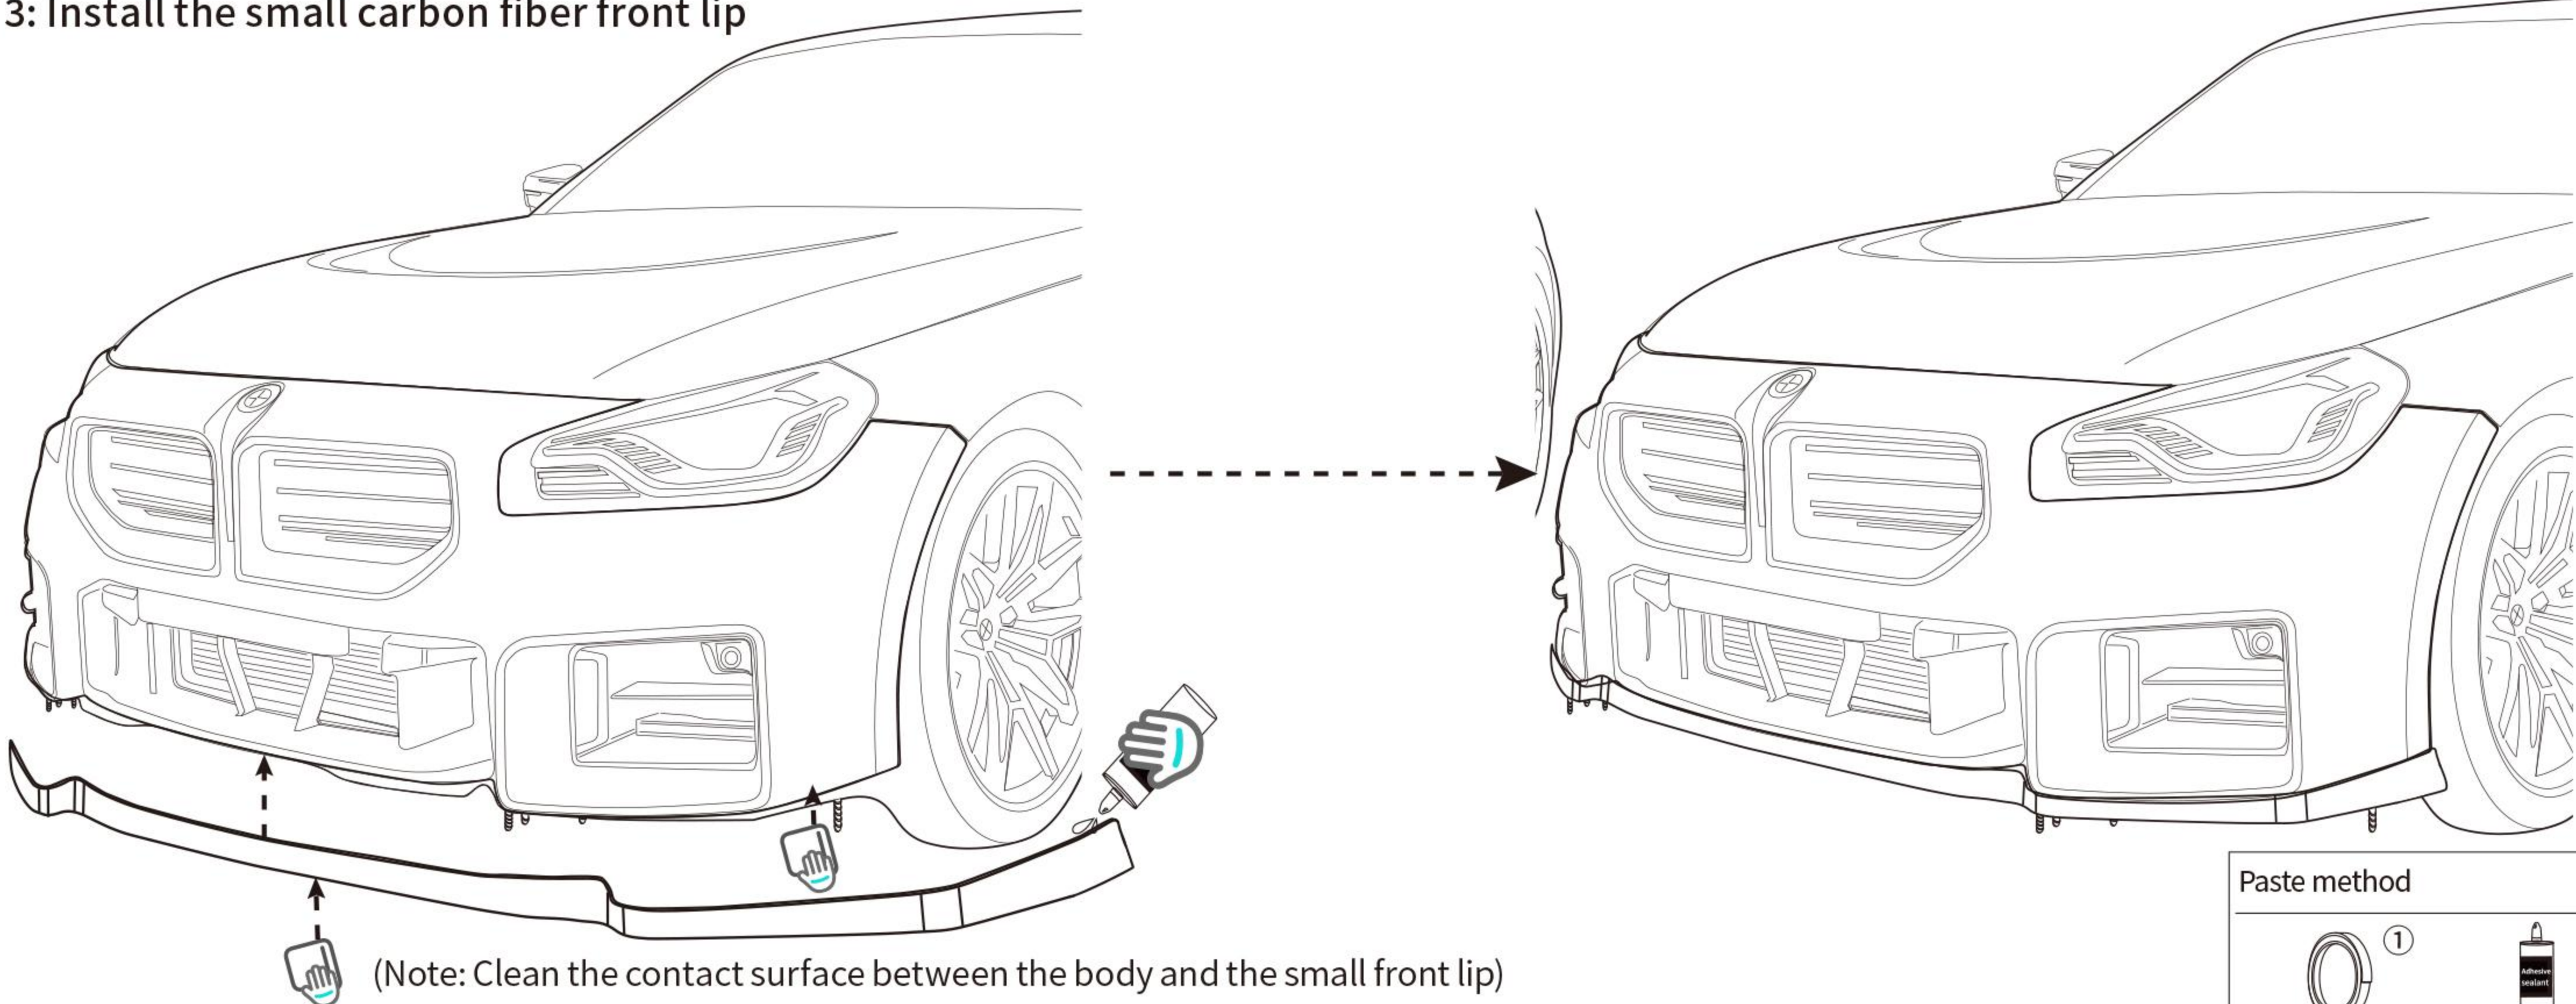

Step 4: Install the front lower plate

