


Installation Manual 安装手册

CARBON FIBER FRONT BUMPER AIR INTAKE COVERS

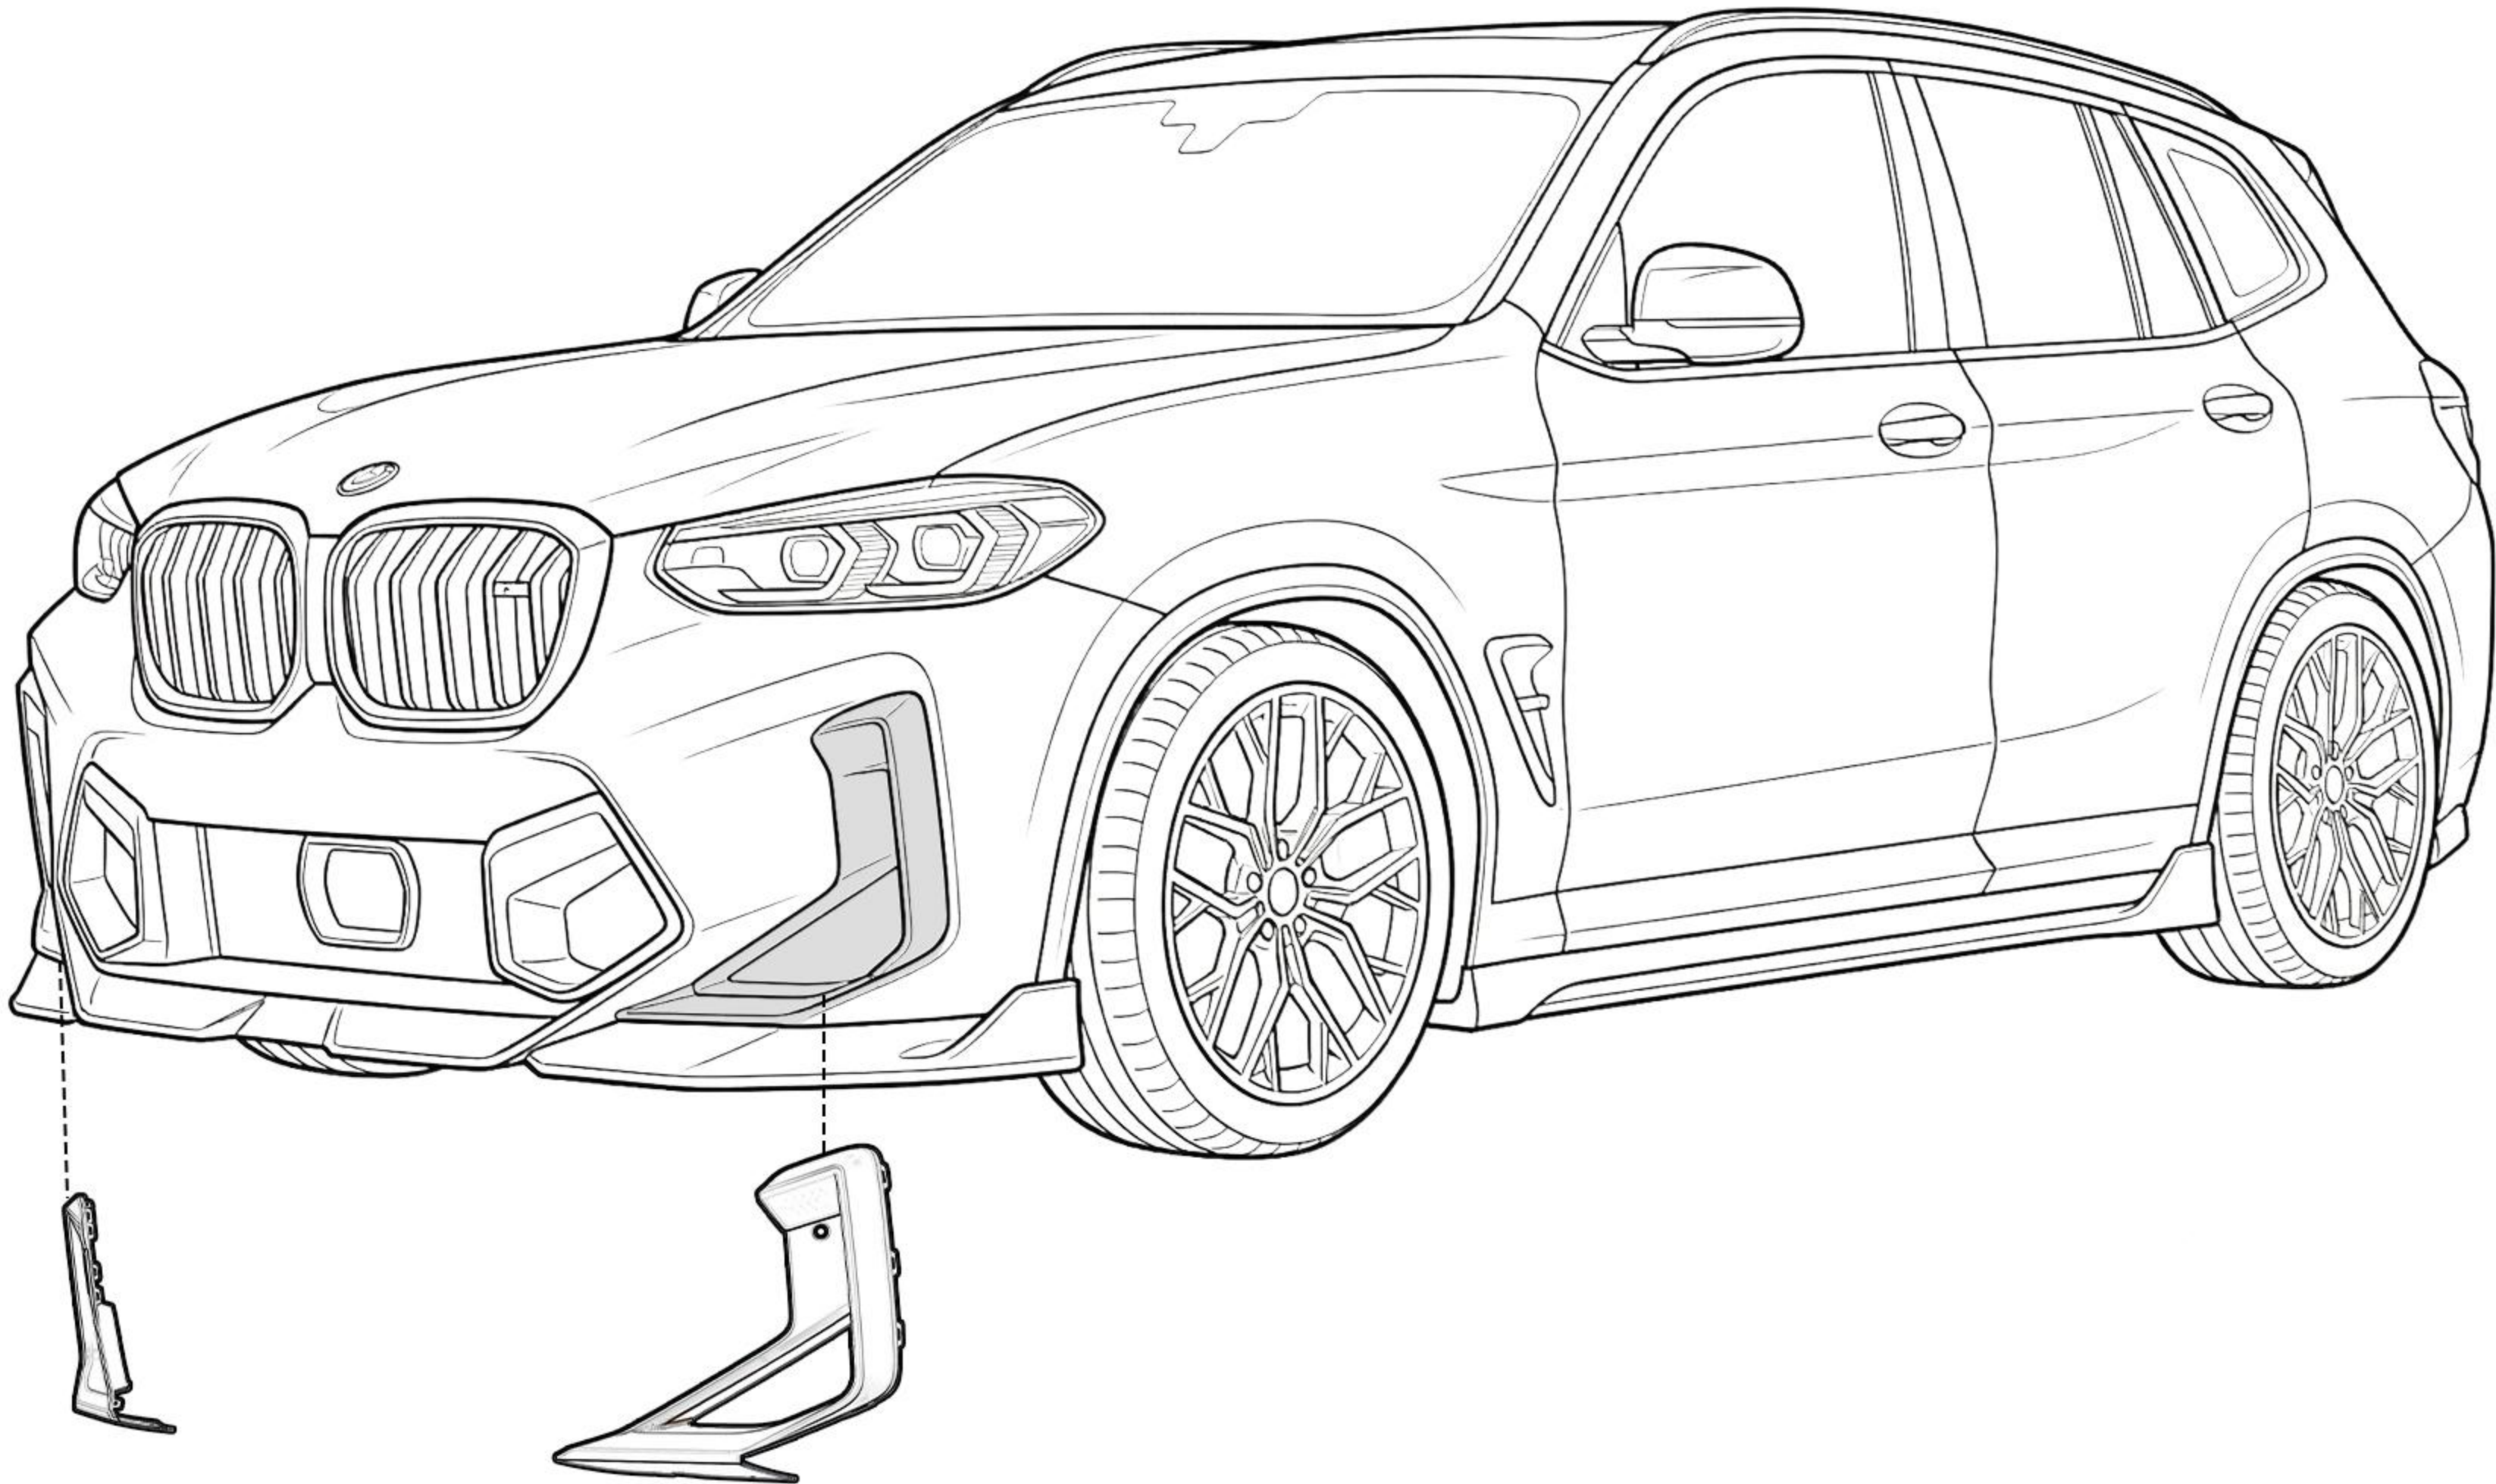


Front 前部

Carbon Fiber Front Bumper Air Intake Covers 碳纤维侧风口


- ① Remove the original side air intake cover.
  - ② Install the carbon fiber side air intake cover directly onto the car. (the same installation method as the original side air intake cover)
  - ③ Secure the side air intake cover using the original screws and plastic clips.
- ① 拆下原车侧风口。  
② 将碳纤维侧风口直接安装到车上（与原厂侧风口安装方式一致）。  
③ 使用原车螺丝和塑料卡扣进行固定。

All Components 所有组件

Carbon Fiber Front Bumper Air Intake Covers X2 碳纤维侧风口

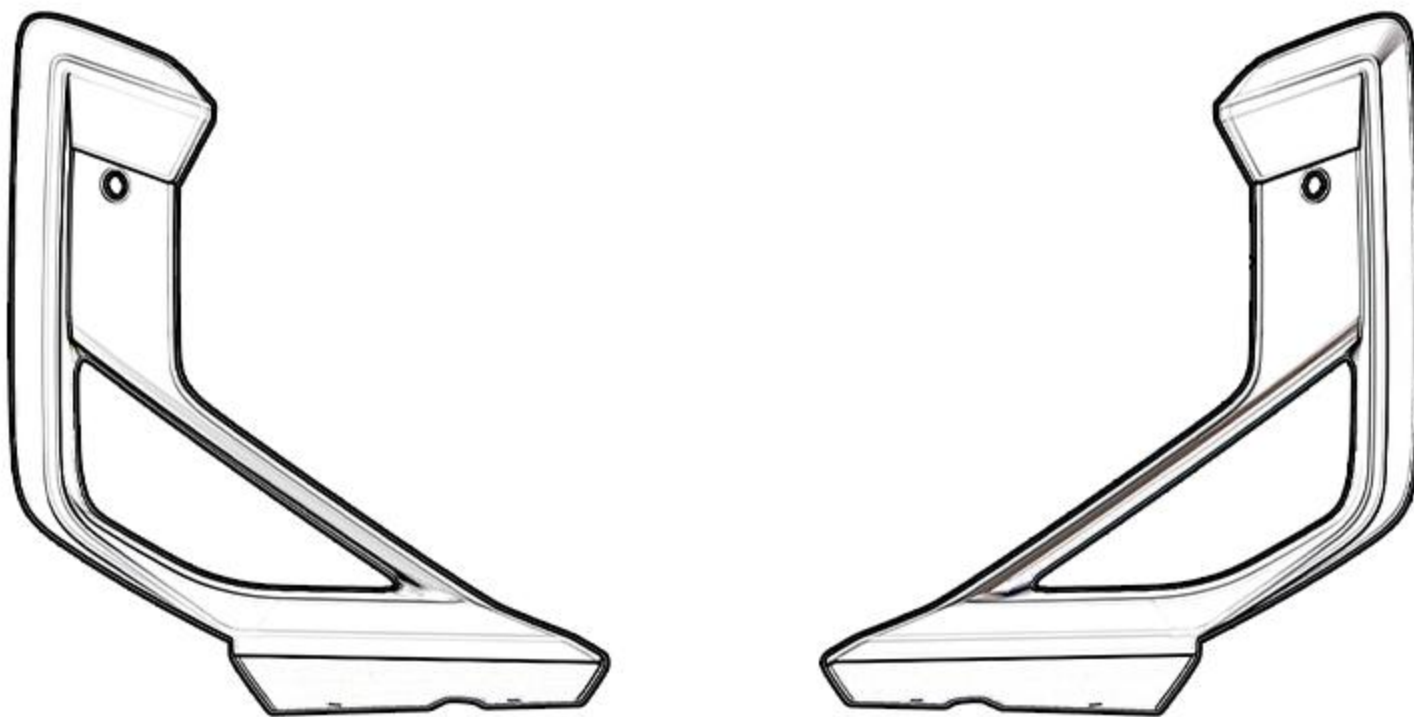

Install Points 安装点

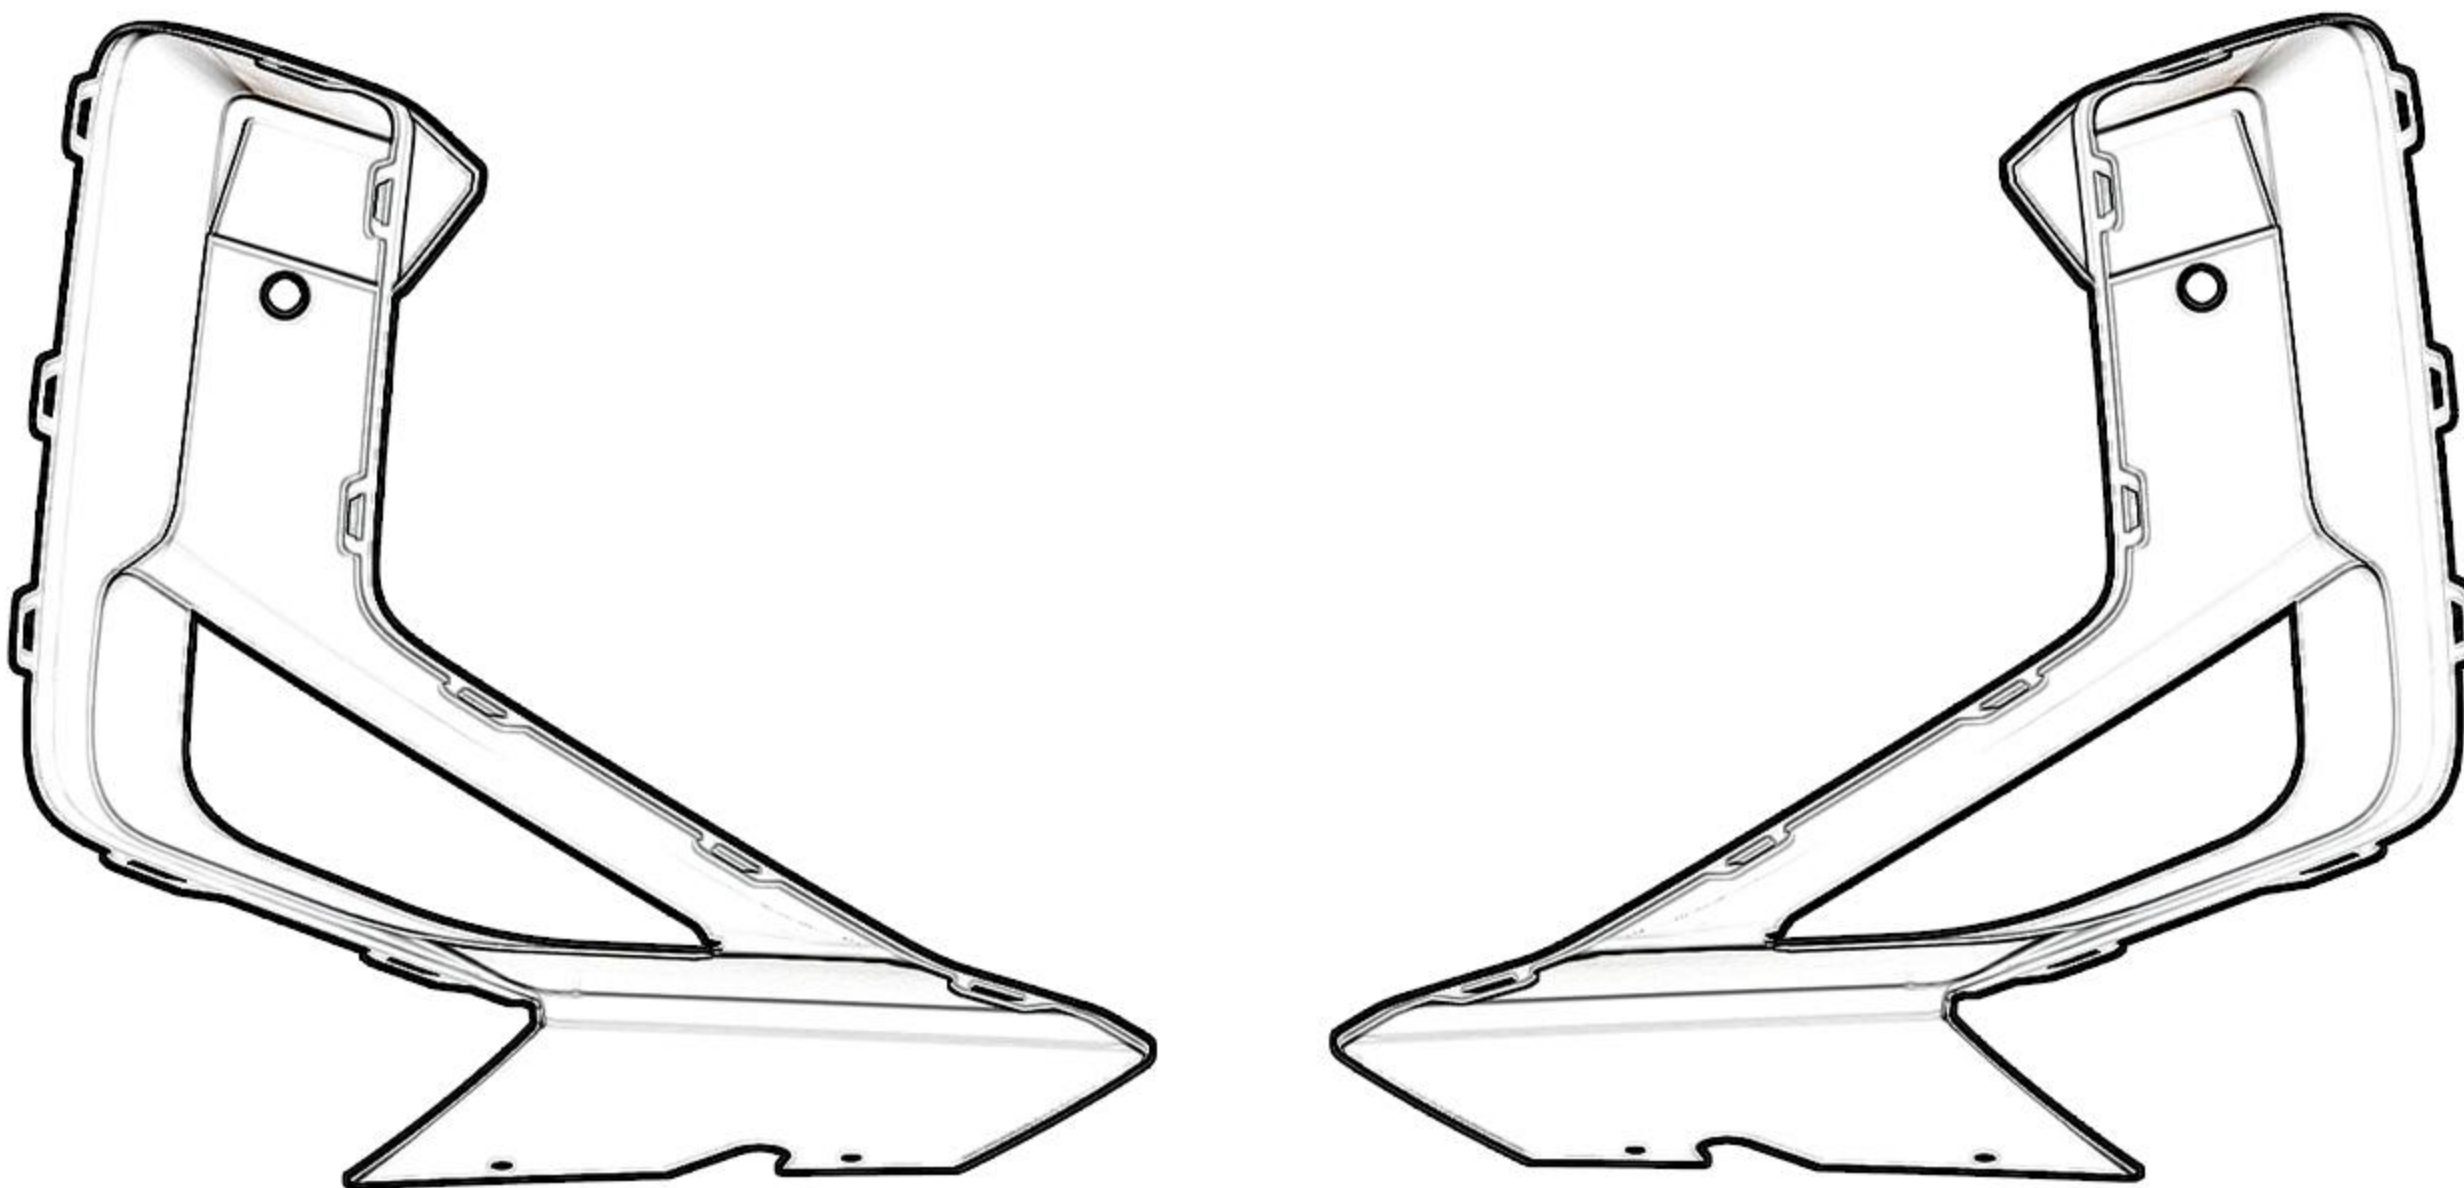

The edges are secured using the original factory clips and mounting points.

边缘使用原厂卡扣与安装位卡紧