
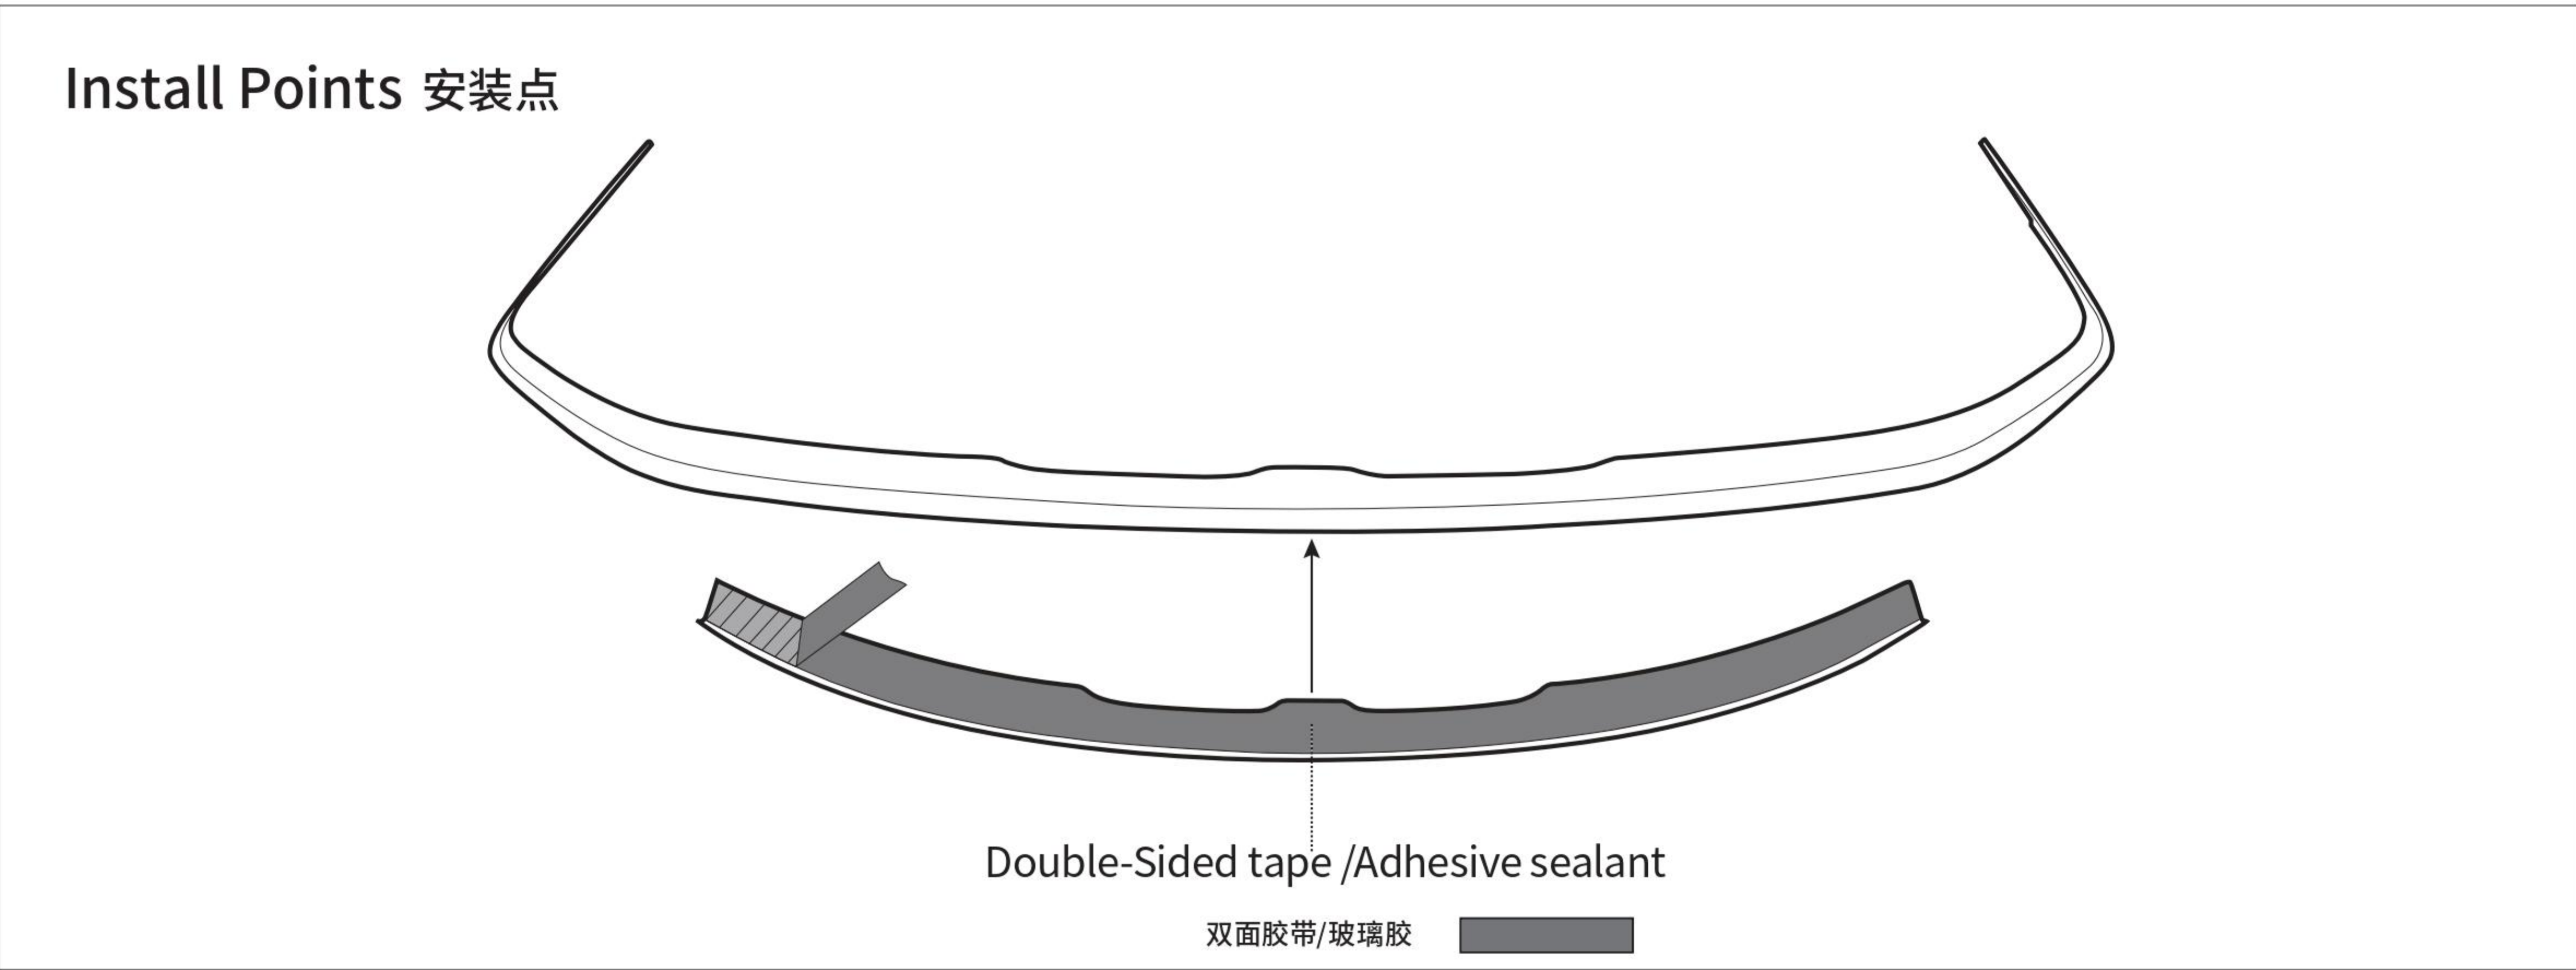


Installation Manual 安装手册

FRONT BUMPER AIR INTAKE TRIM

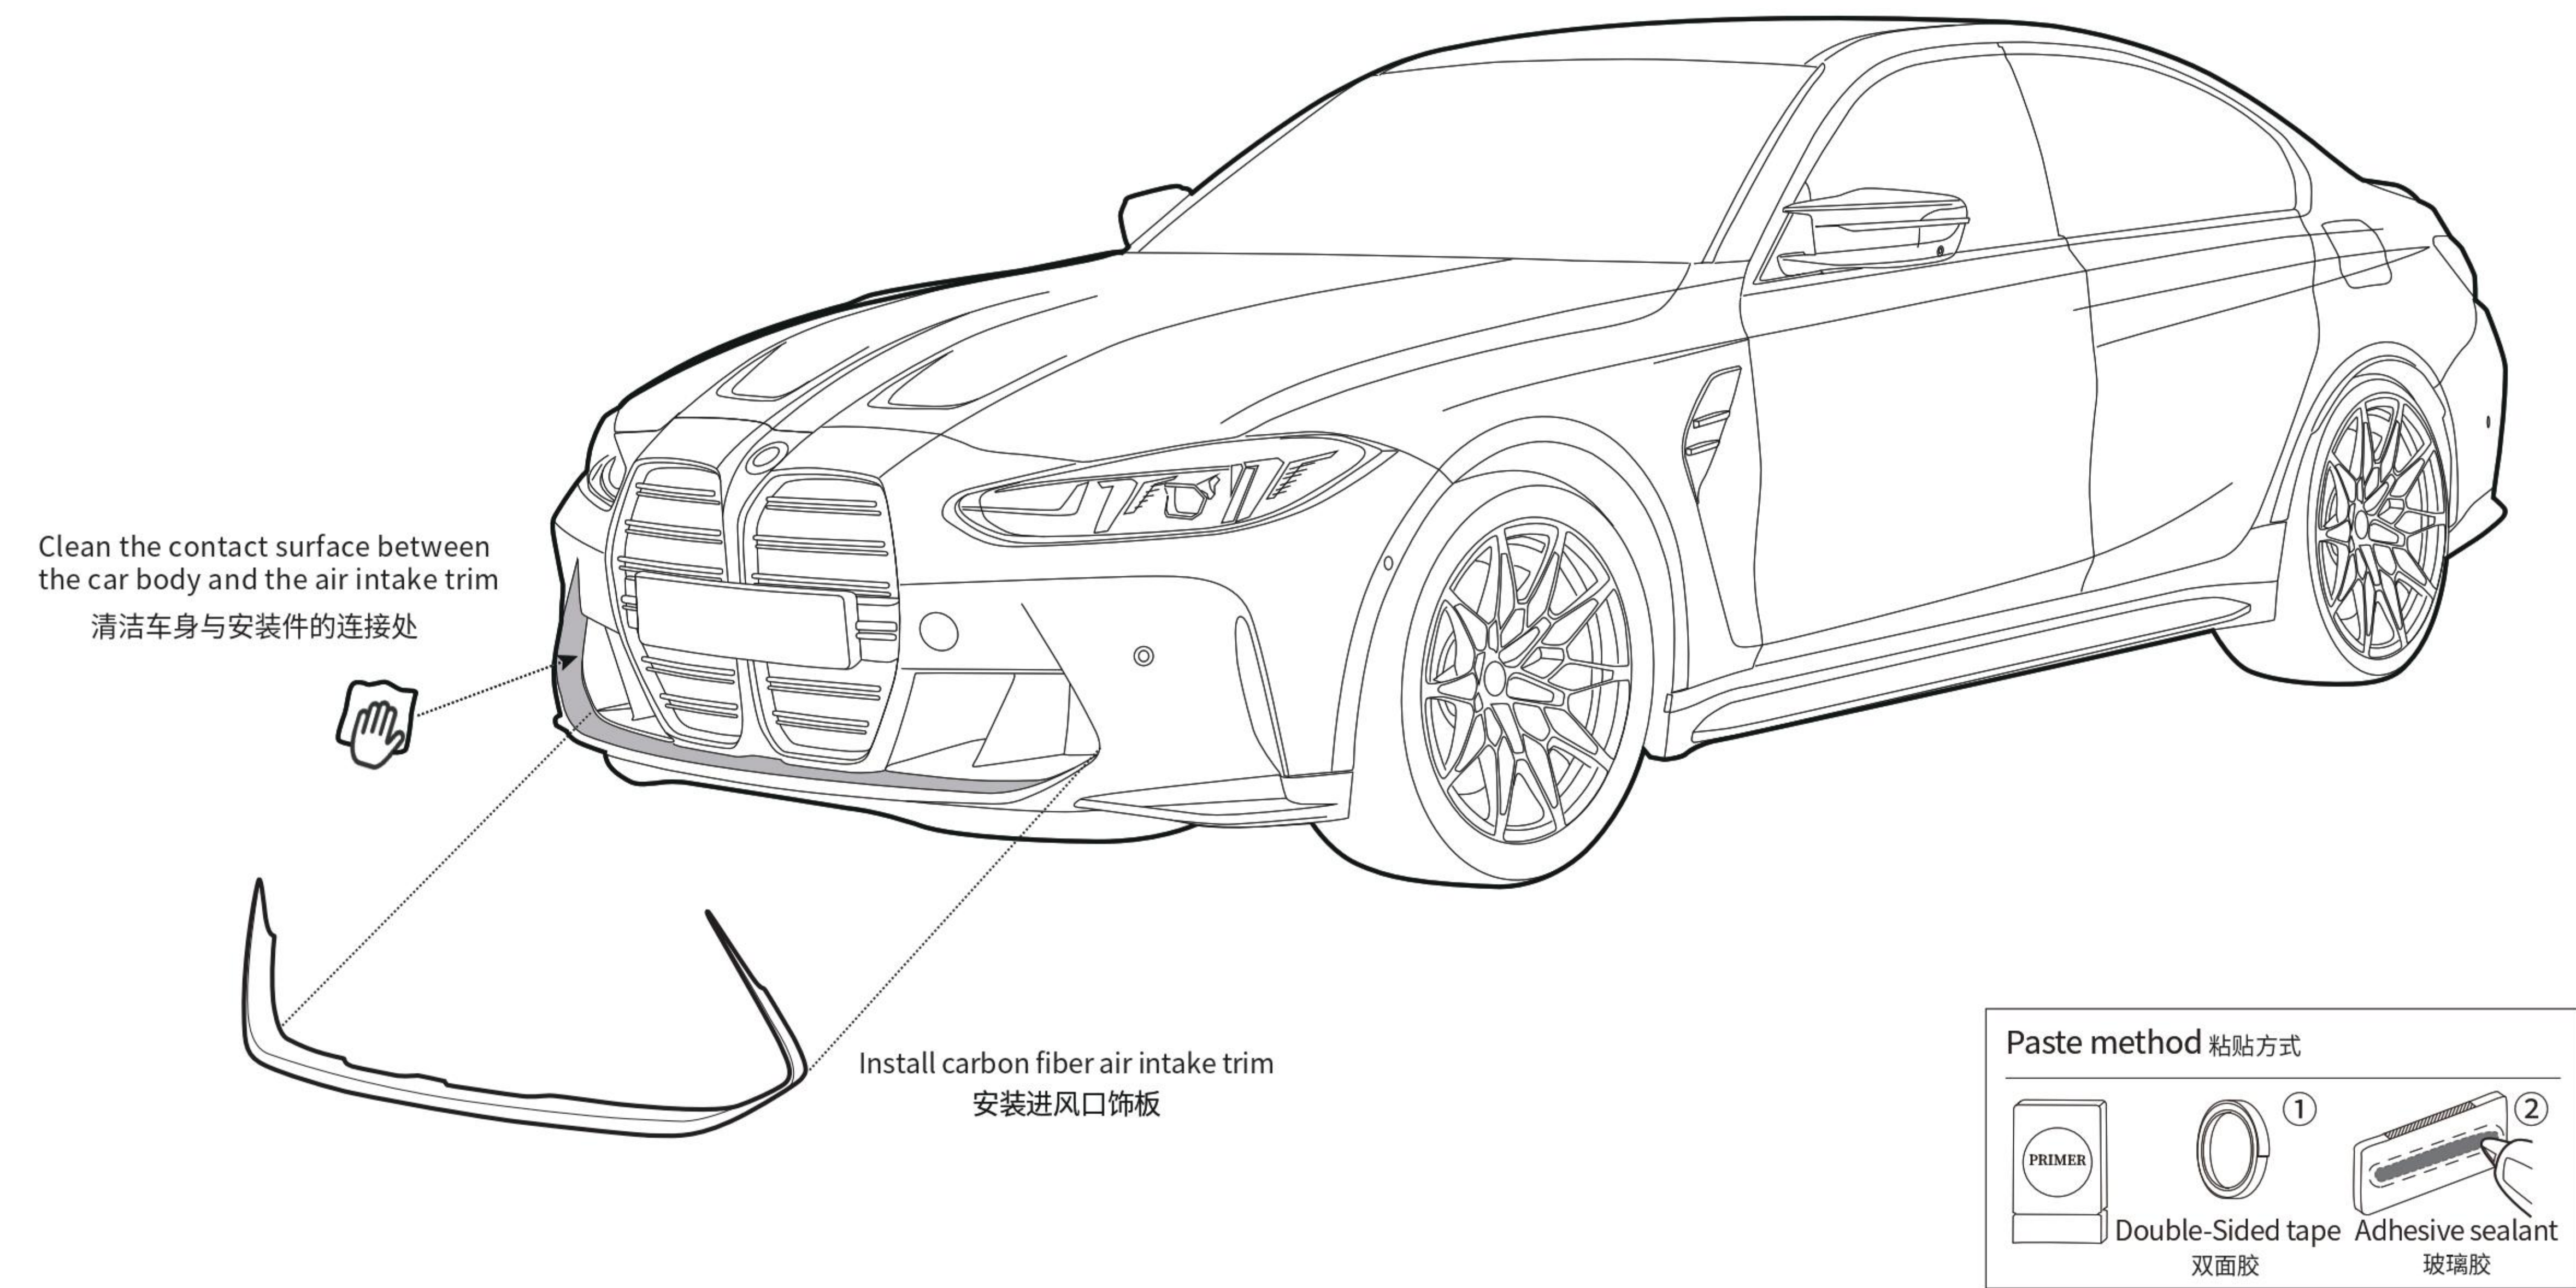

Front 前部

Front bumper air intake trim 前保险杠进风口饰板

① Clean the contact surface between the bumper and the trim, then stick the carbon fiber trim to the bumper.
(Note: 3M glue/glass glue, choose one)

① 清结保险杠与饰板粘贴接触面的地方，然后将碳纤饰板粘贴到保险杠上。
(注：3M胶/玻璃胶粘，二选一)

All Components 所有组件

x1 Front bumper air intake trim
前保险杠进风口饰板

Double-Sided tape/Adhesive sealant
双面胶带/玻璃胶
3M™VHB 4910 (10mm)