

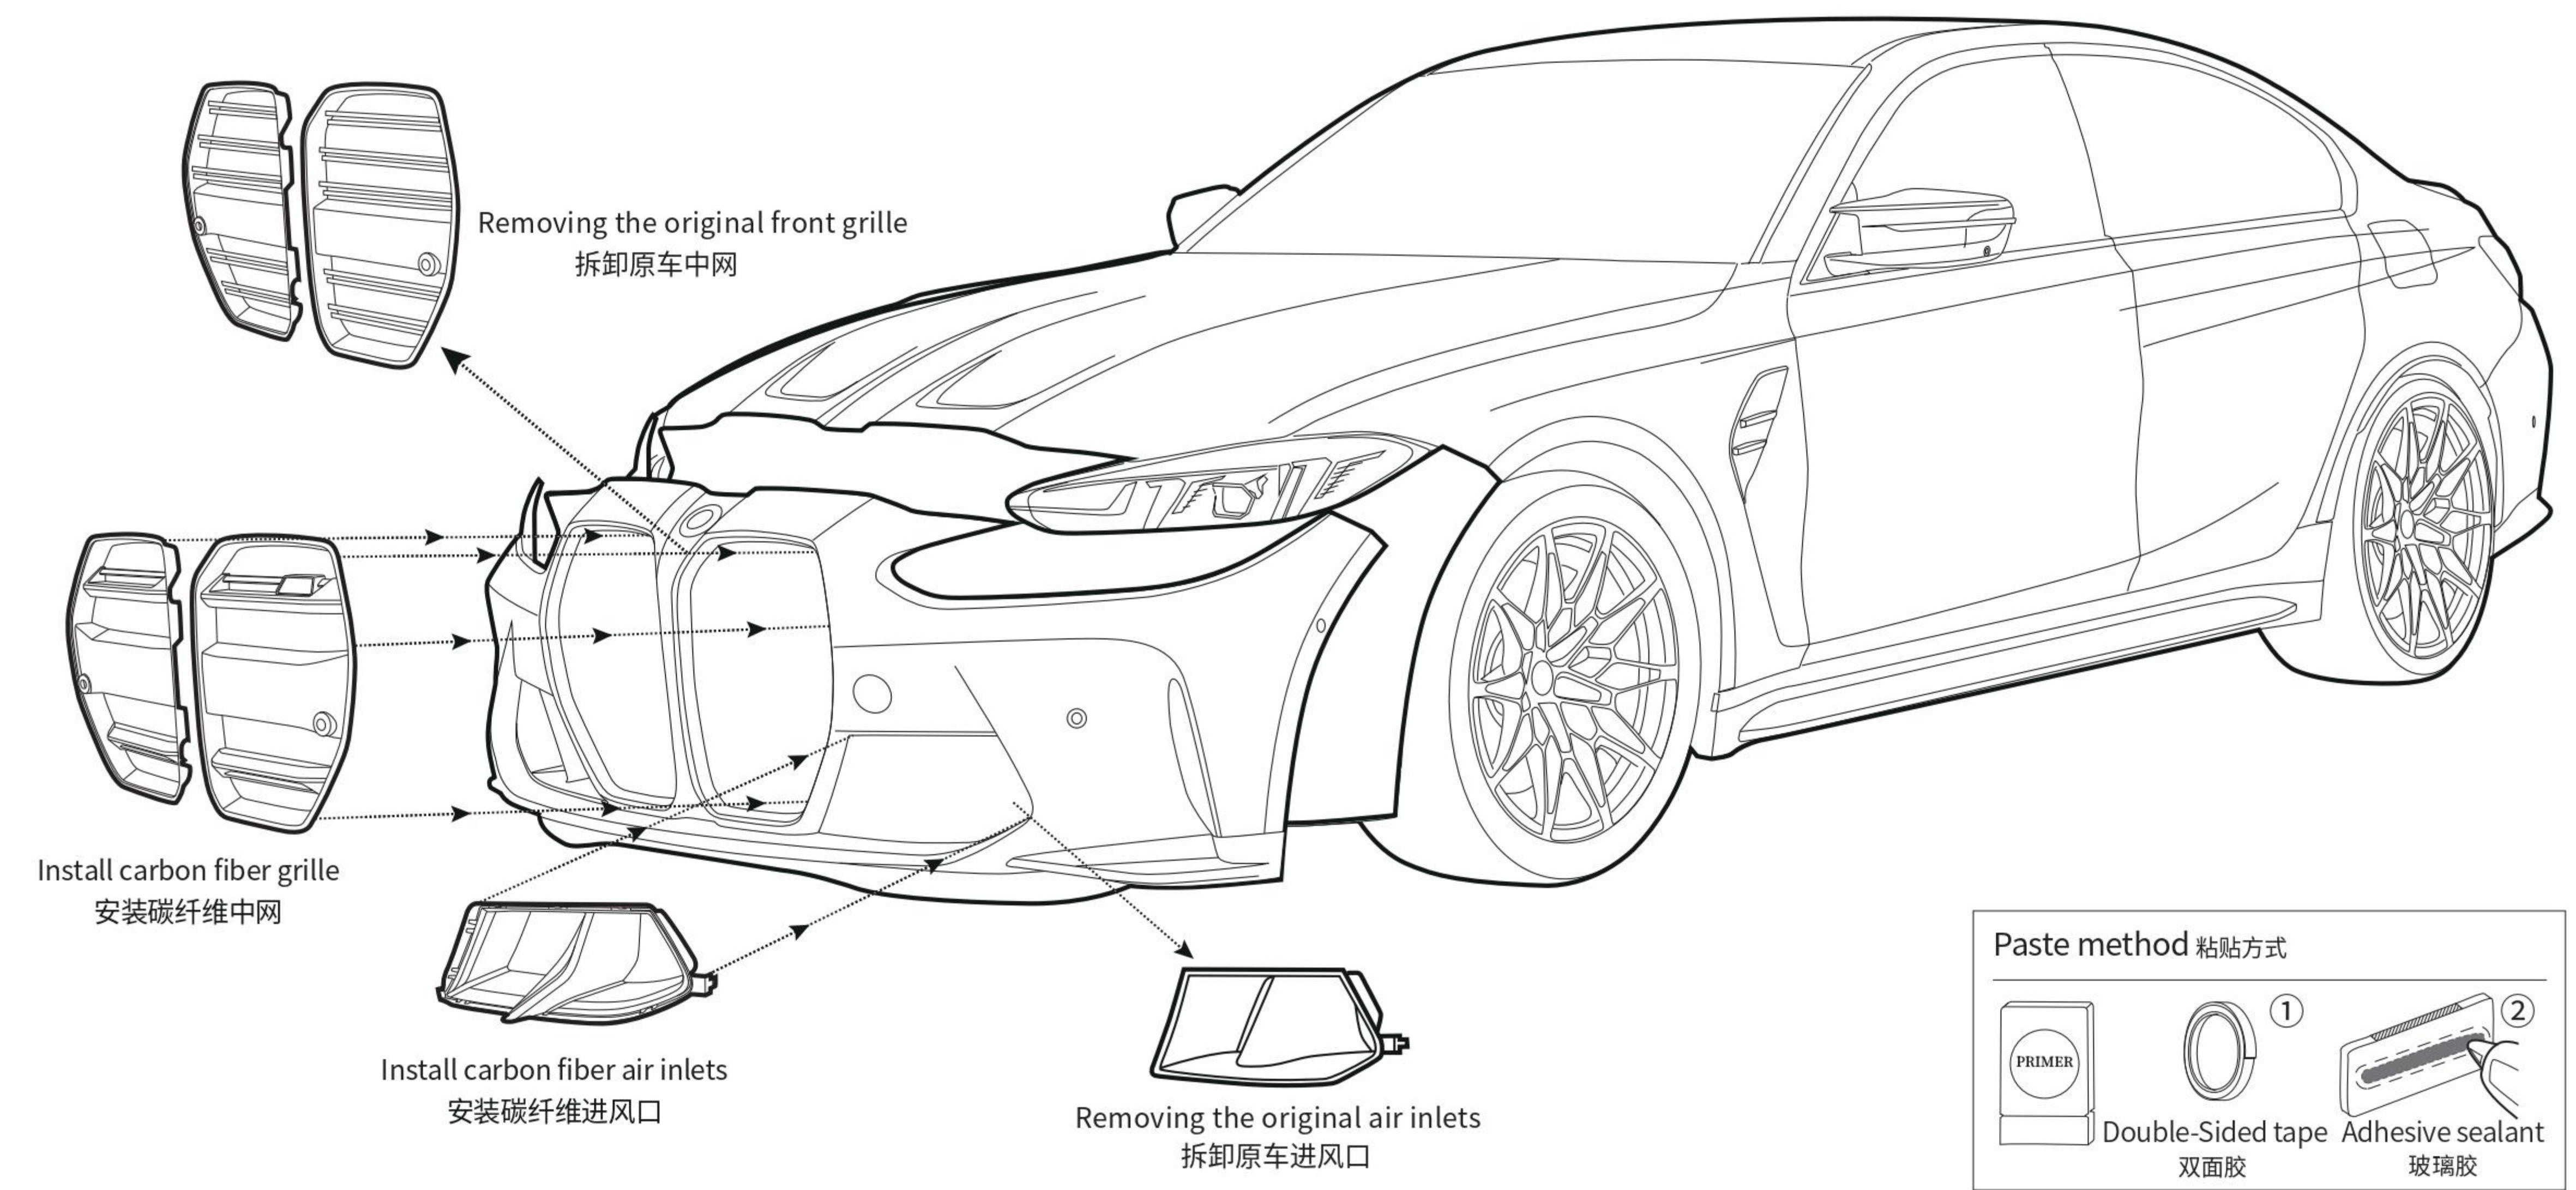


Installation Manual 安装手册

CARBON FIBER GRILLE AND LEFT AND RIGHT AIR INLETS

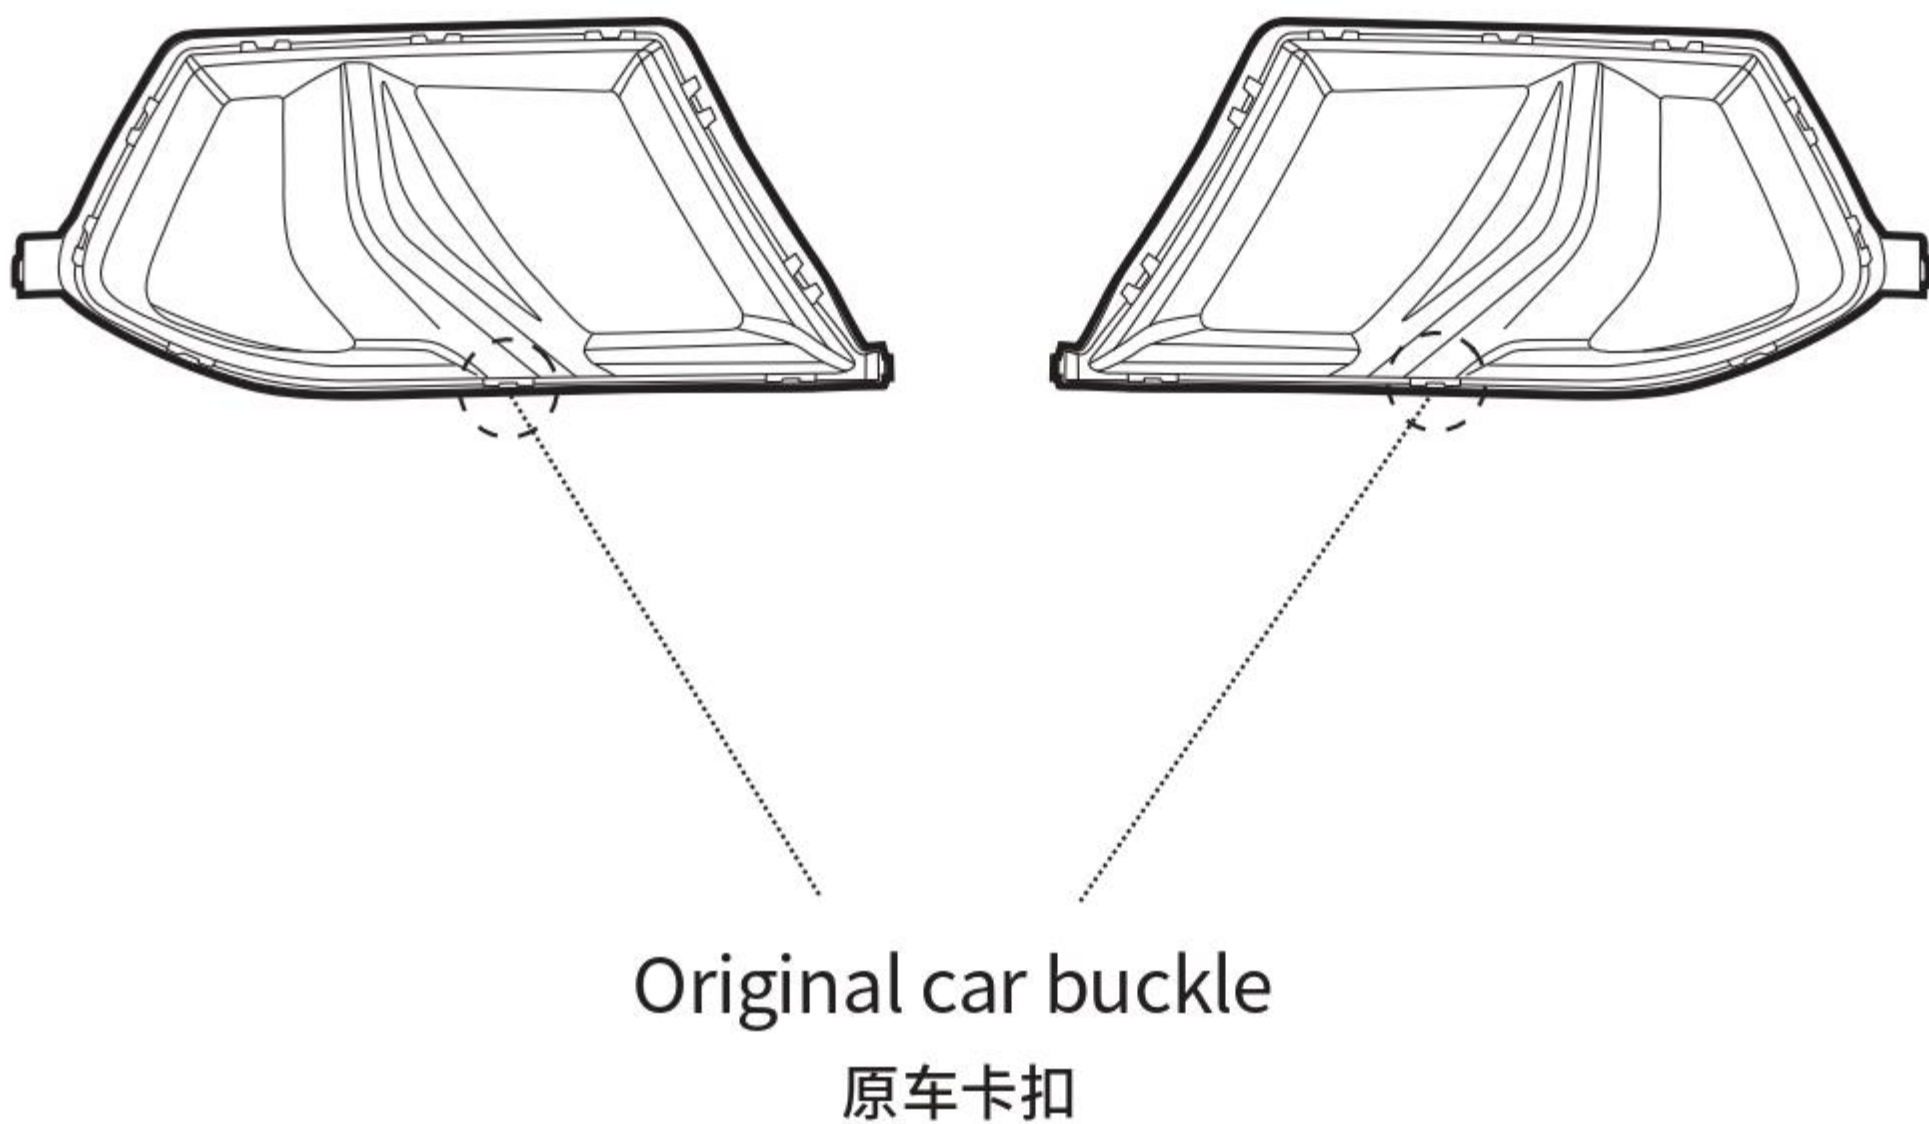

Install Points 安装点

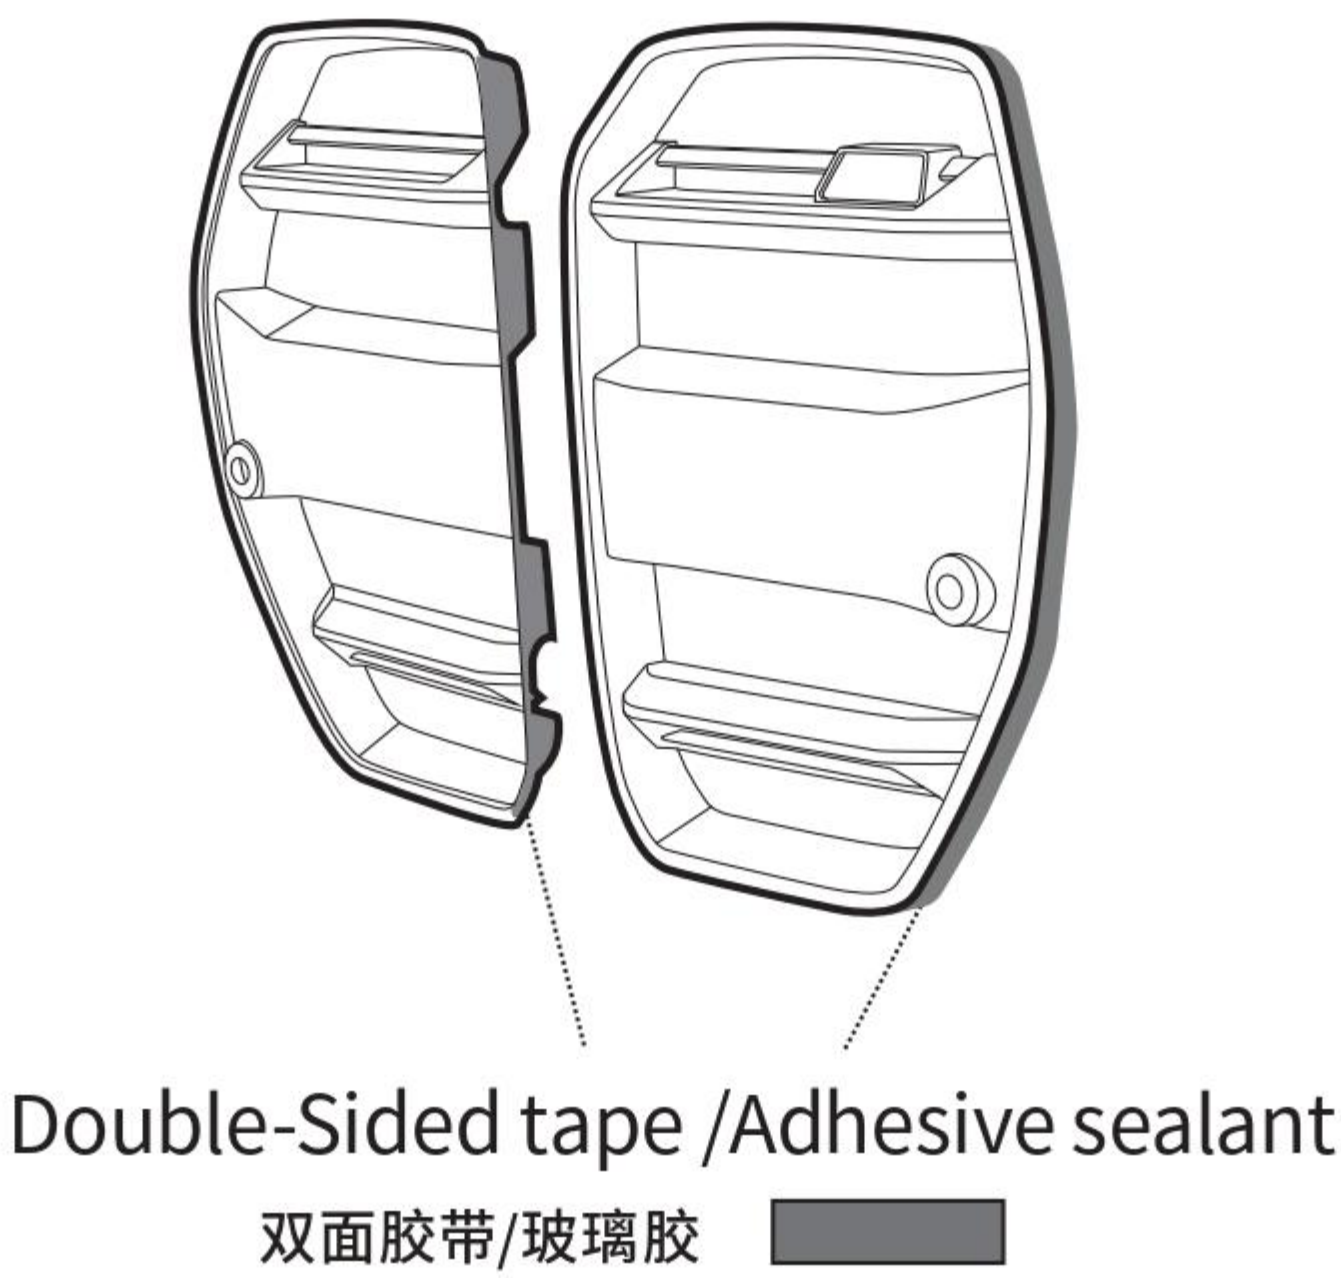


Front 前部

Carbon fiber grille and left and right air inlets 碳纤维中网及左右进风口

- ① Remove the front bumper and remove the original car grille and left and right air vents.
 - ② Clean the contact surface between the bumper and the center grille, and then stick the carbon fiber center grille to the bumper.
(Note: the middle part needs to be glued with 3M glue/glass glue, choose one of the two).
 - ③ Install it on the car, securing the bottom with the original car screws and plastic clips.(Snap-on fixing)
 - ④ Install the bumper back on the car.
- ① 拆下前保险杠将原车中网及左右风口拆下。
- ② 清结保险杠与中网粘贴接触面的地方，然后将碳纤中网粘贴到保险杠上（注：中间部分需用3M胶/玻璃胶粘，二选一）。
- ③ 将左右风口用原厂安装方式替换成碳纤风口（卡扣固定）。
- ④ 将保险杠安装回车上。

All Components 所有组件

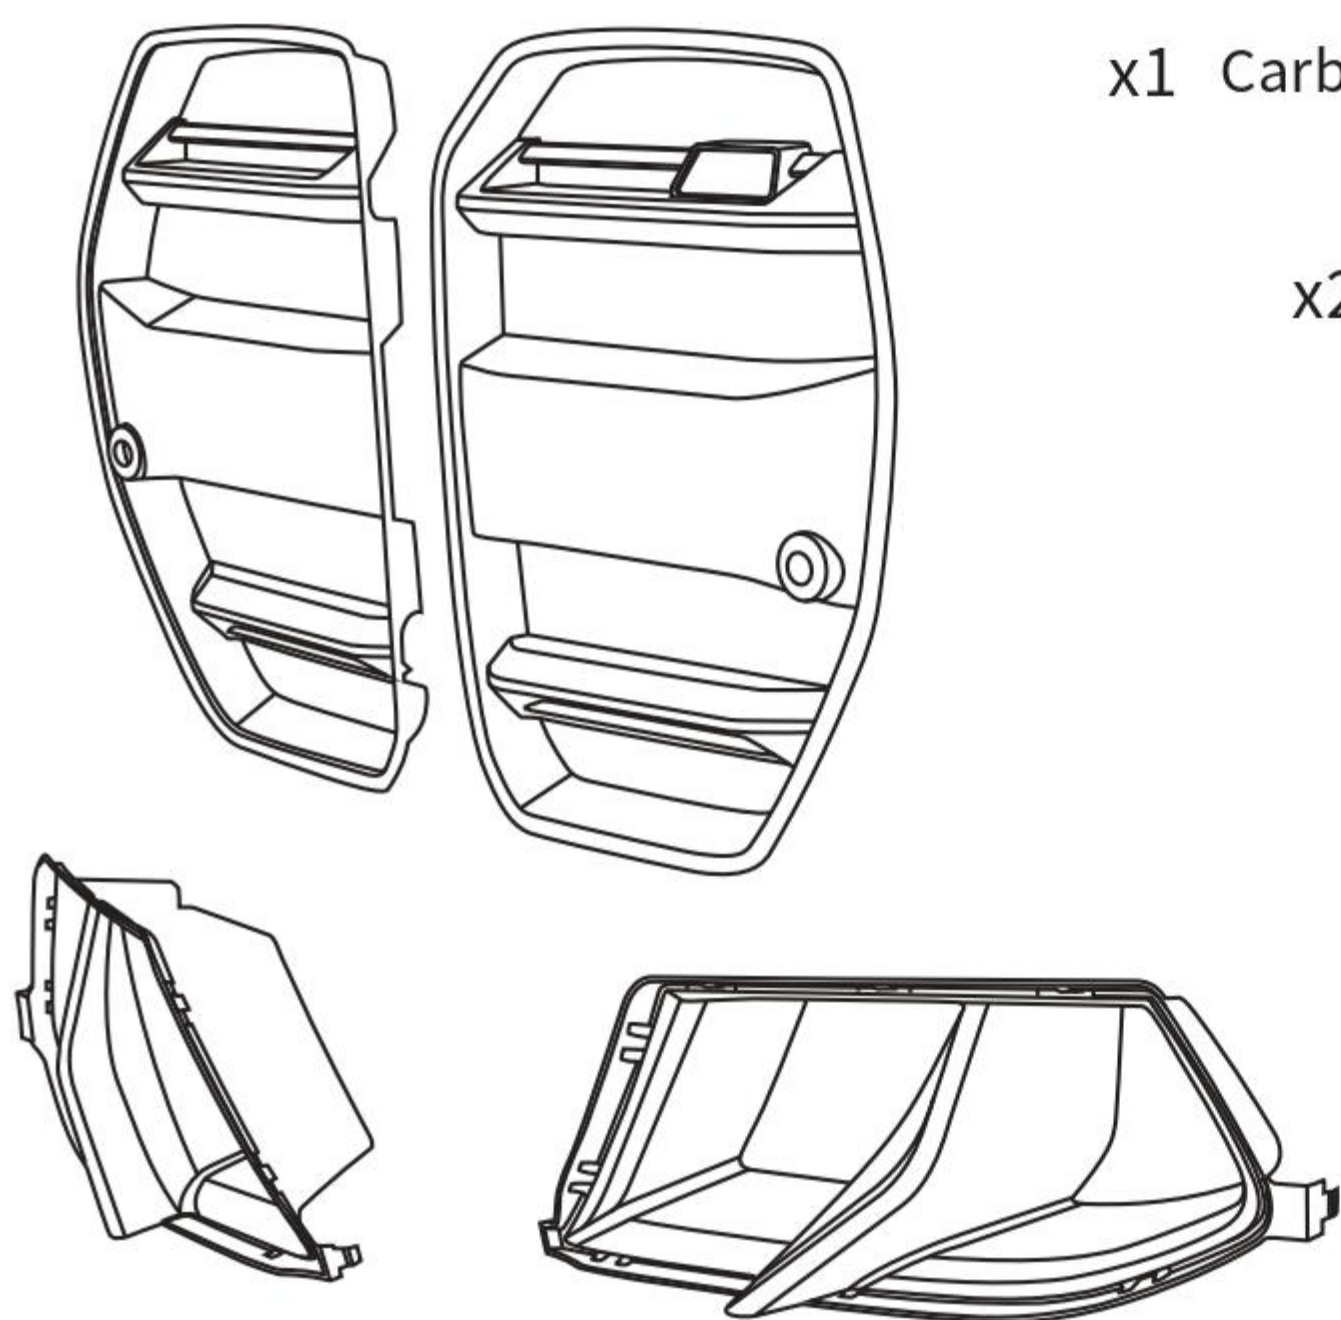

- x1 Carbon Fiber Hood Delfector(LH, RH)
碳纤维中网(左、右)
- x2 Carbon fiber air inlet (LH, RH)
碳纤维进风口(左、右)

