


Audi Rs 3Sedan(22-24)




Installation Manual

CARBON FIBER FRONT LIP

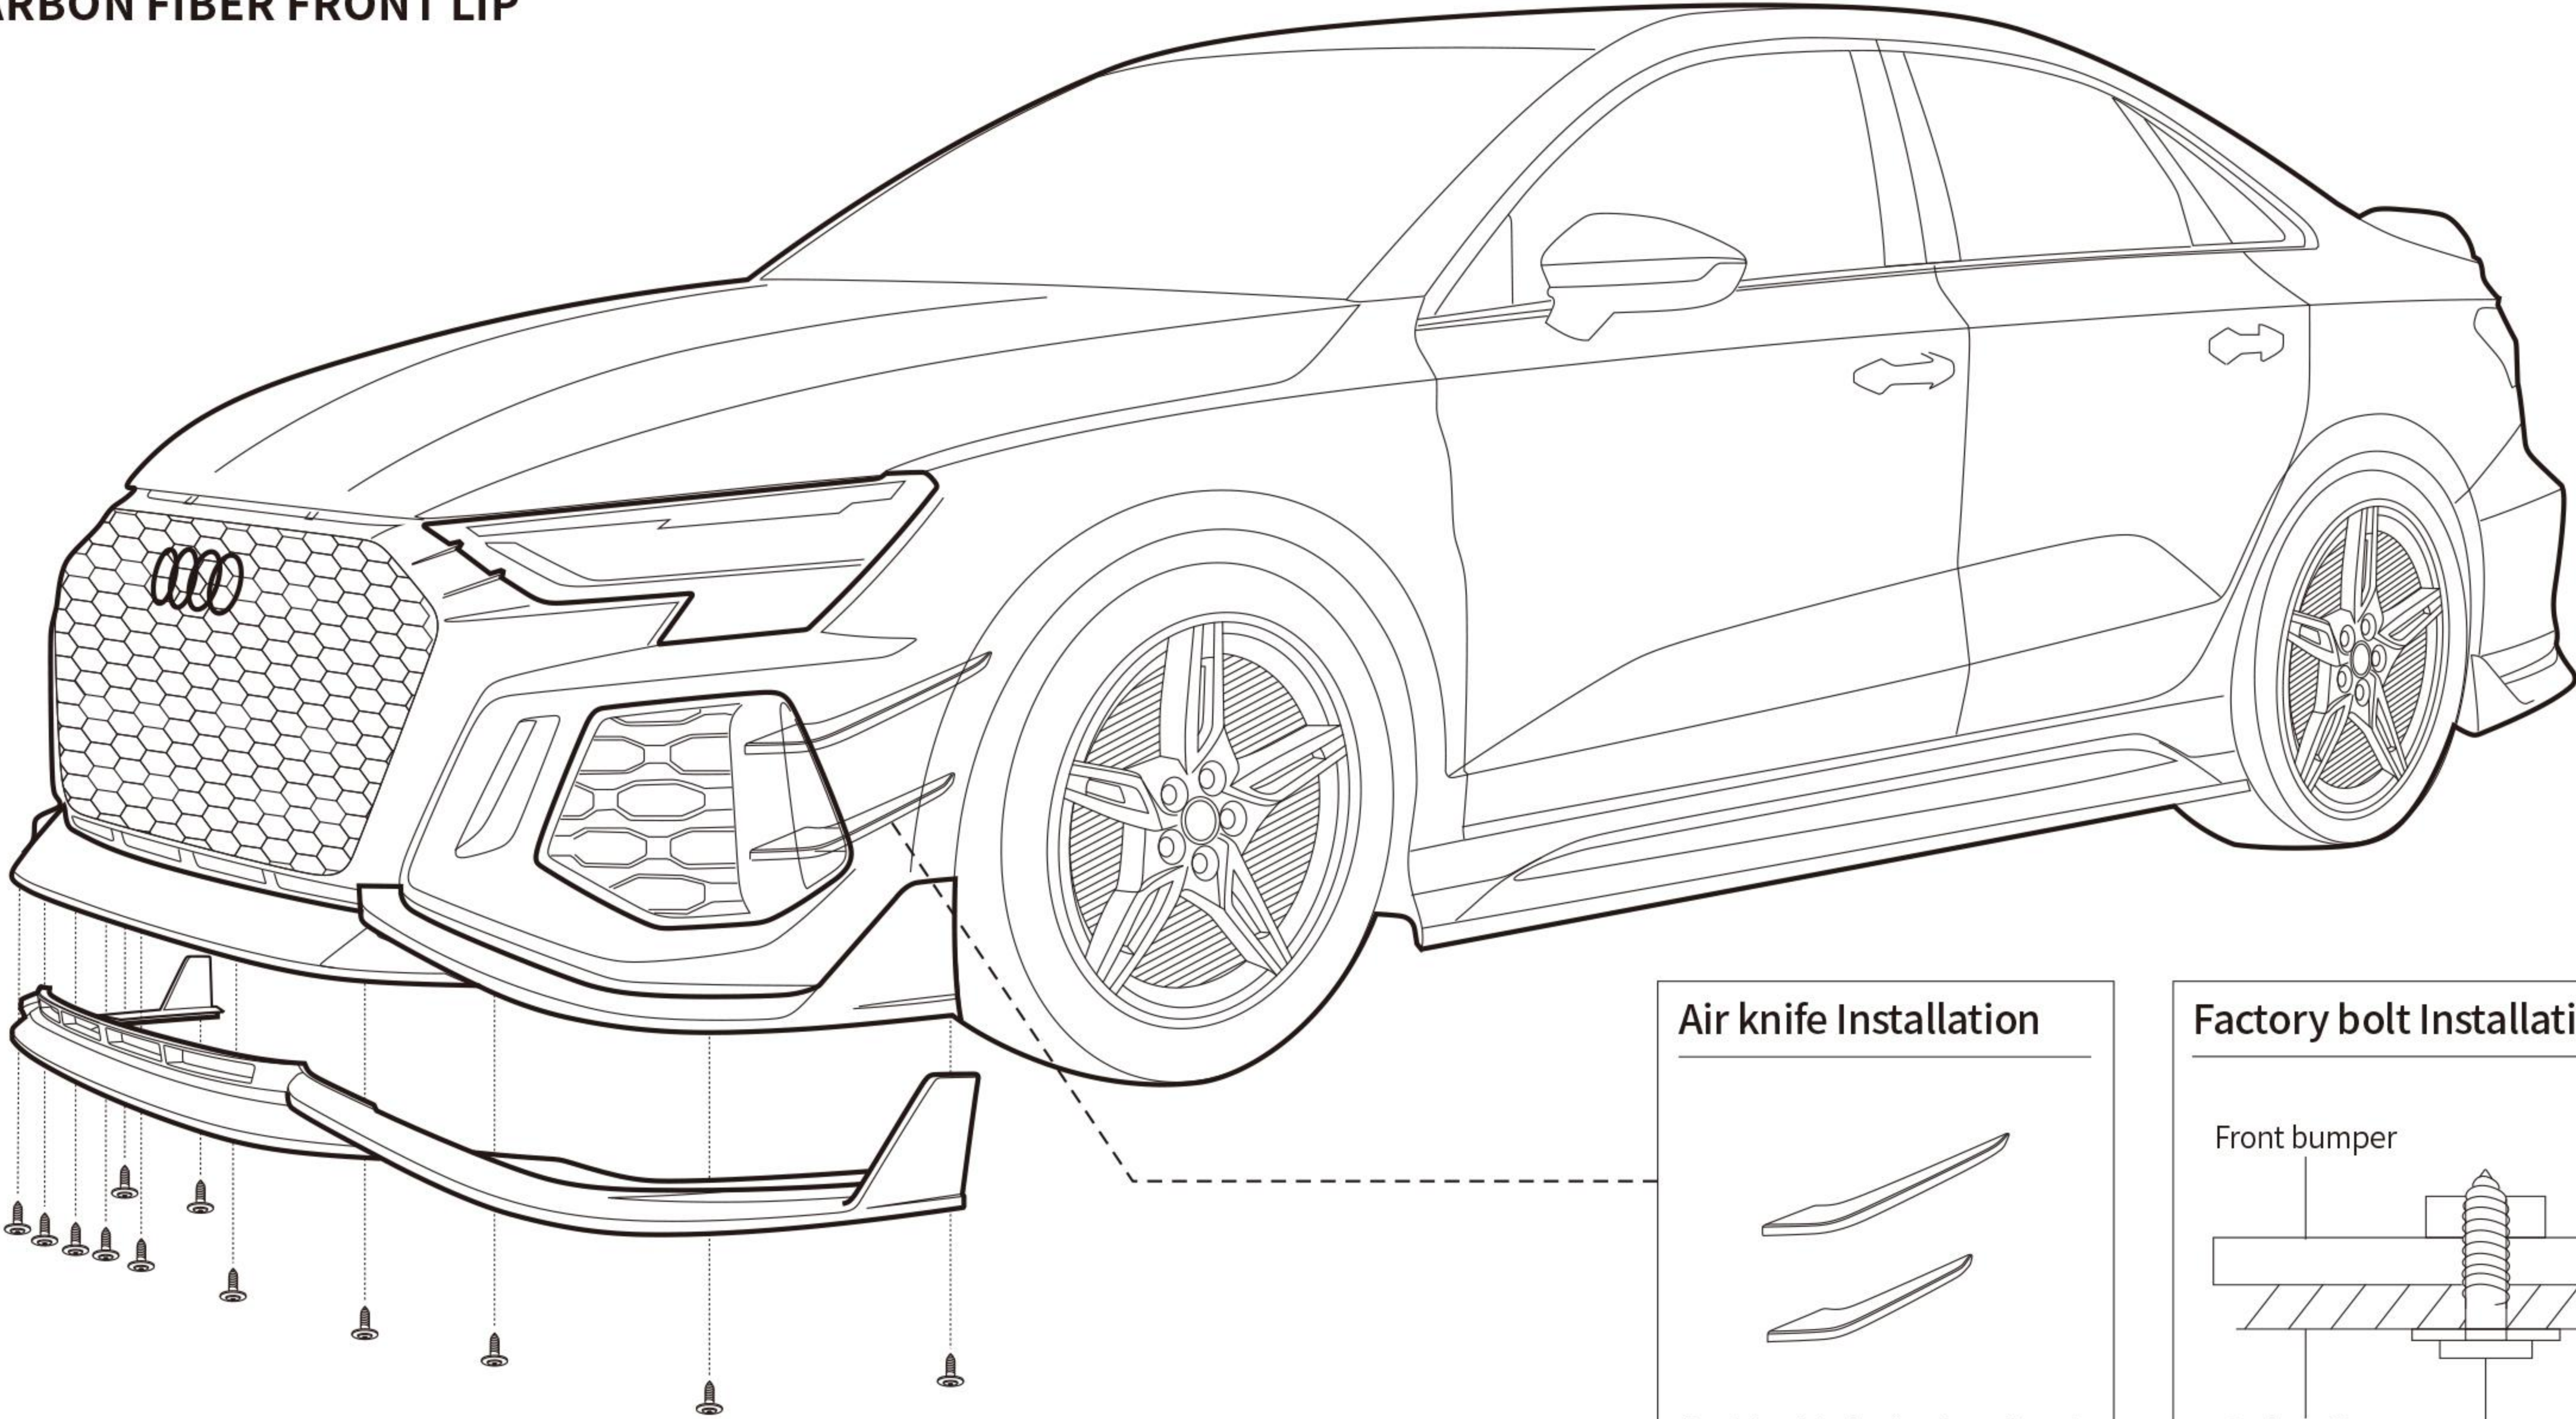


Air knife Installation

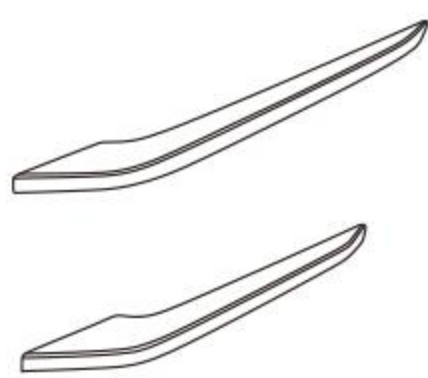

Double-sided adhesive, directly adhered to the car body

Factory bolt Installation

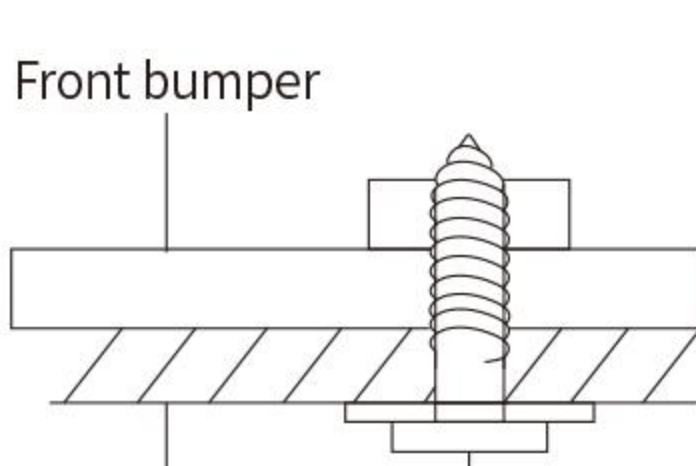

Front bumper
Carbon fiber front lip
Factory bolt


x12

Front

Carbon Fiber Front Lip

- ① Remove Genuine Bolts left and right symmetry.
- ② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.
- ③ Set all components with the power tool according to the designated Install points.

All Components

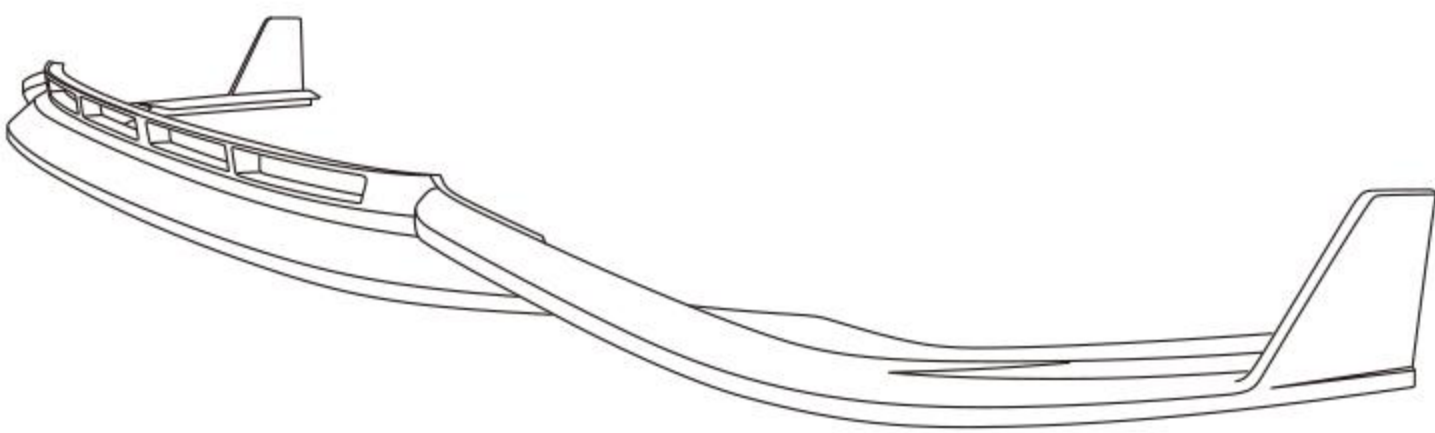

Carbon Fiber Front Lip
x1



x12

Self-Tapping screw

M5X16



x2

Double-Sided tape

3M™ VHB 4910 (10mm)

Install Points

***3M Double-Sided tape installation method** ①Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Tear off the 3M Double-Sided tape protective film and stick it on the car. ④Install the fixing screws at the bottom.

