



Audi RS3 two-box(22-24)

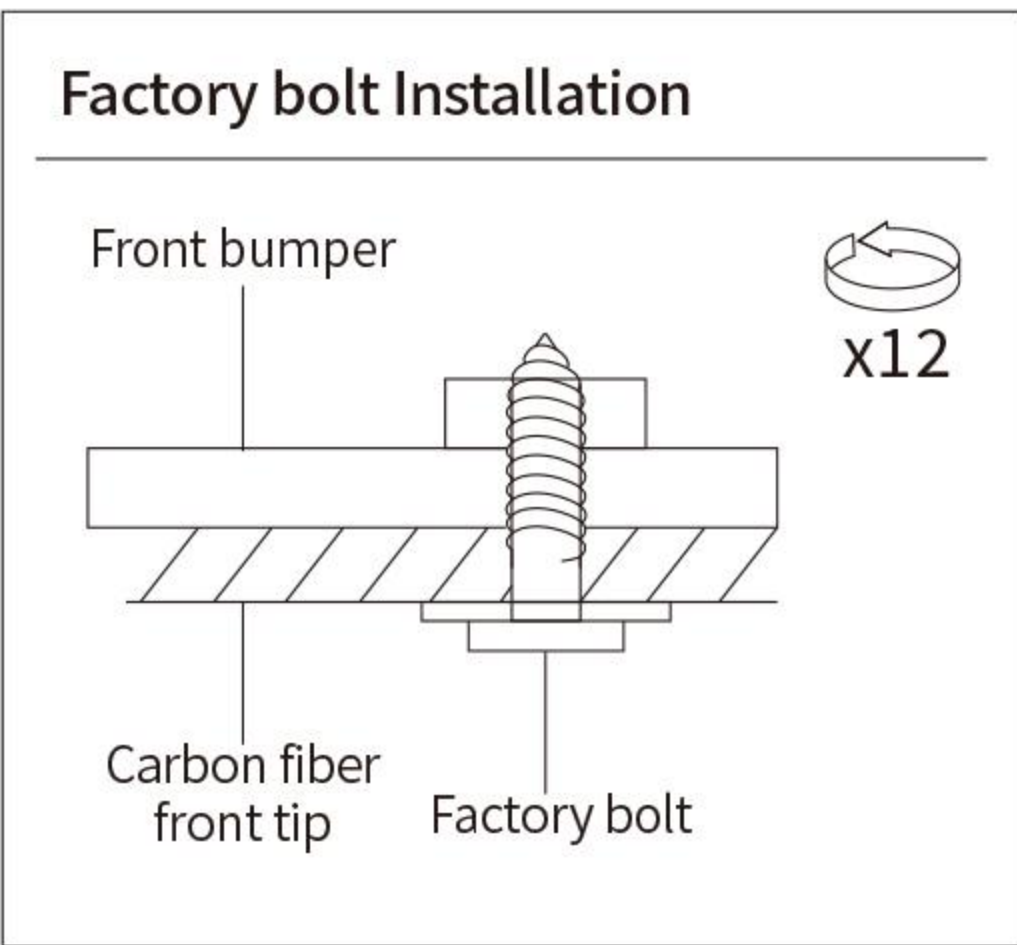

Installation Manual

CARBON FIBER FRONT LIP

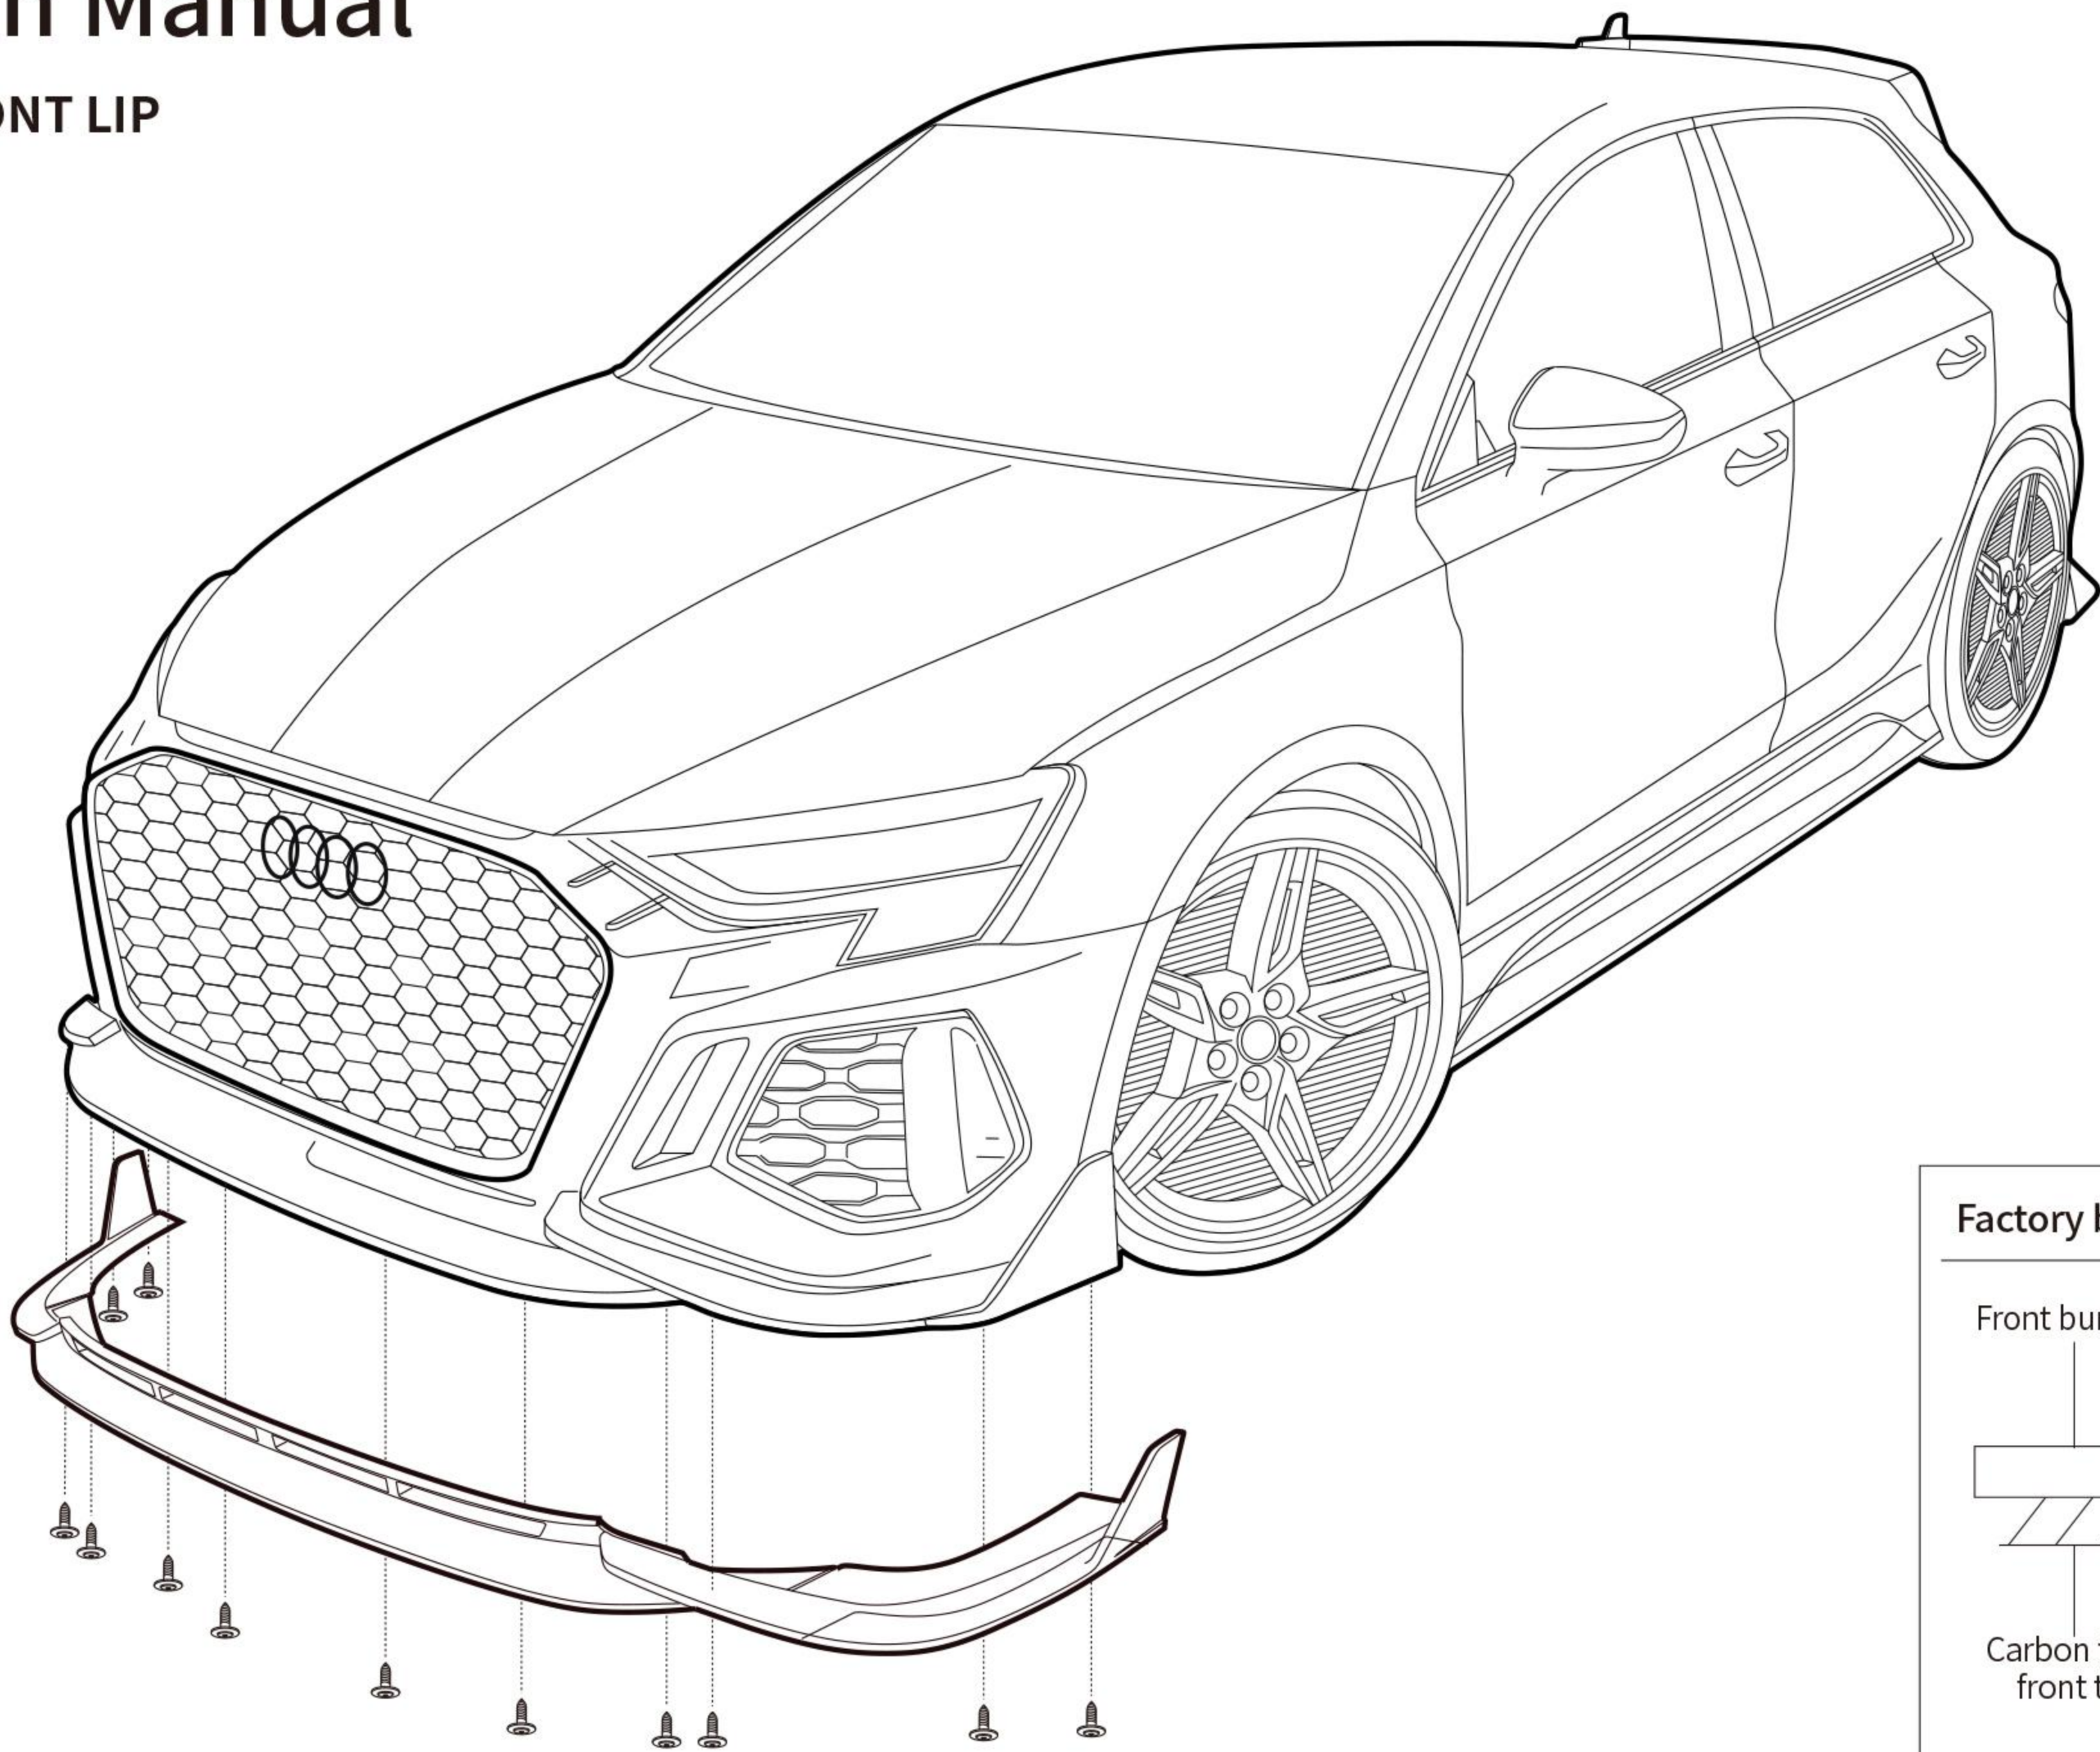


Front


Carbon Fiber Front Lip

- ① Remove Genuine Bolts left and right symmetry.
- ② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.
- ③ Set all components with the power tool according to the designated Install points.

All Components

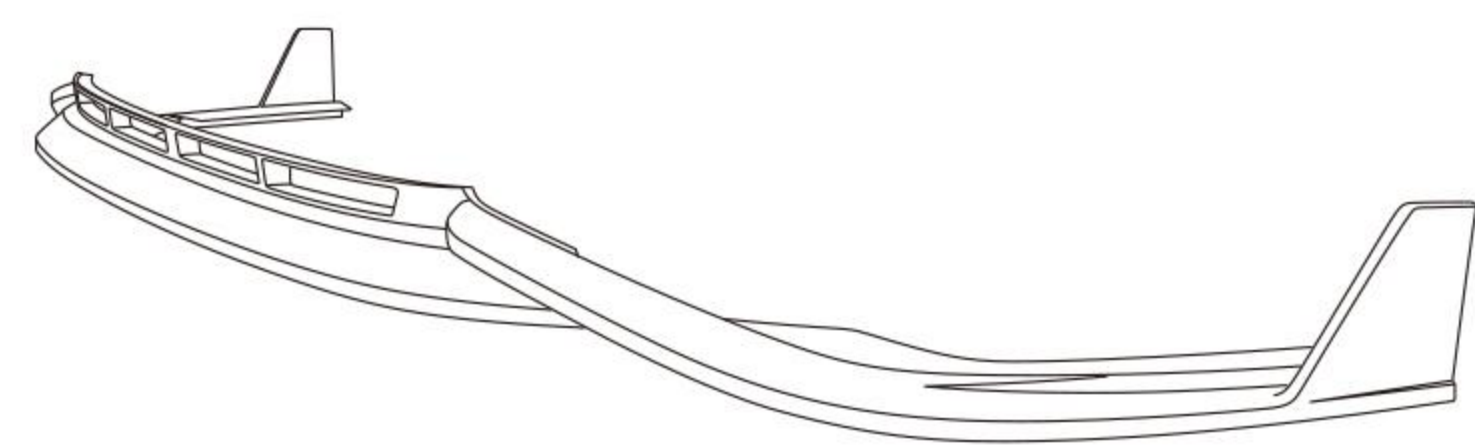

Carbon Fiber Front Lip
x1

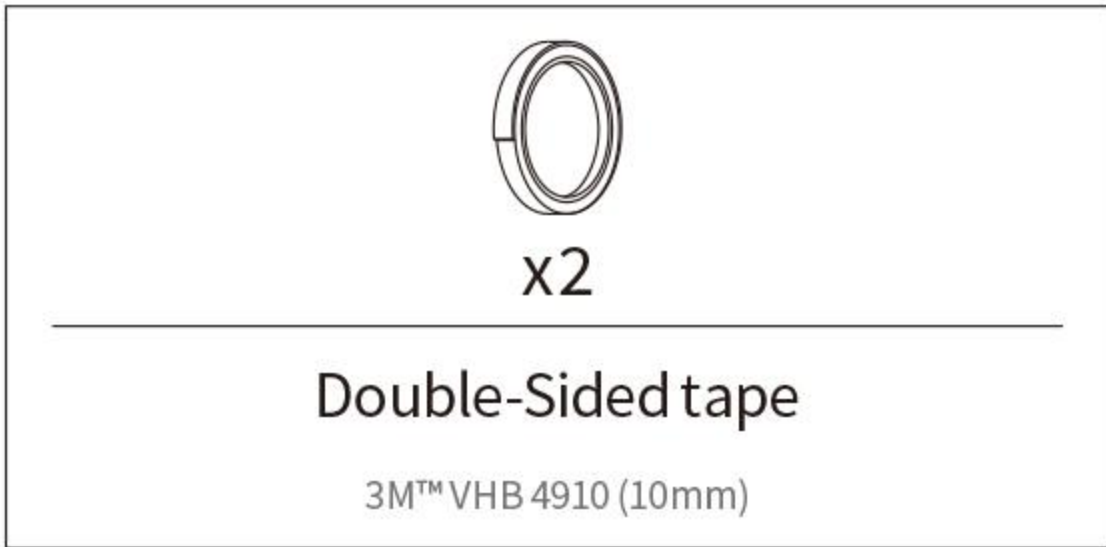

Install Points

***3M Double-Sided tape installation method** ①Use alcohol/acetone to clean the car body surface where the 3M Double-Sided tape product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Tear off the 3M Double-Sided tape protective film and stick it on the car. ④Install the fixing screws at the bottom.

