



Installation Manual

CARBON FIBER FRONT LIP

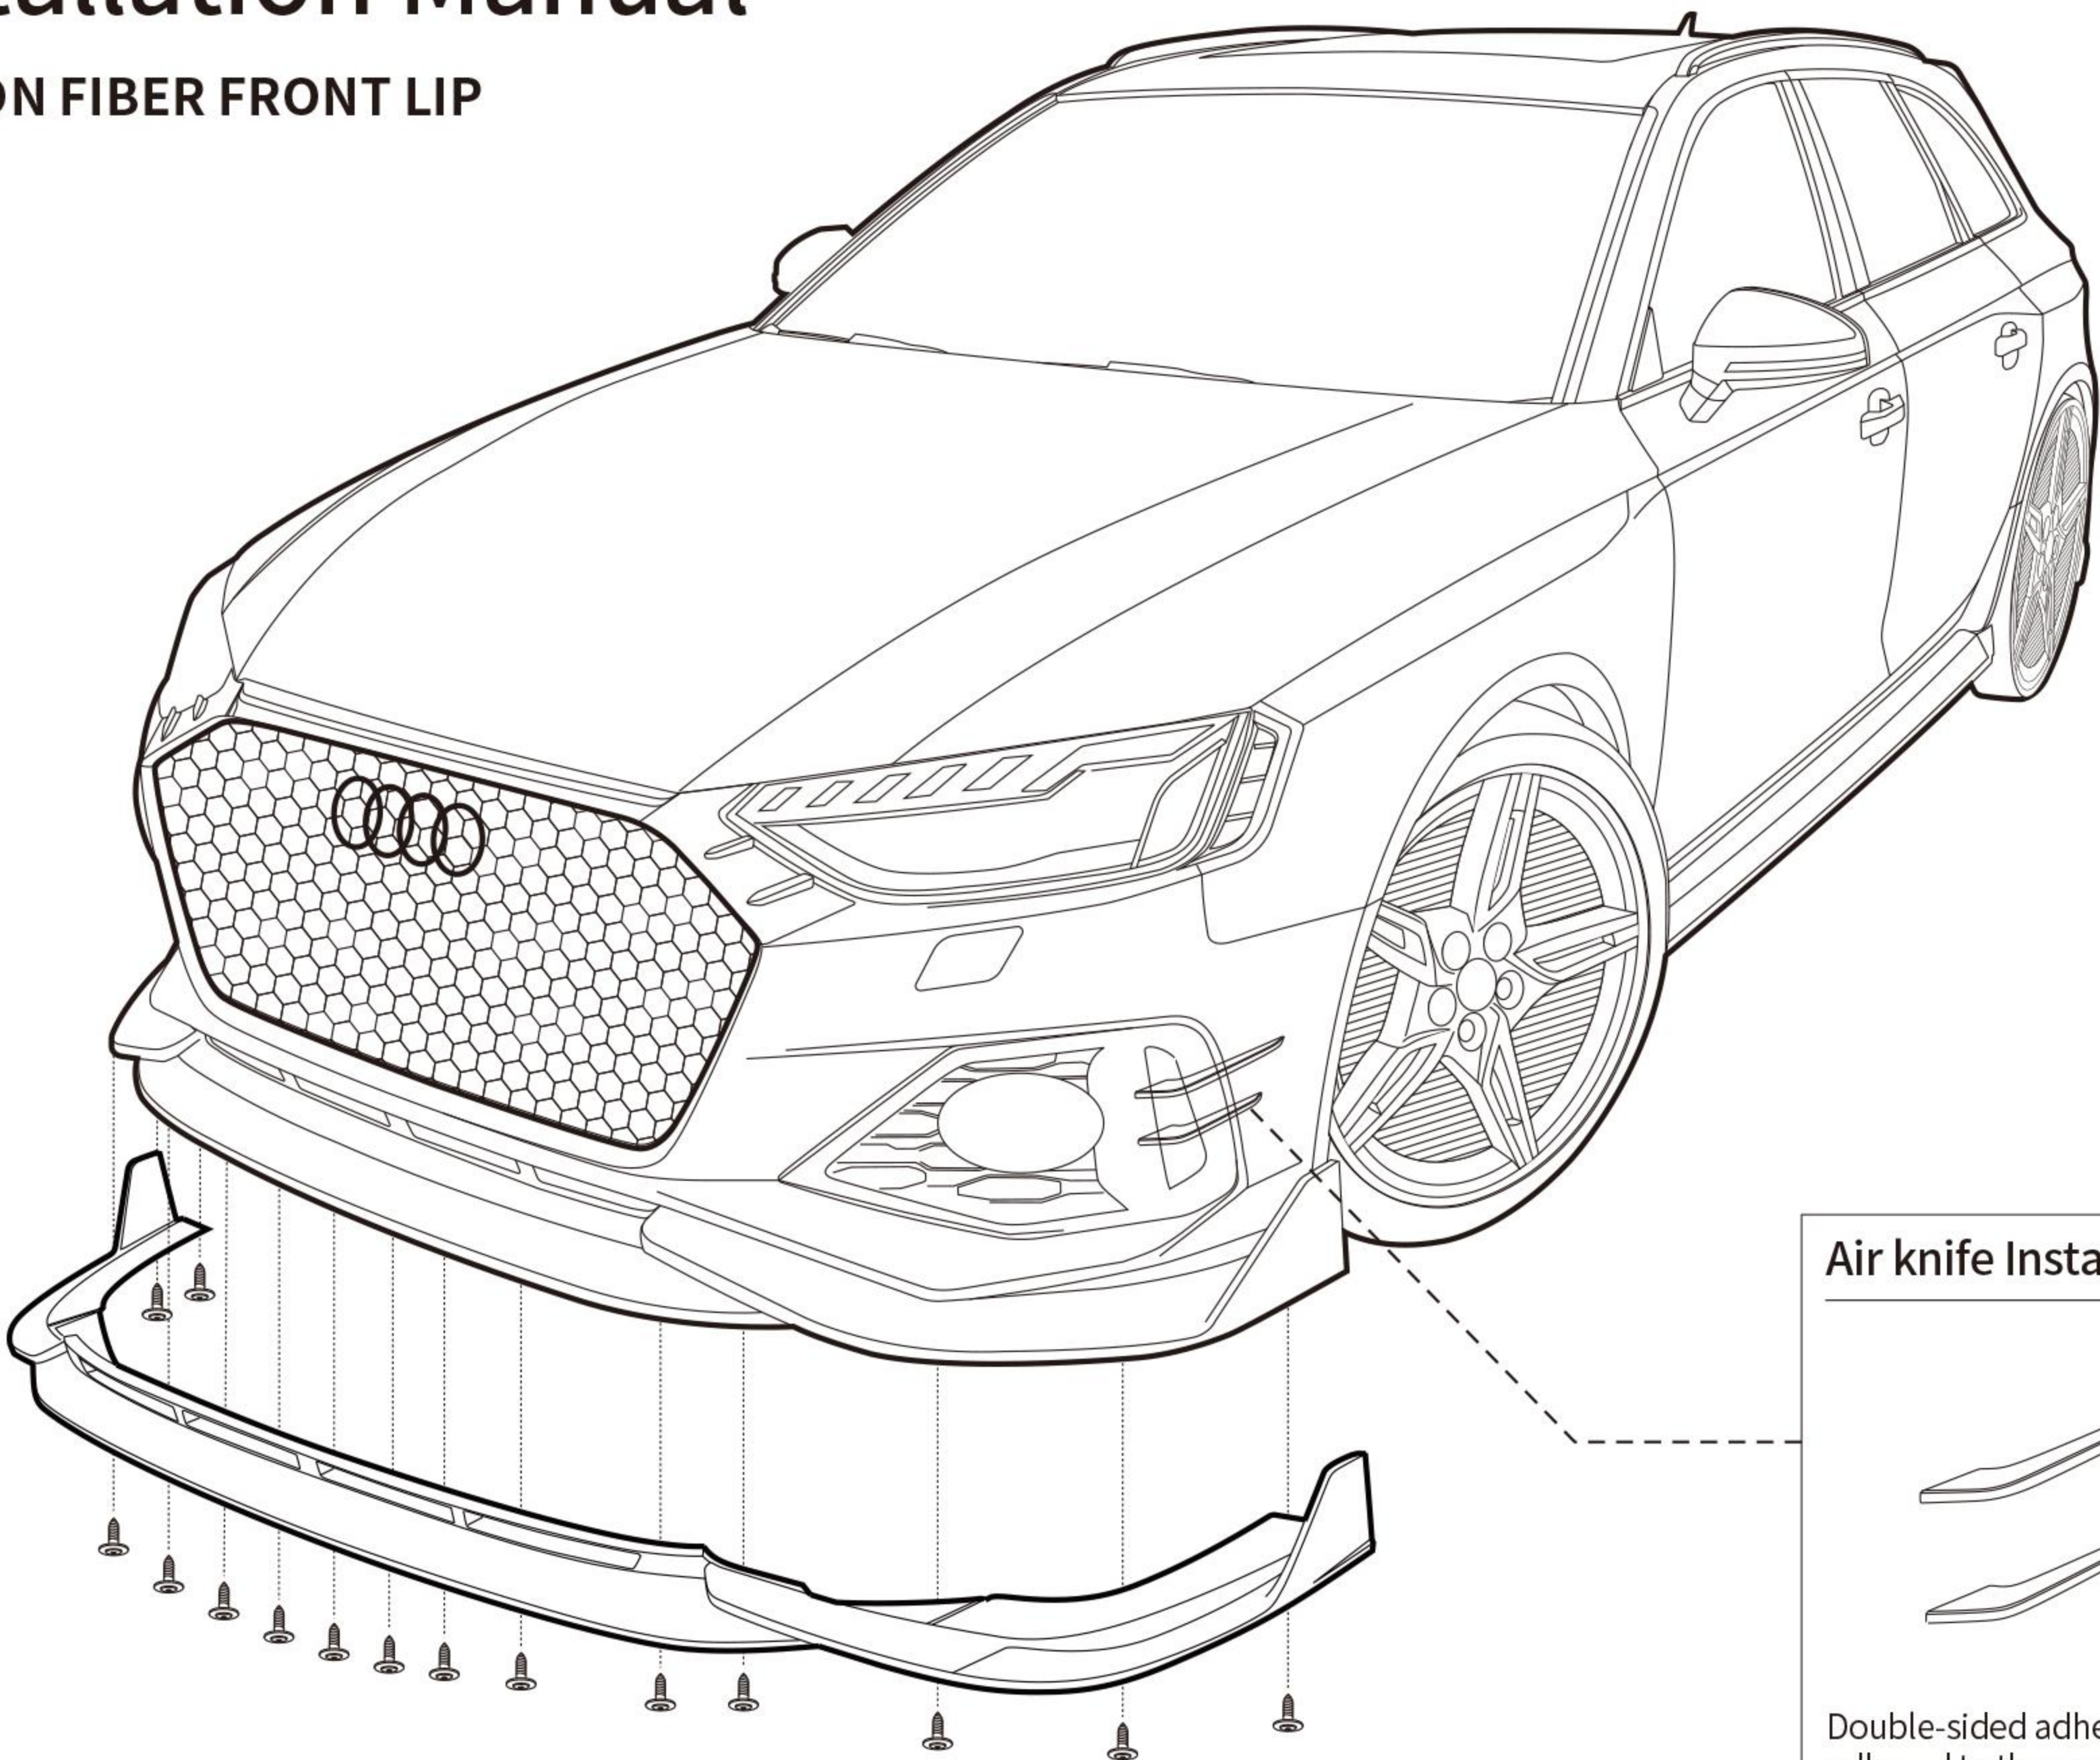


Air knife Installation

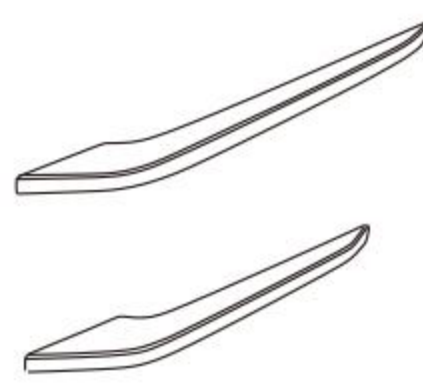

Double-sided adhesive, directly adhered to the car body

Factory bolt Installation

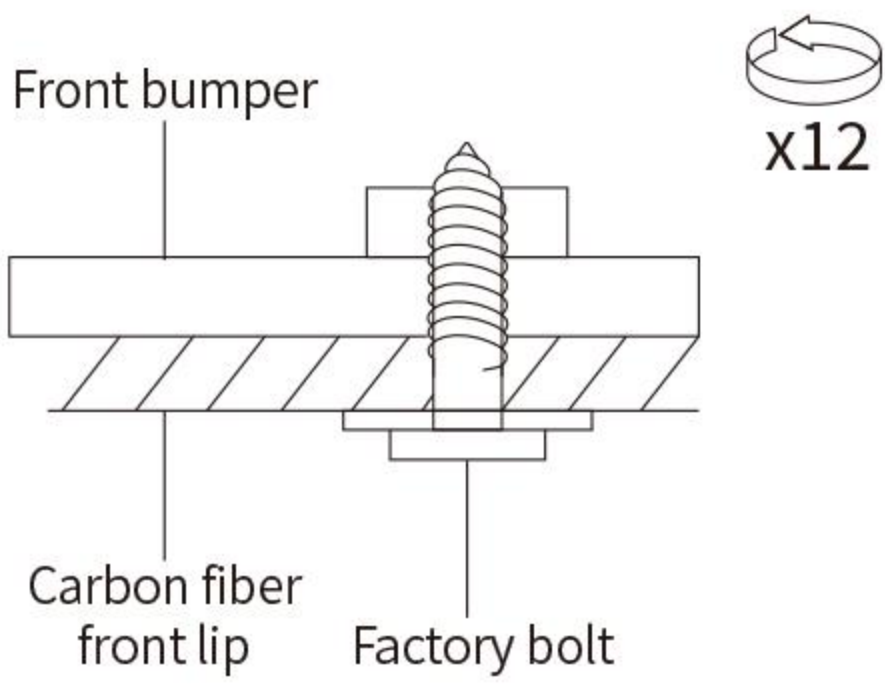


Front

Carbon Fiber Front Lip

- ① Remove Genuine Bolts left and right symmetry.
- ② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.
- ③ Set all components with the power tool according to the designated Install points.

All Components

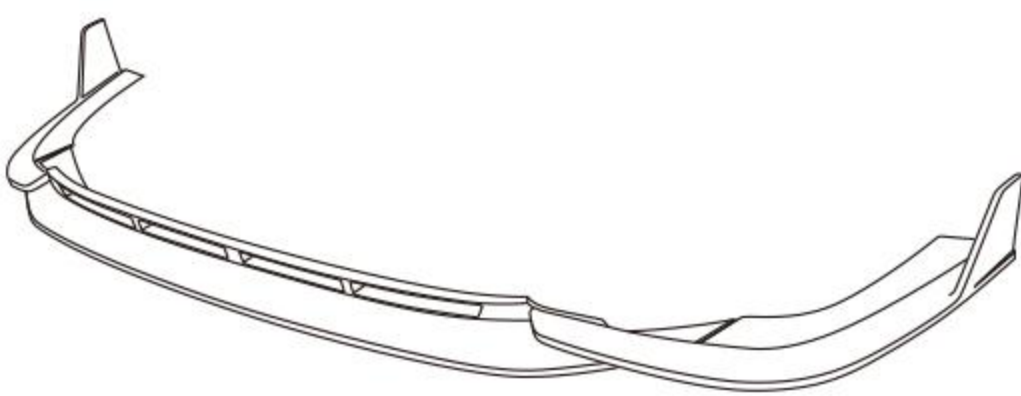

Carbon Fiber Front Lip

x1



x15

Self-Tapping screw

M5X16



x2

Adhesive sealant

Sikaflex®-221

Install Points

Adhesive sealant installation method ①Use alcohol/acetone to clean the car body surface where the glass glue product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Apply Adhesive sealant to the sticking position and stick it on the car. ④Install the fixing screws at the bottom.

