



Installation Manual

CARBON FIBER FRONT LIP

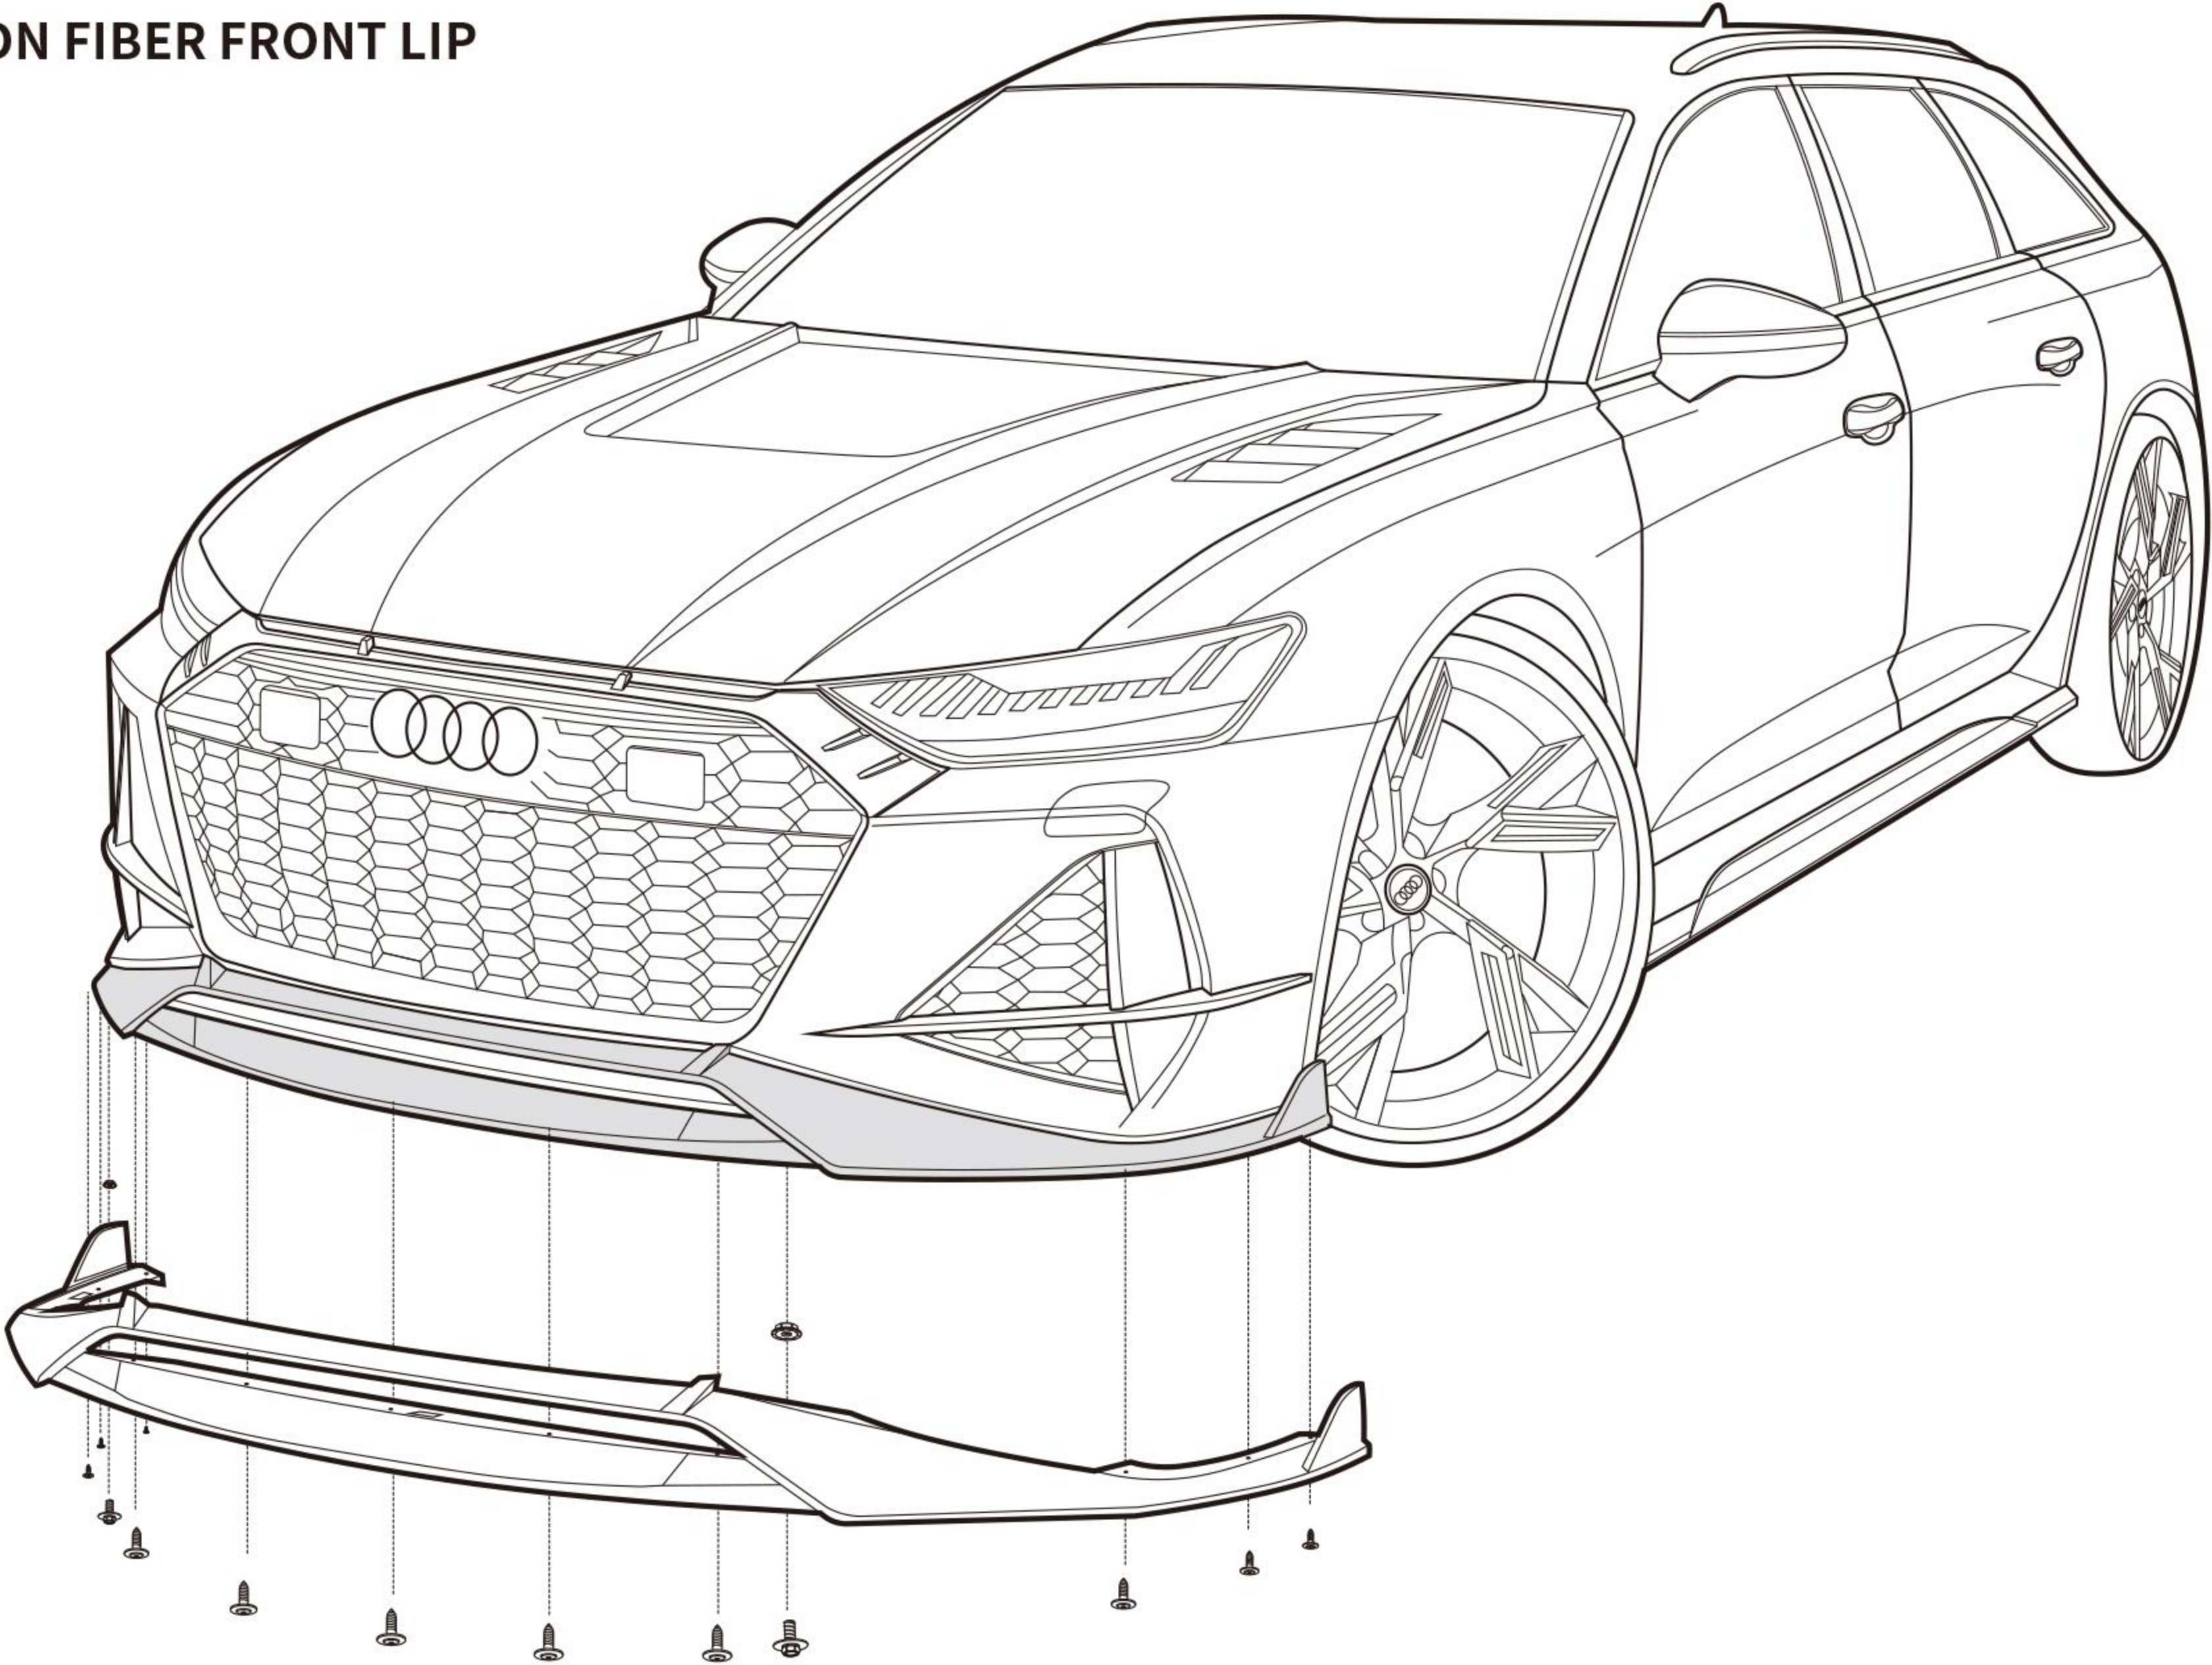

Factory bolt Installation

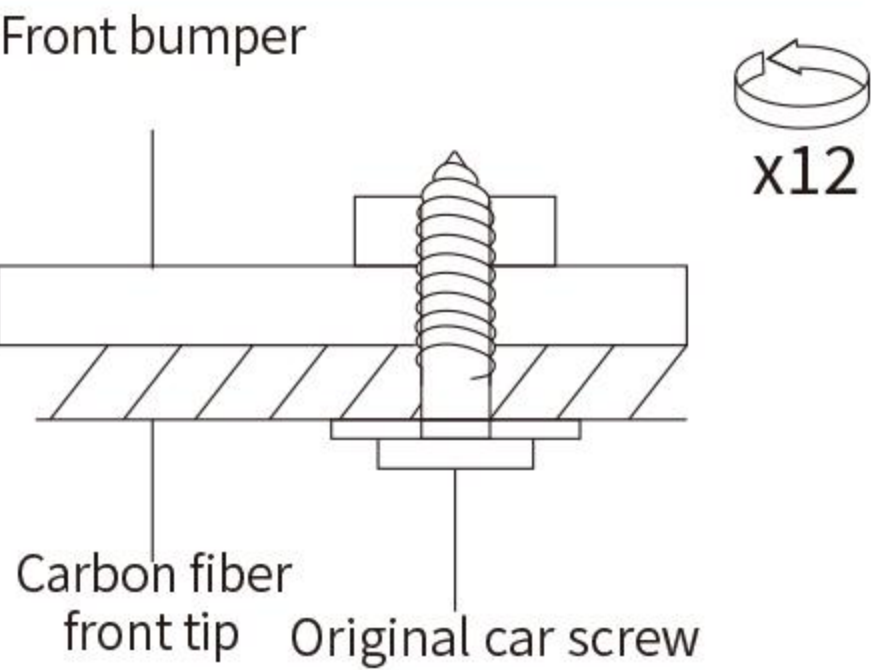


Front

Carbon Fiber Front Lip

- ① Remove Genuine Bolts left and right symmetry.
- ② After determining the most suitable fitting position for left and right symmetry, use a Genuine bolts to temporarily fasten it in place.
- ③ Set all components with the power tool according to the designated Install points.

All Components

x1 Carbon Fiber Front Lip

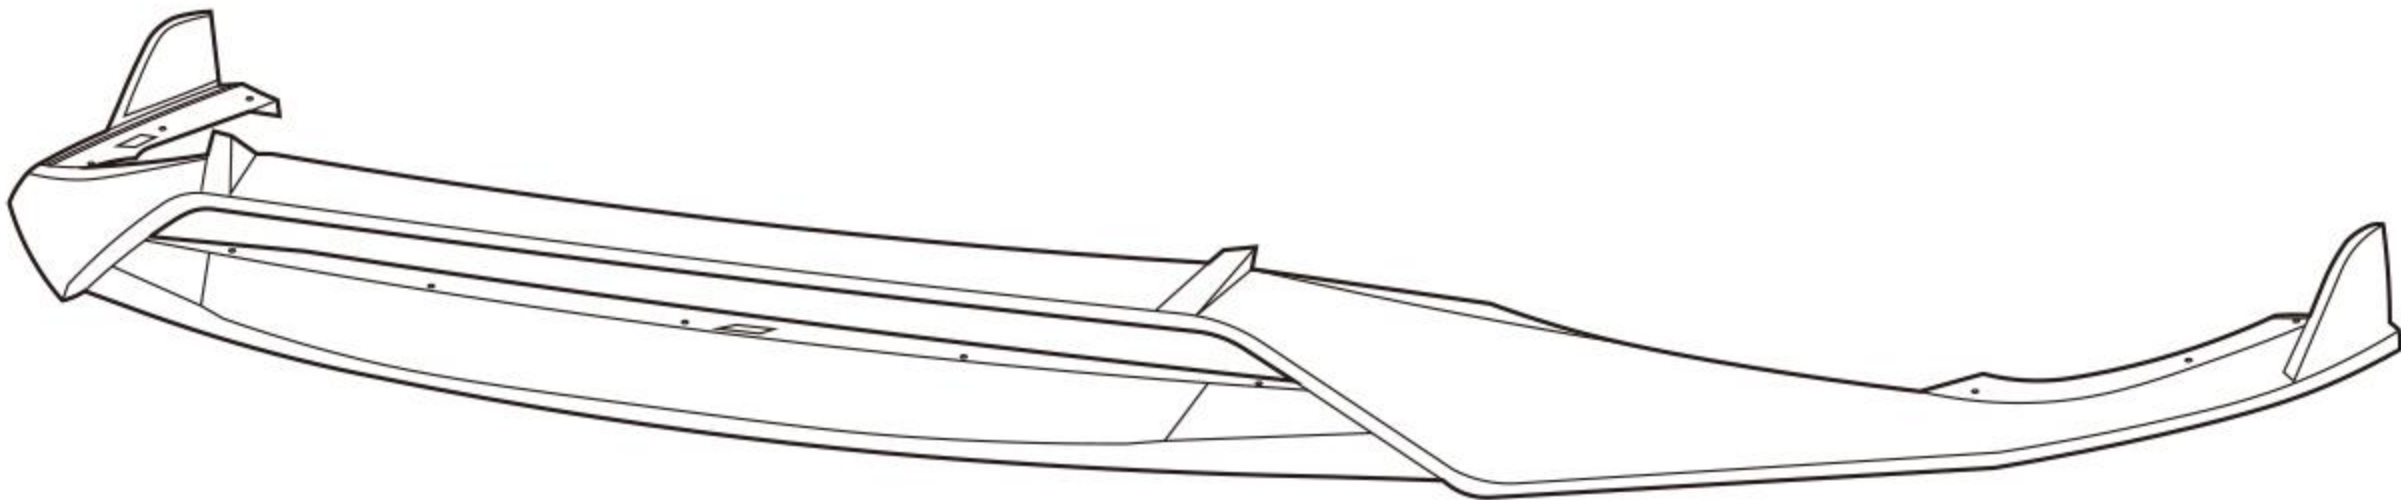

 x11 Self-Tapping screw M6X16	 x2 Bolt M6	 x2 Nut M6	 D-Stape/A-sealant 3M™ VHB 4910 (10mm)
---	---	--	---

Install Points

