



Installation Manual 安装手册

CARBON FIBER FRONT LIP

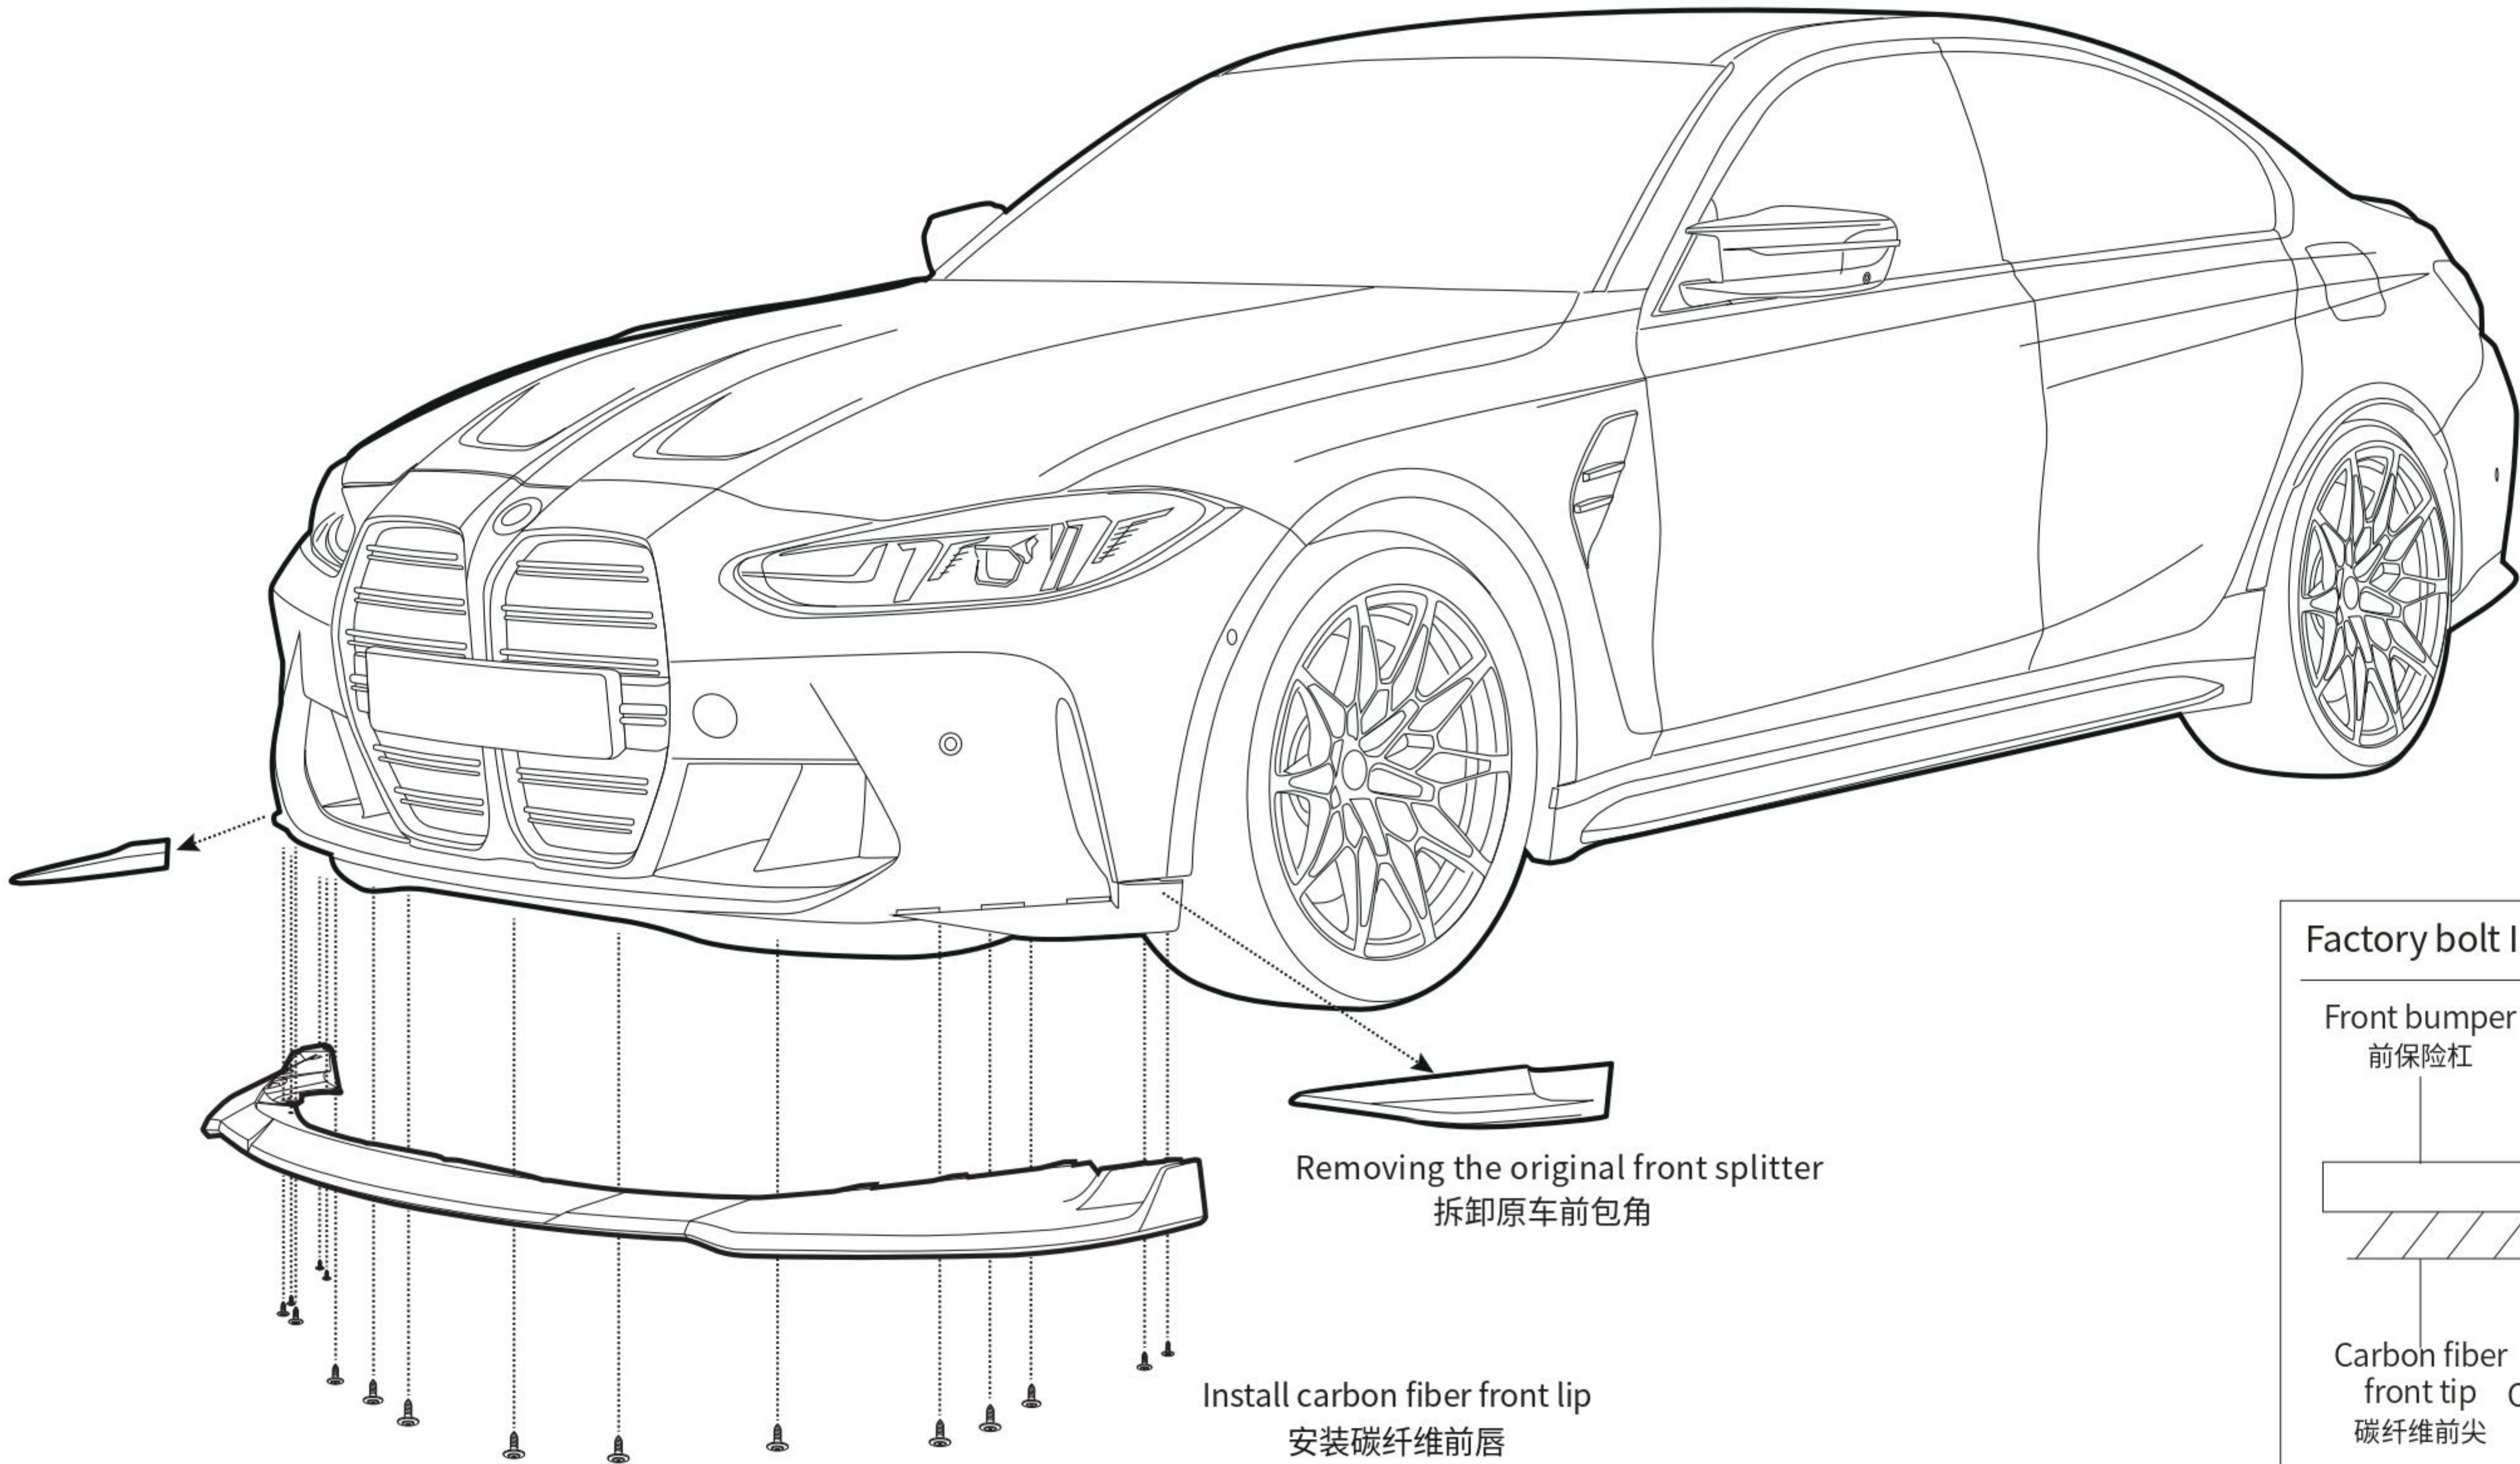

Install Points 安装点

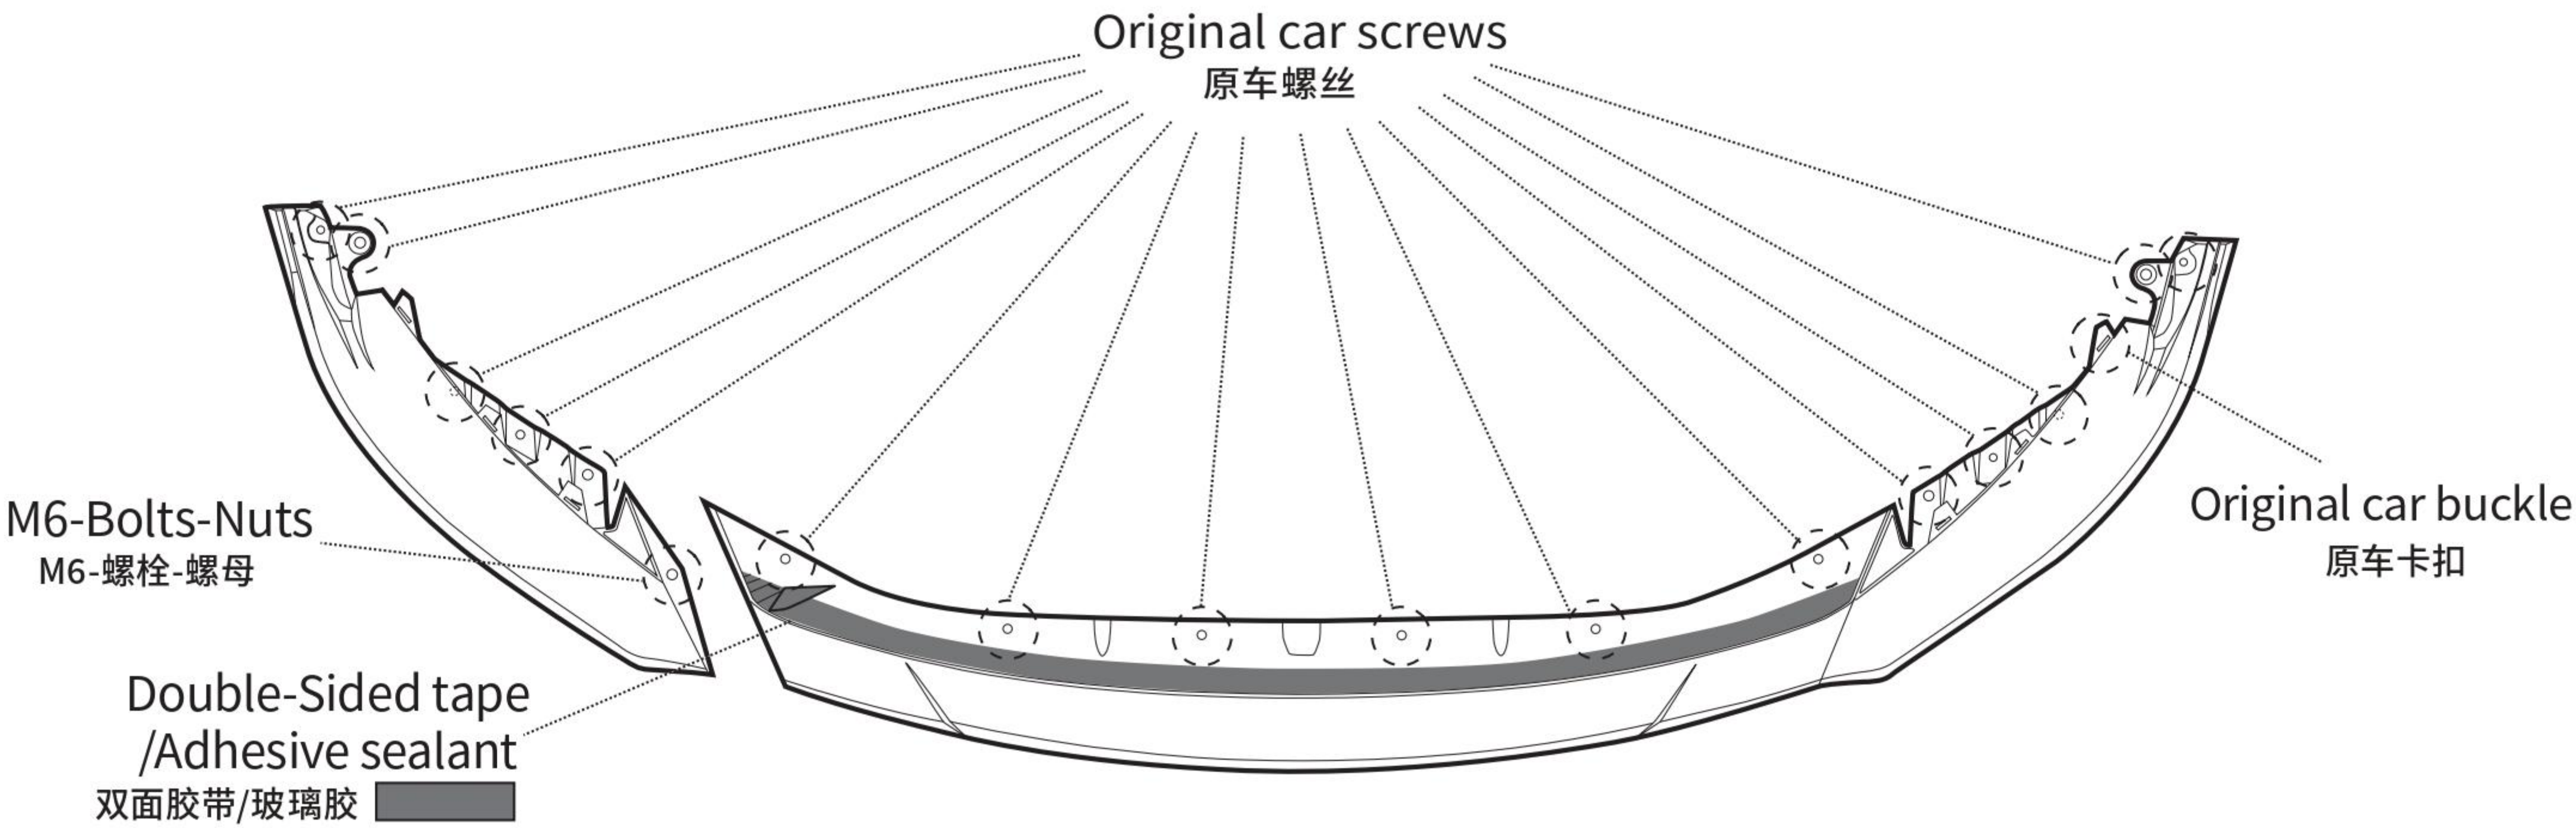

Front 前部

Carbon Fiber Front Lip 碳纤维前唇

- ① Remove the original car corner covers on both sides of the front bumper.
 - ② Assemble the carbon fiber front lip with M6 screws.
(Note: The middle part needs to be glued with 3M adhesive or glass adhesive, choose one).
 - ③ Install it on the car, securing the bottom with the original car screws and plastic clips.
- ① 拆下前保险杠左右两边原车包角。
- ② 将碳纤前唇用M6螺杆拼装好（注：中间部分需用3M胶/玻璃胶粘，二选一）。
- ③ 安装到车上，底部用回原车螺丝和塑料扣固定。

All Components 所有组件

