


Installation Manual

CARBON FIBER HOOD DELFECTOR

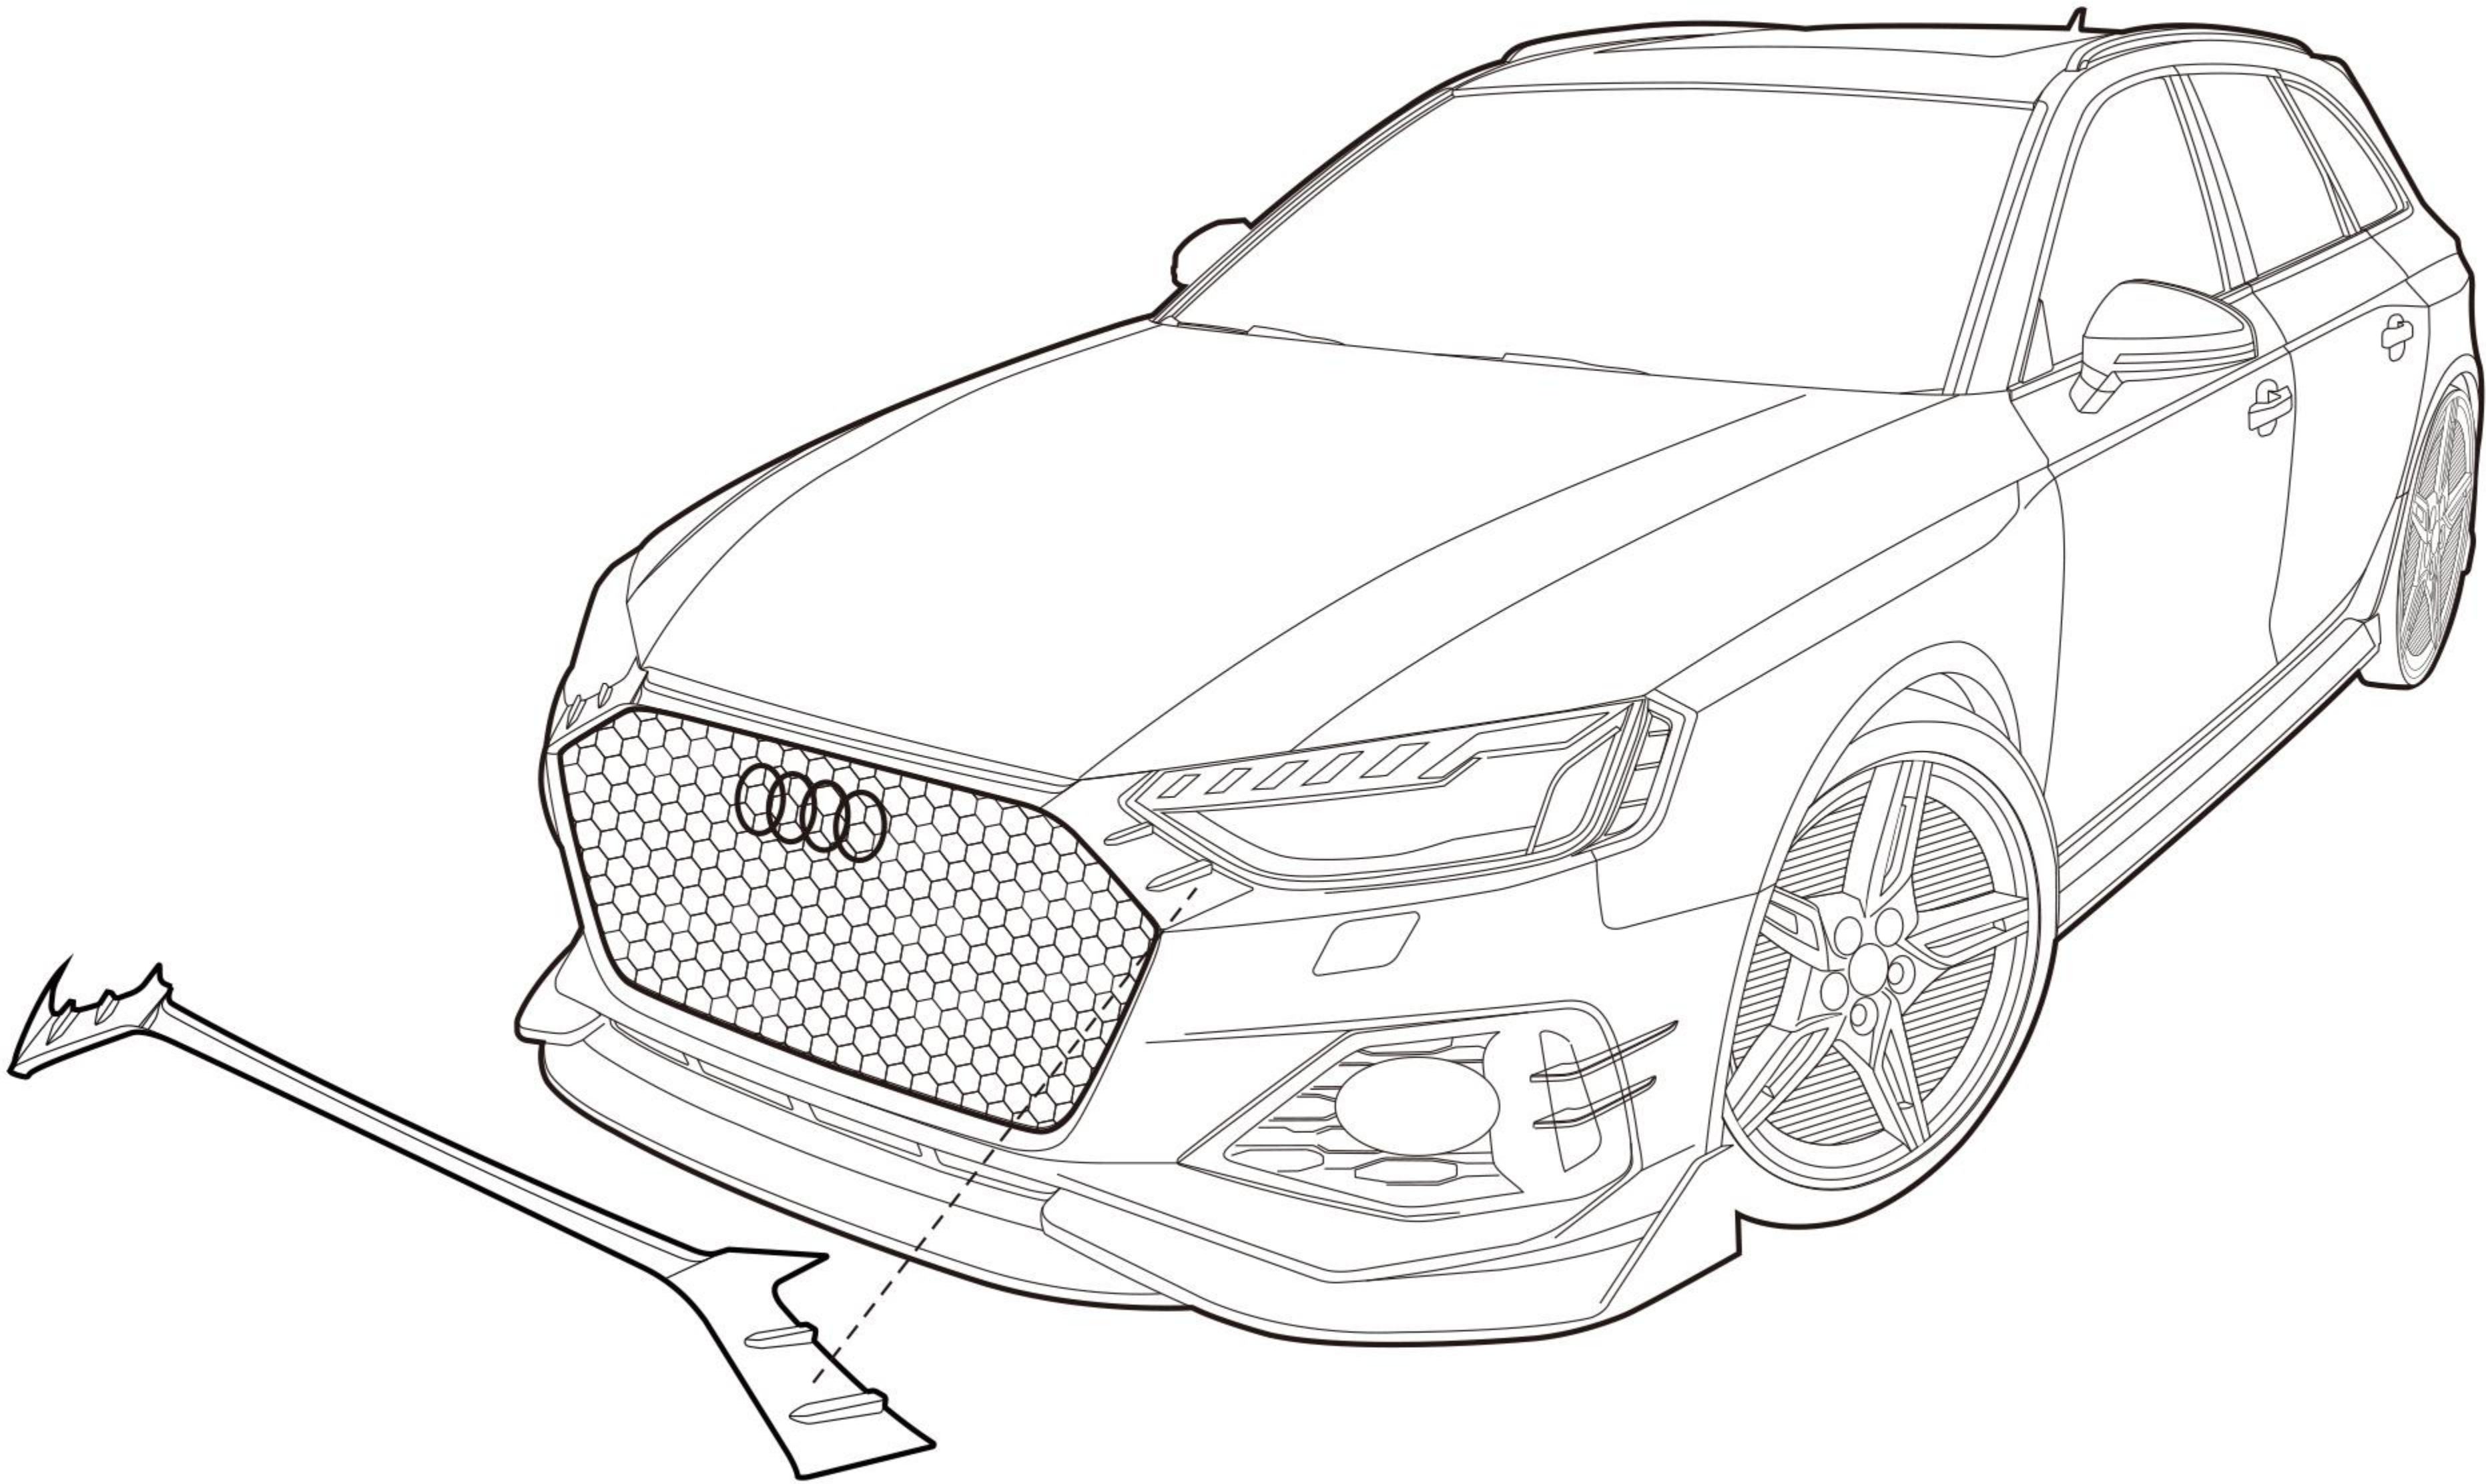


Front


Carbon Fiber Hood Delfector

① After applying primer on the car body, remove the film of the double-sided tape slightly outwar (Or apply Adhesive sealant) . Once fitting is adjusted perfectly completely remove double-sided tape.

All Components

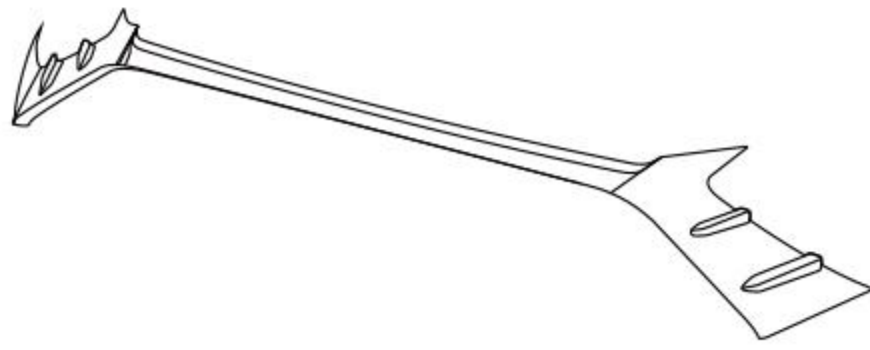

Carbon Fiber Hood Delfector
x1



x2

Adhesive sealant
Sikaflex®-221

Install Points

Adhesive sealant installation method ①Use alcohol/acetone to clean the car body surface where the glass glue product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Apply Adhesive sealant to the sticking position and stick it on the car. ④Install the fixing screws at the bottom.

Adhesive sealant

