


Installation Manual

CARBON FIBER COVER

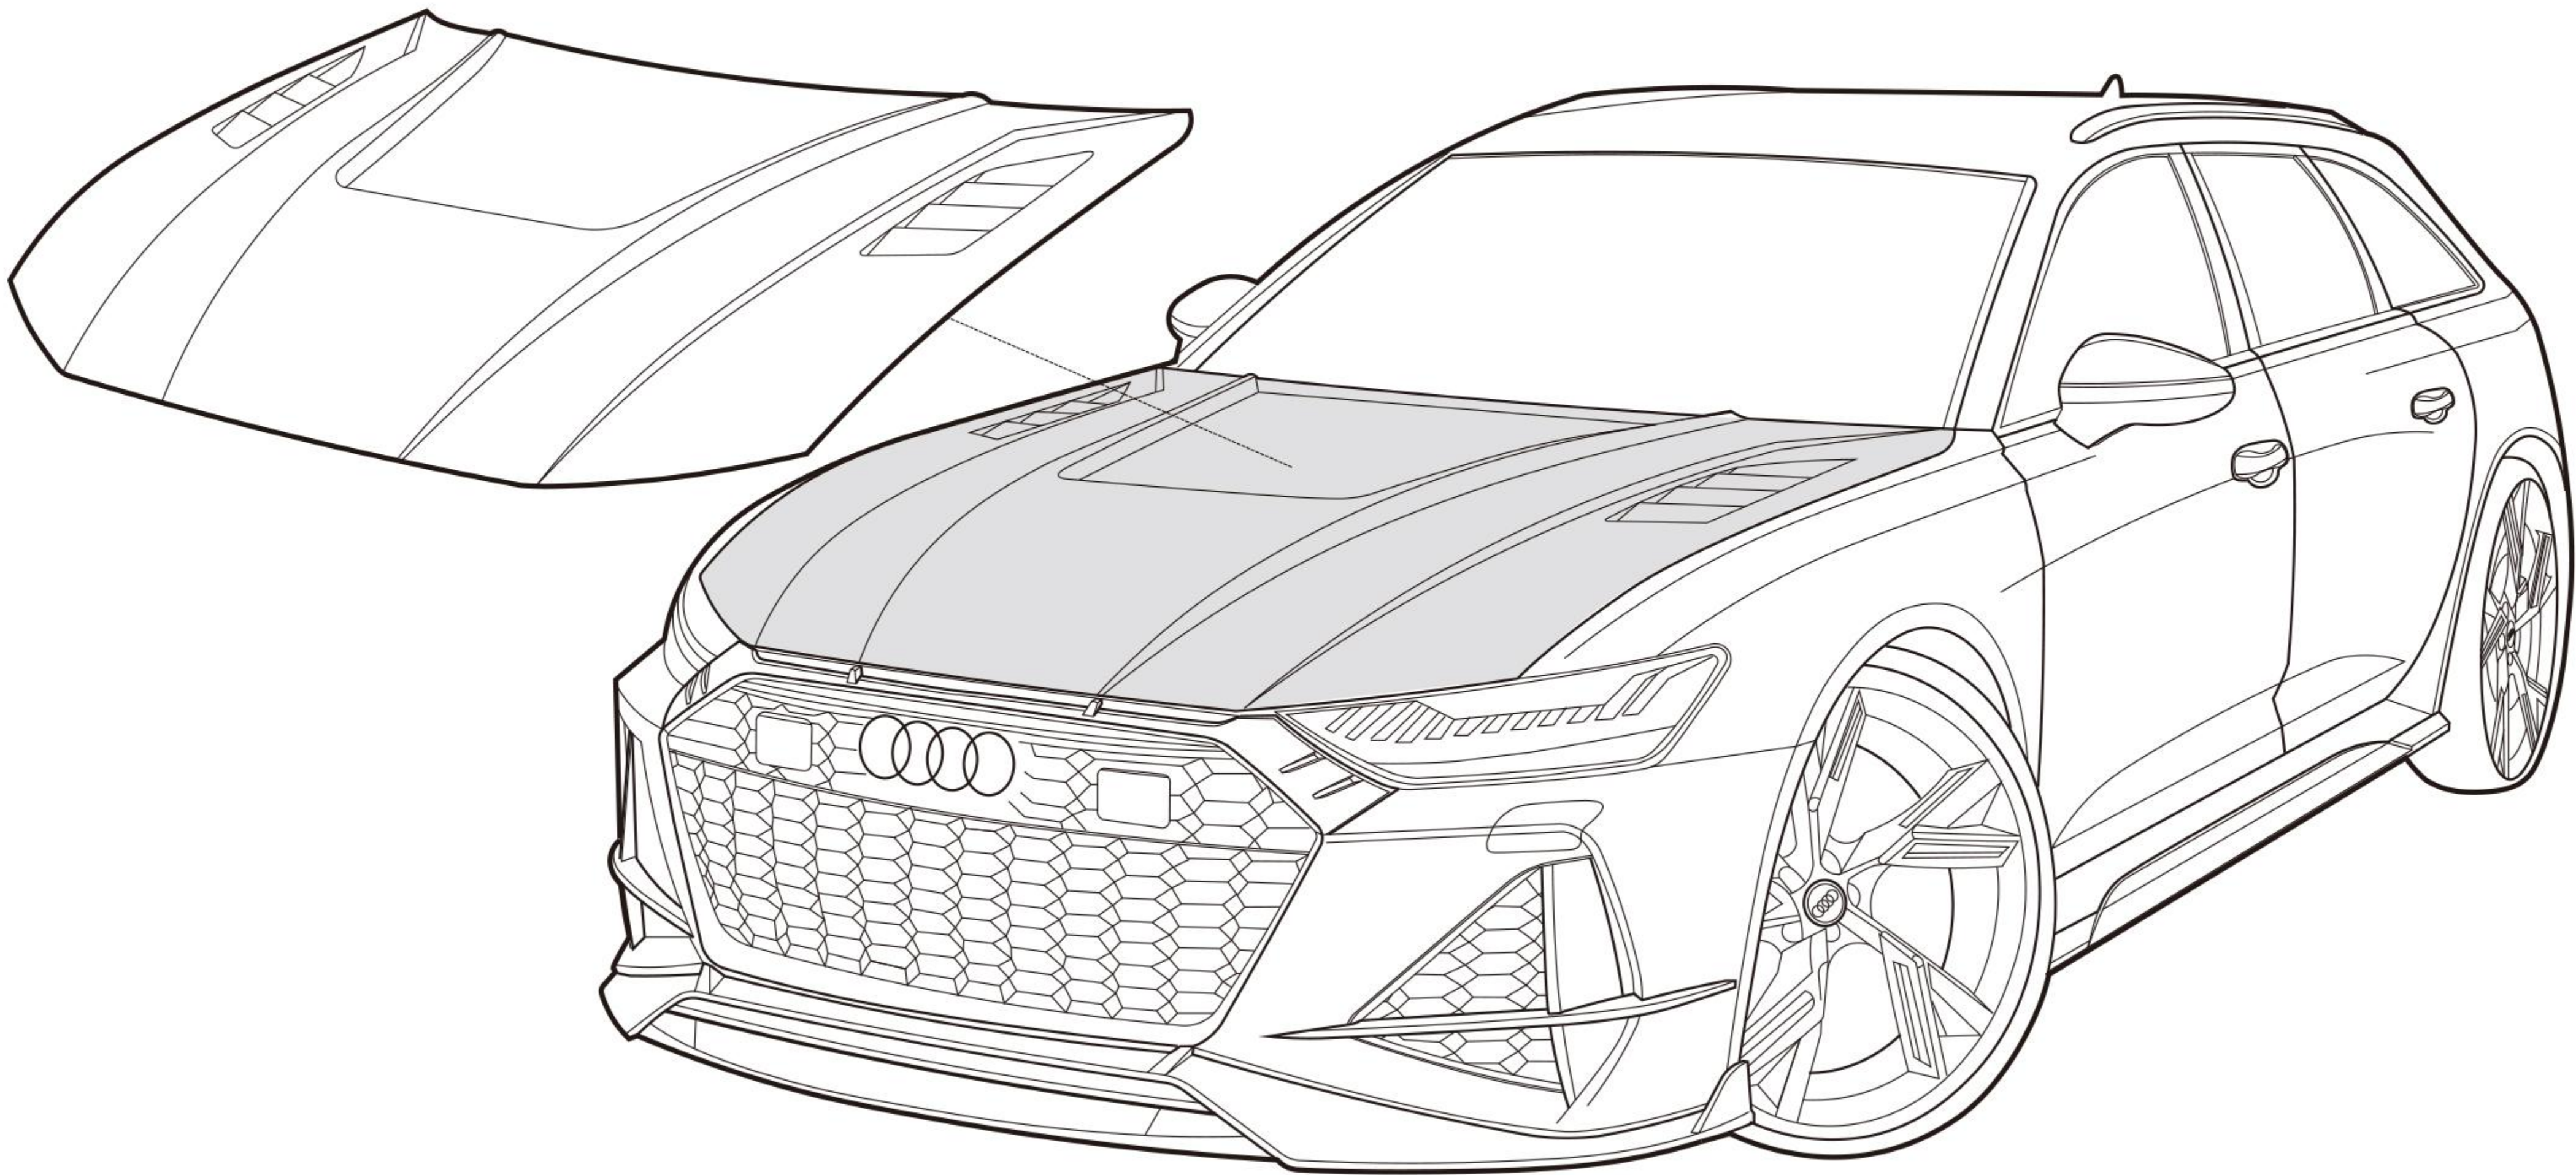


Front

Carbon Fiber Cover

- ① Remove the original car cover.
- ② Migrate the accessories on the lid.
- ③ Carbon fiber canopy installation.

All Components

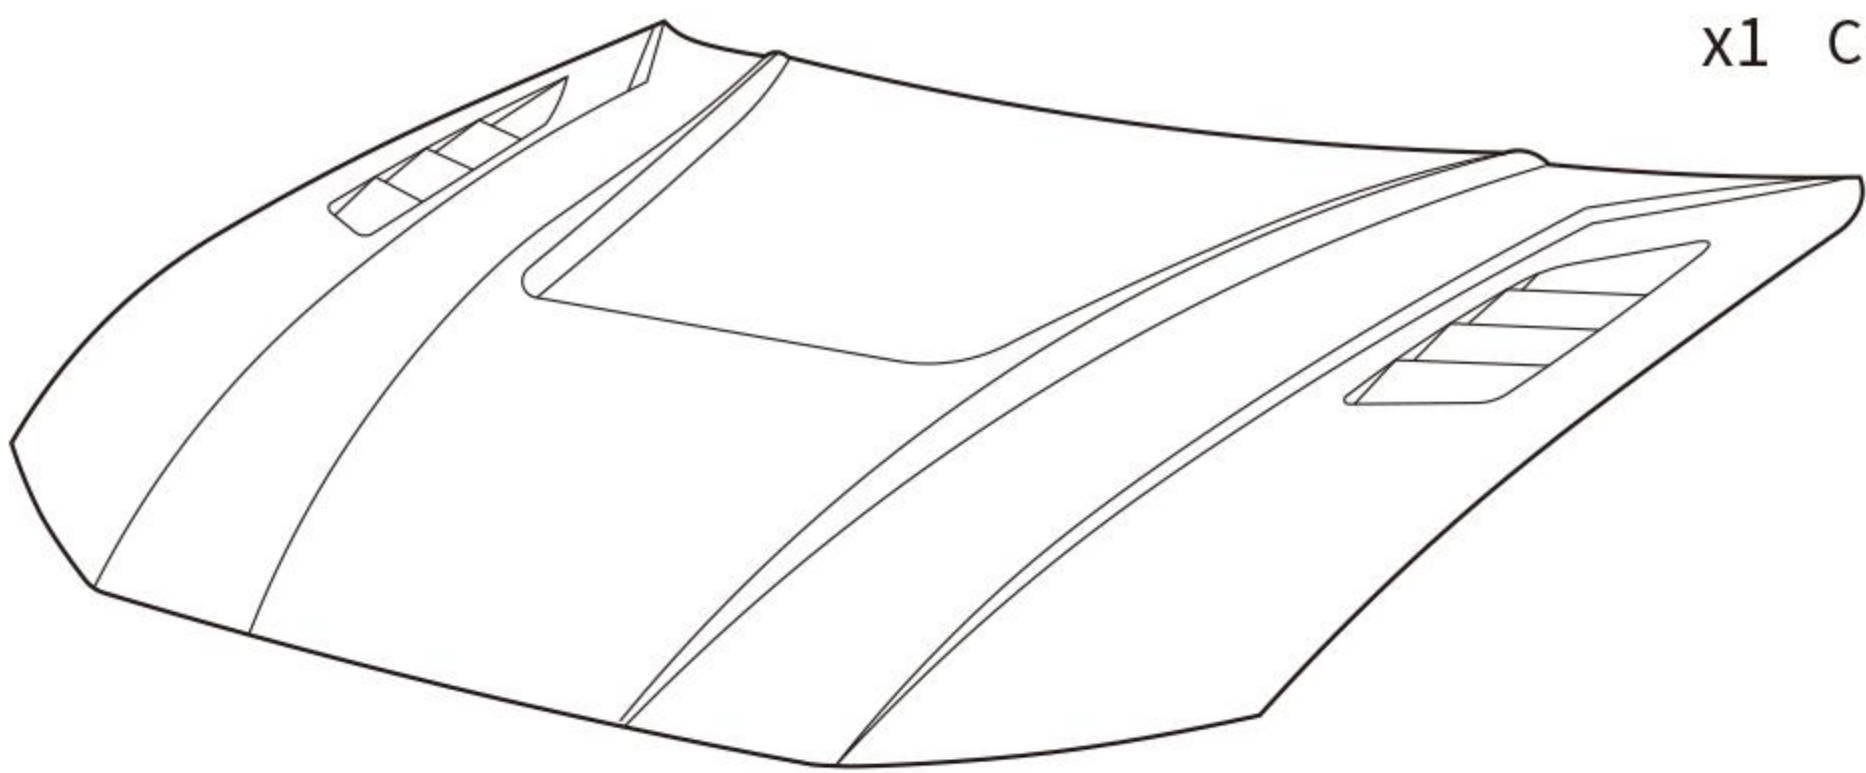

x1 Carbon Fiber Cover

 x6 Half Round Head Hexagonal Boltw M6X16	 x4 Half Round Head Hexagonal Boltw M8X20	 x6 Washer M6X16X1.5(mm)	 x4 Washer M8X24X2(mm)
---	---	--	--

Install Points

