


BMW G80 M3 (23-25)




Installation Manual 安装手册

CARBON FIBER HOOD

Product list 产品清单

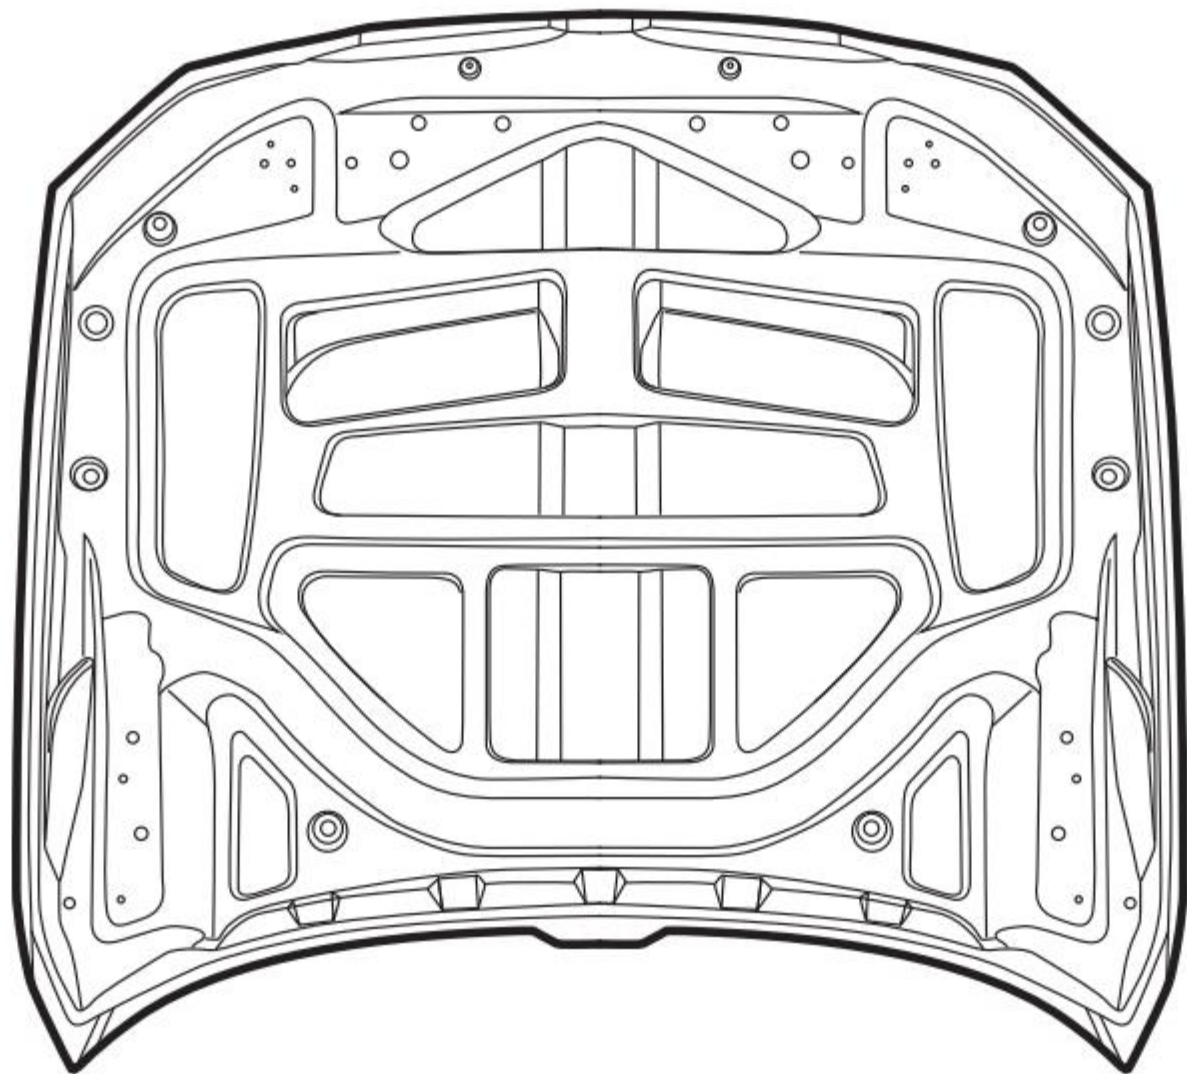



Back 背面

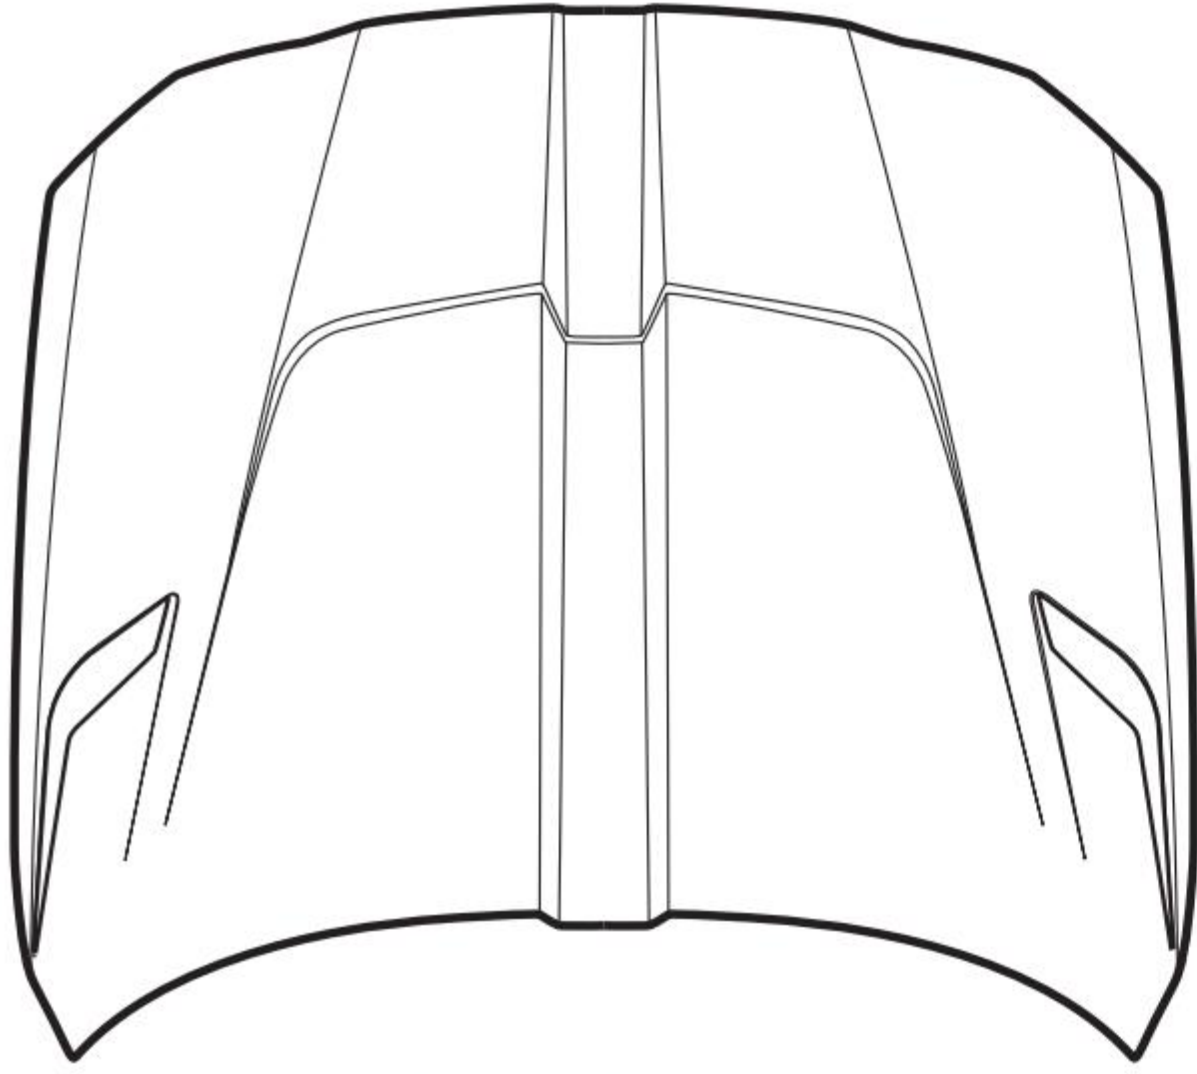

Front 正面


Carbon fiber hood*1
碳纤维机盖*1

Parts list 零件清单

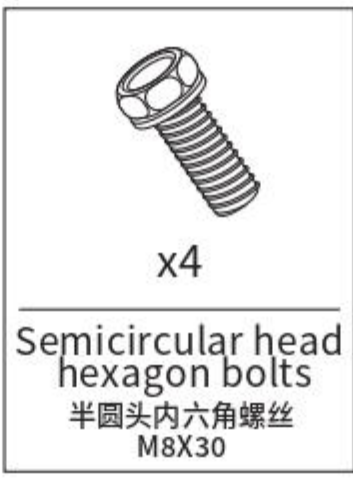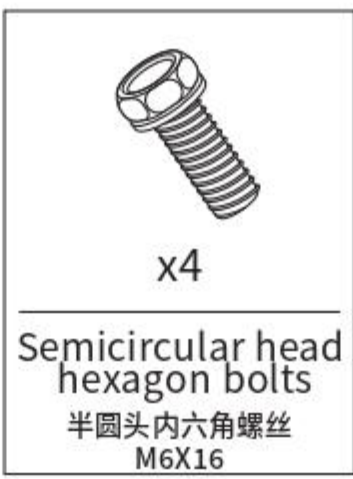


Step1:Remove the original car hood

步骤1:拆卸原车机盖

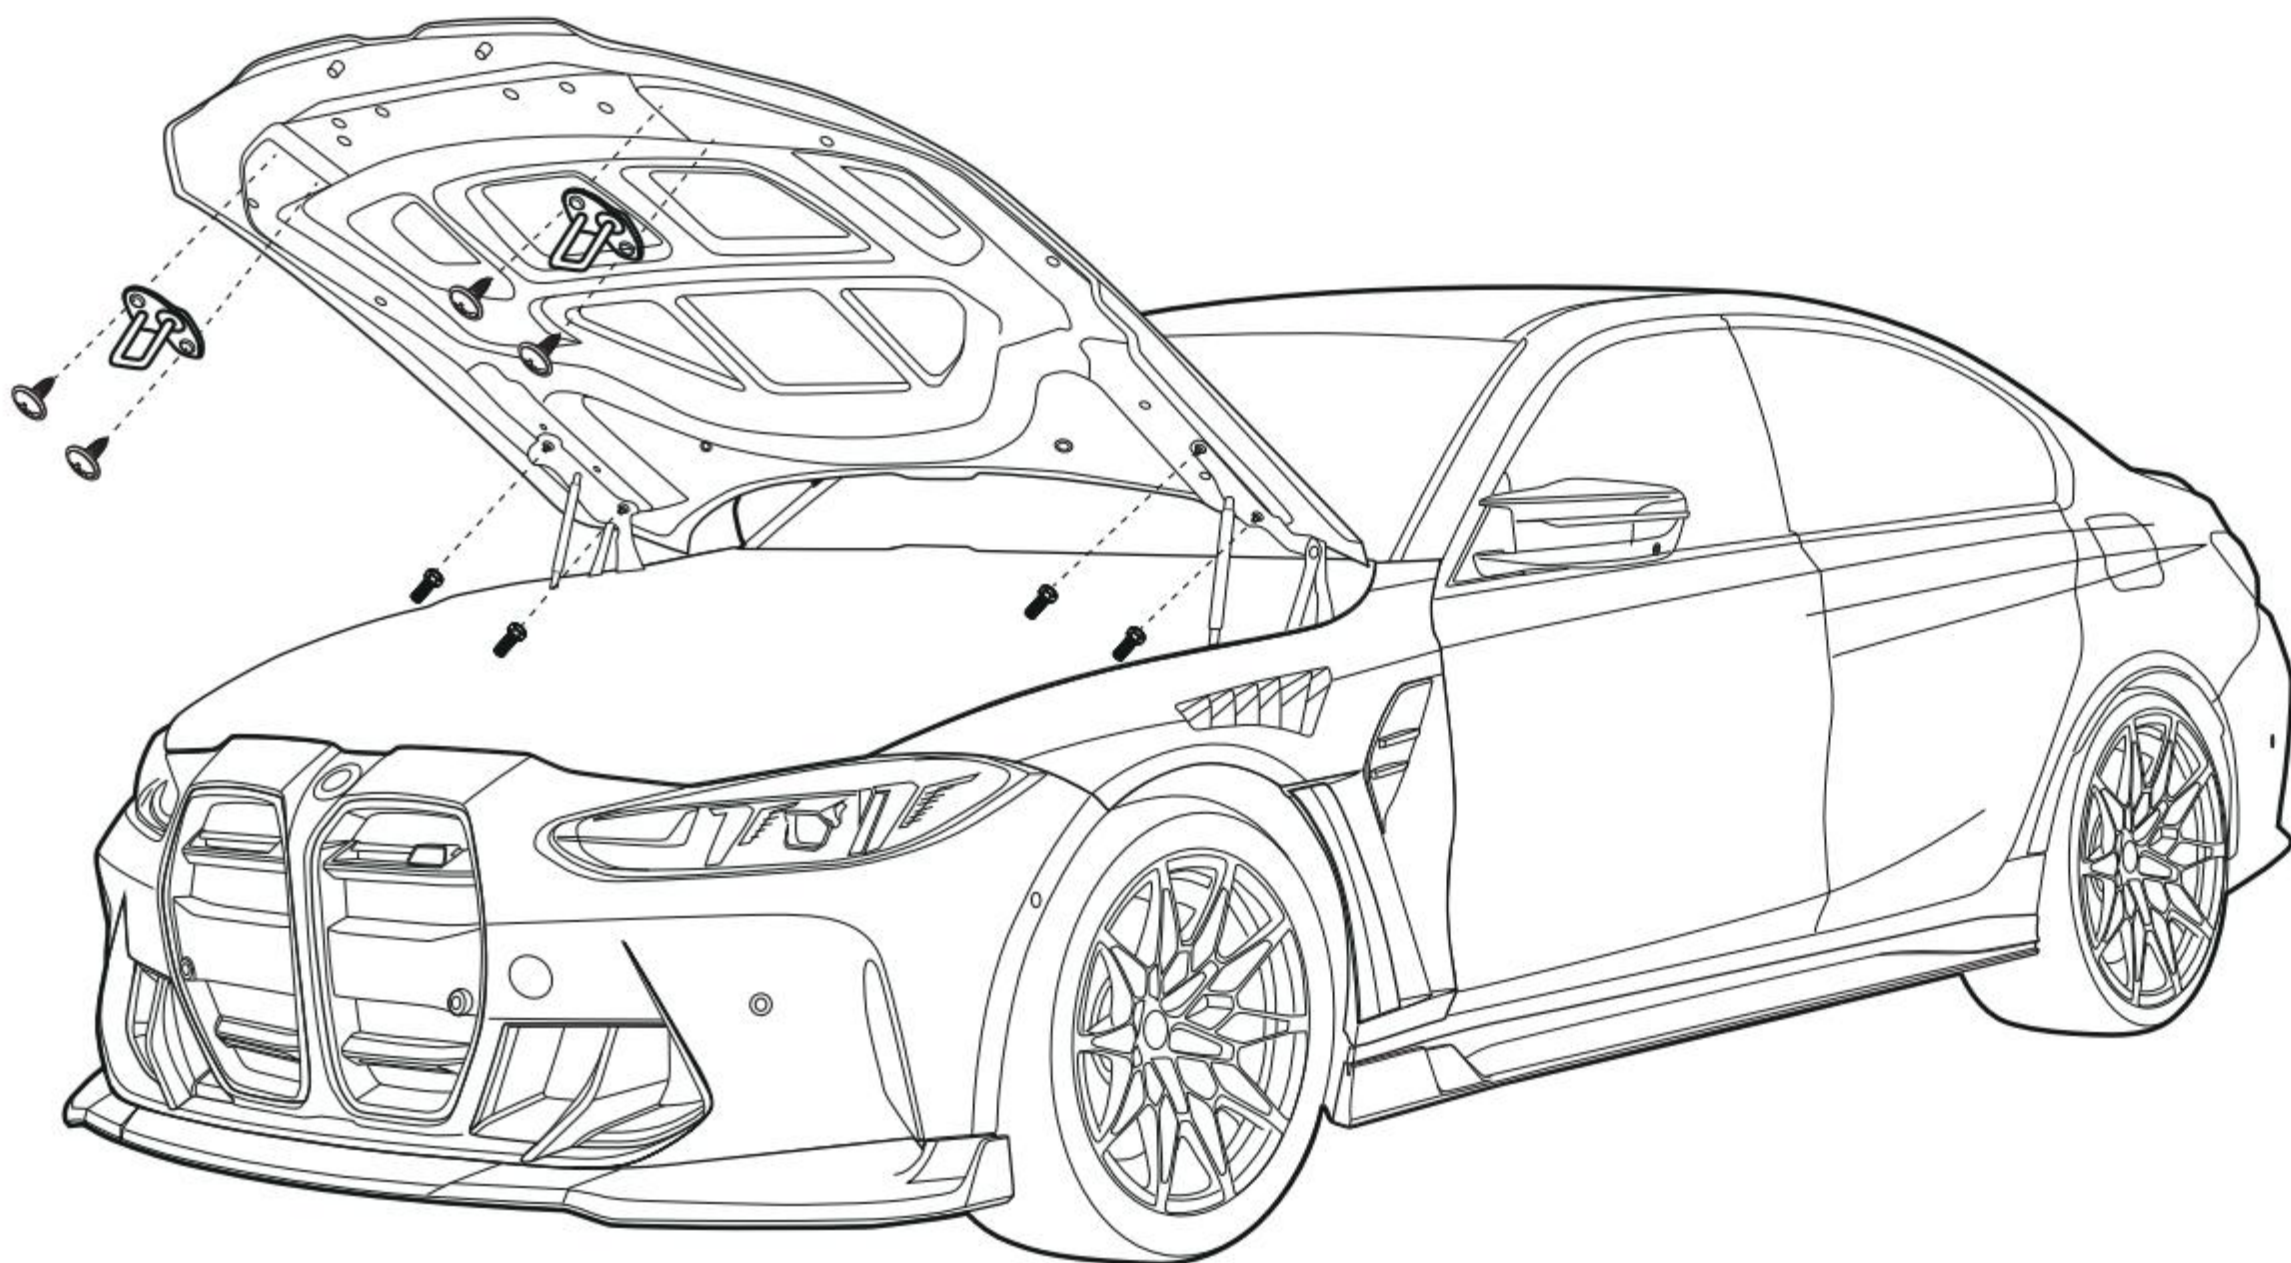

Step 2: Transplanting the parts on the hood

步骤2:移植机盖上的配件

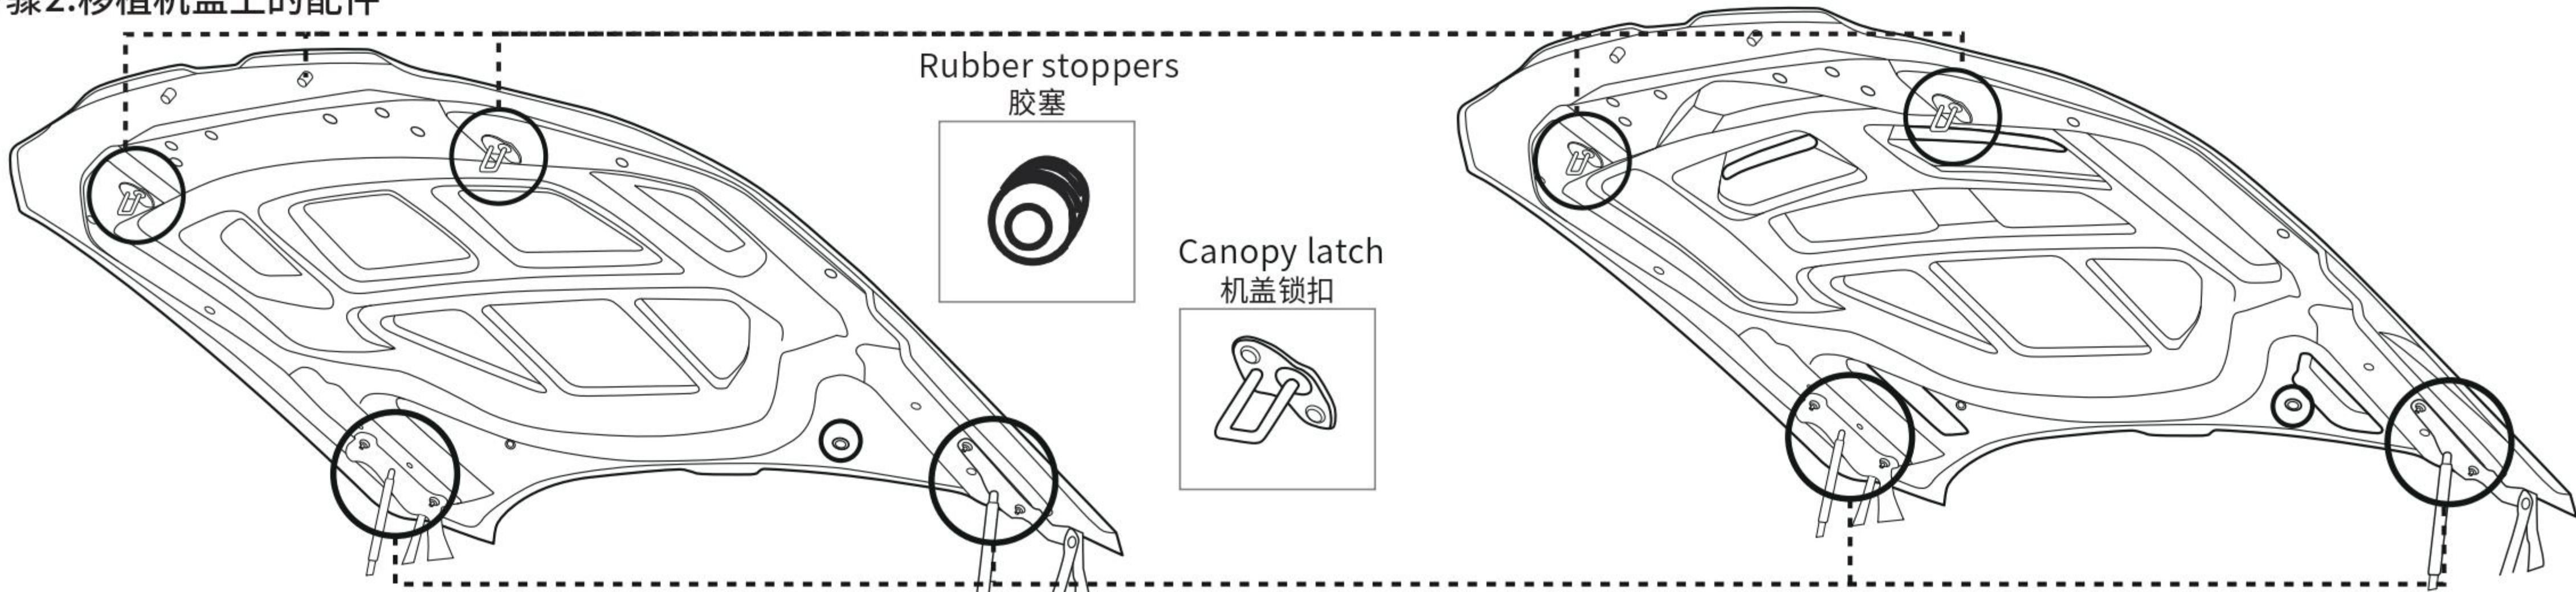

注：原车机盖连接杆不动只移植螺杆、锁扣及塑料件

Note:The connecting rod of the original car hood is not moving, only the screw,lock and plastic parts are transplanted

Step 3:Carbon Fiber hood Installation

步骤3:碳纤维机盖安装

