



Installation Manual 安装手册

CARBON FIBER REAR WING

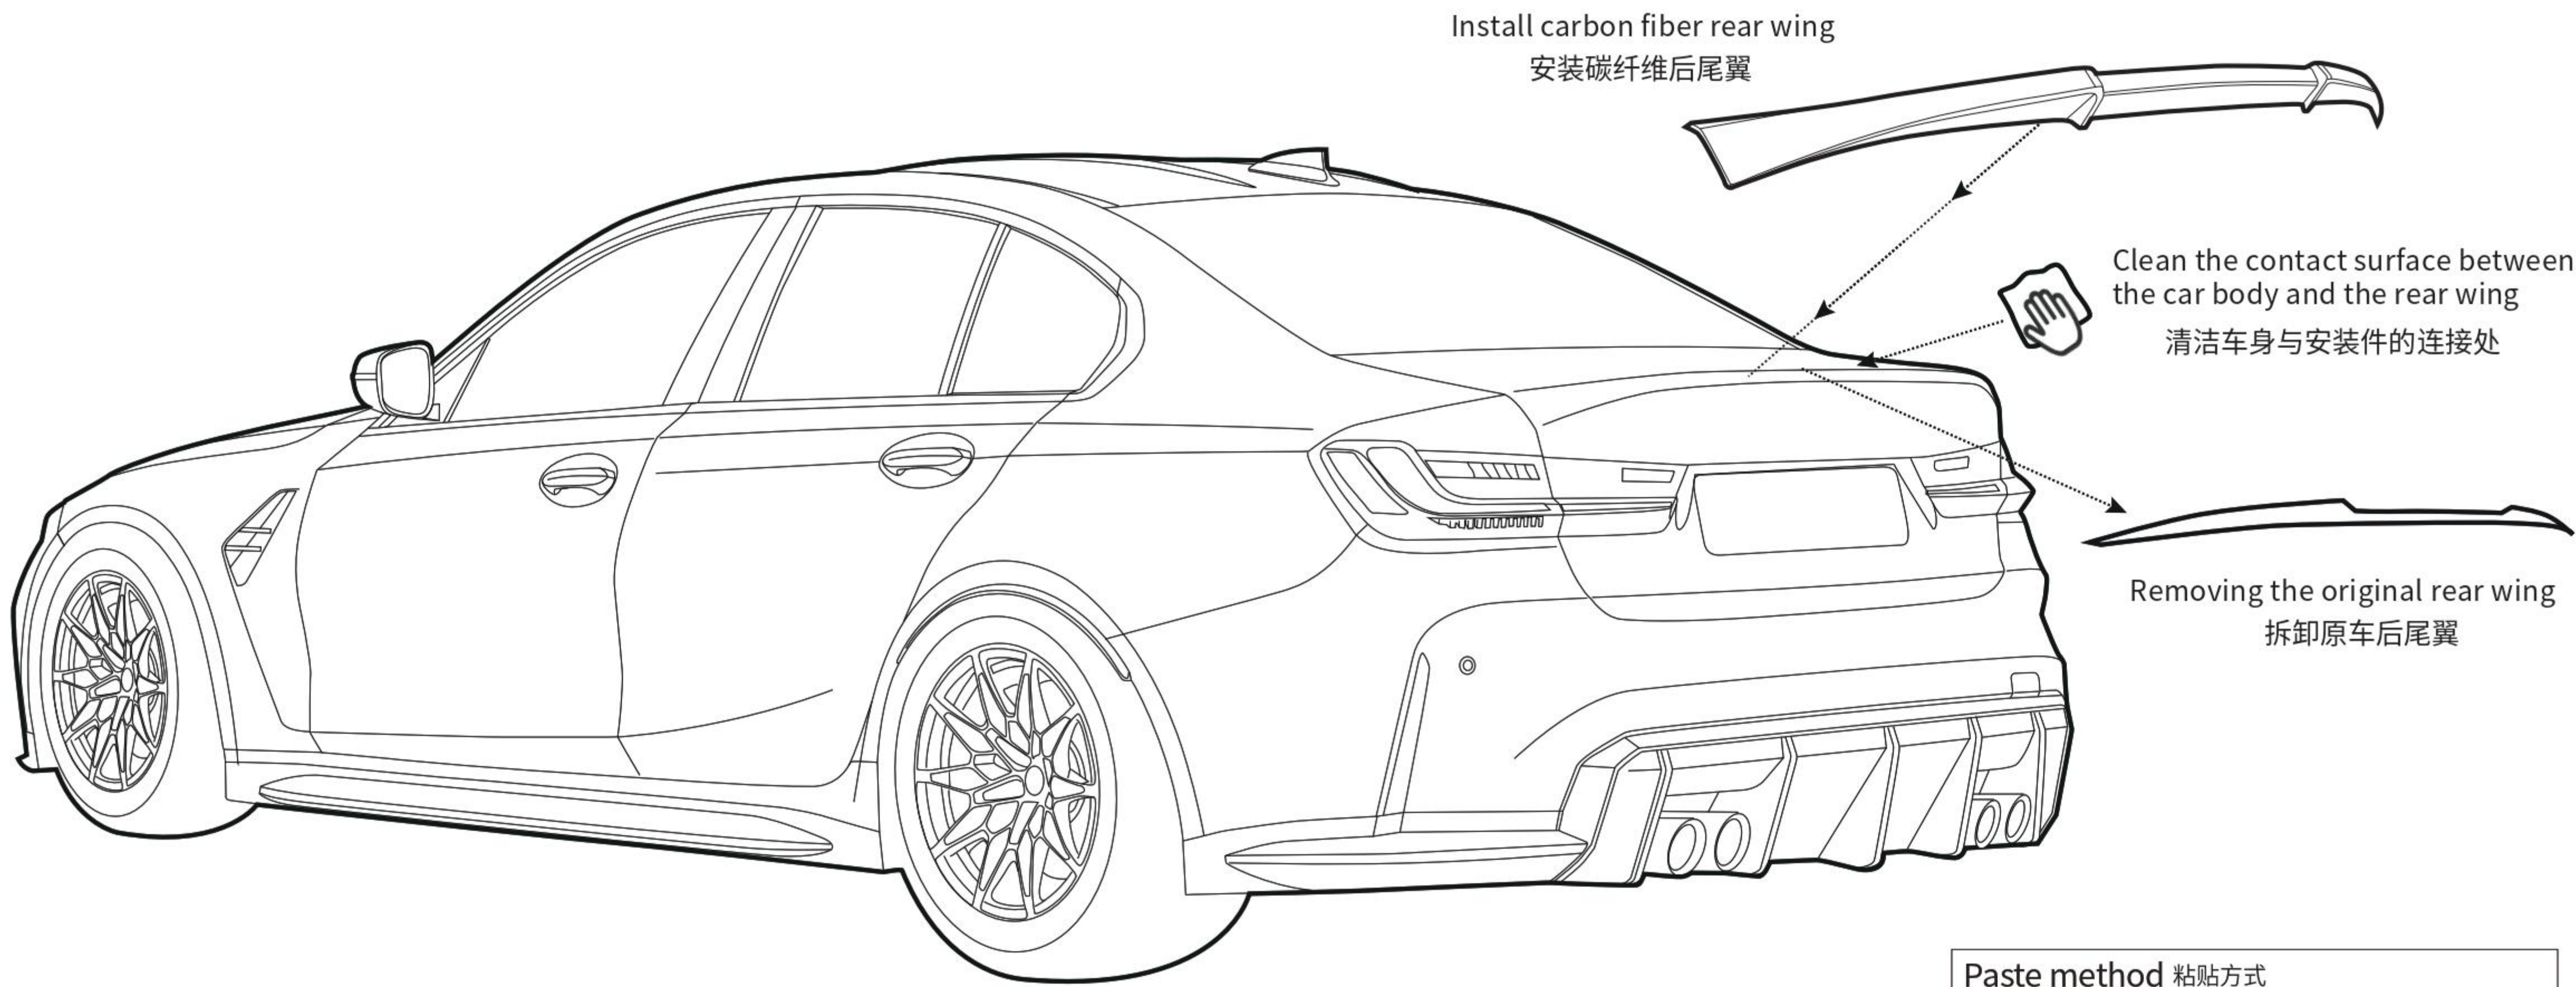

Paste method 粘贴方式

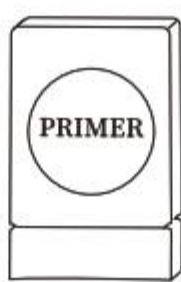

PRIMER




①
Double-Sided tape
双面胶



②
Adhesive sealant
玻璃胶

Install Points 安装点

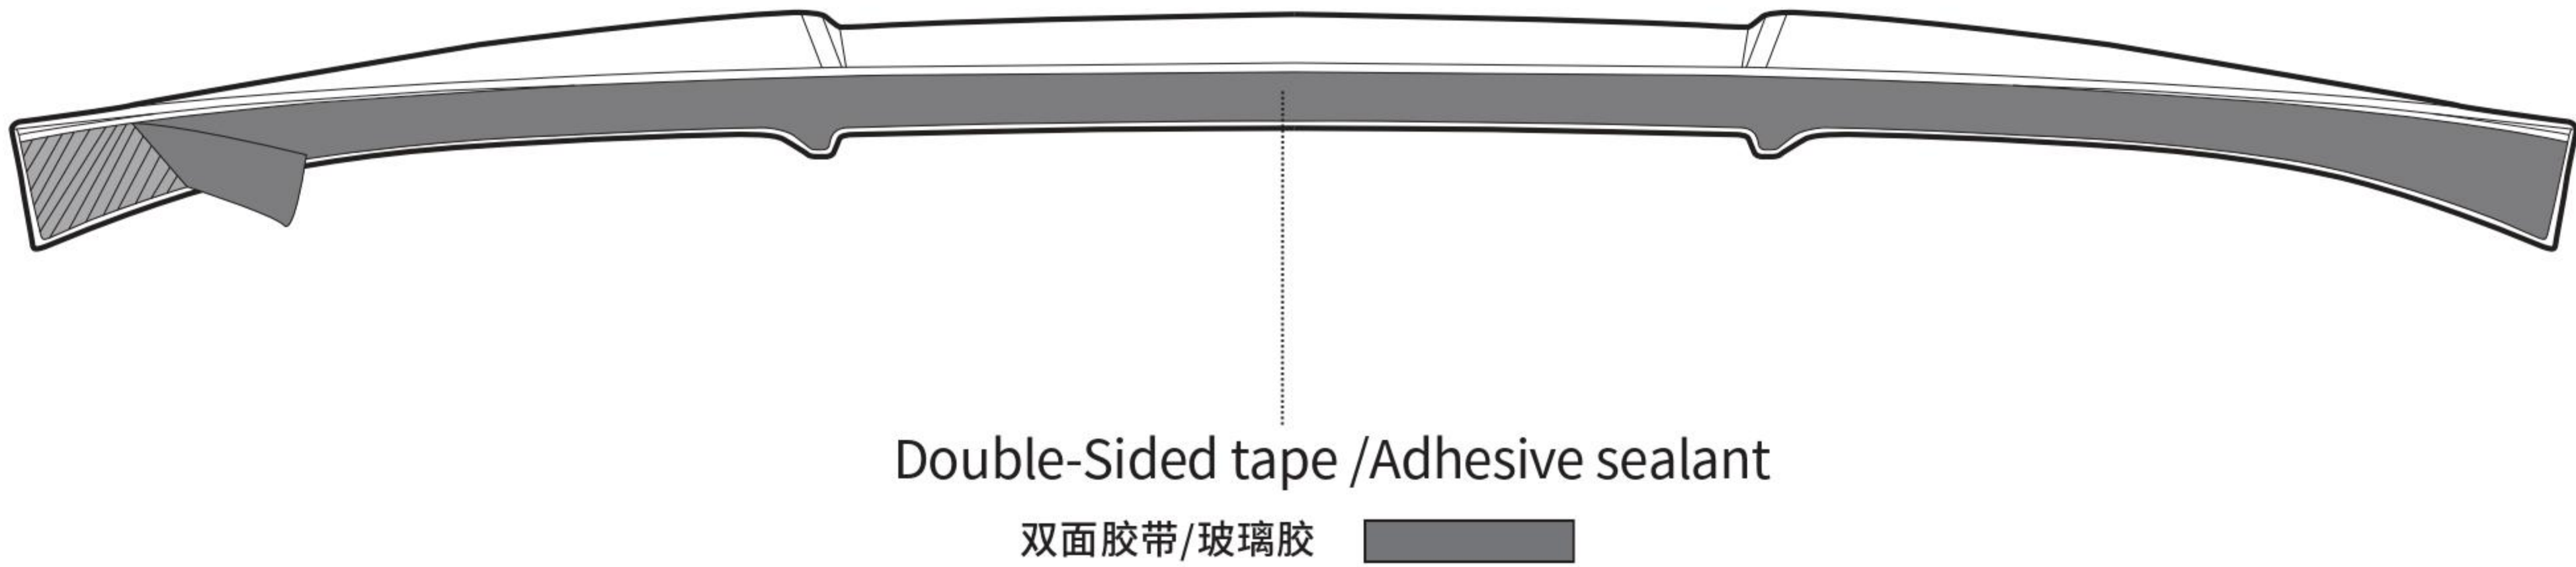


Rear 后部

Carbon fiber rear wing 碳纤维尾翼

- ① After applying primer on the car body, remove the film of the double-sided tape slightly outwar (OrapplyAdhesive sealant). Oncefitting is adjusted perfectly completely remove double-sided tape.
- ① 在车身上涂完底漆后，将双面胶带的薄膜稍微向外撕去（或涂上玻璃胶）。完美调整贴合后，完全撕掉双面胶带。

All Components 所有组件

x1 Carbon fiber rear wing
碳纤维尾翼

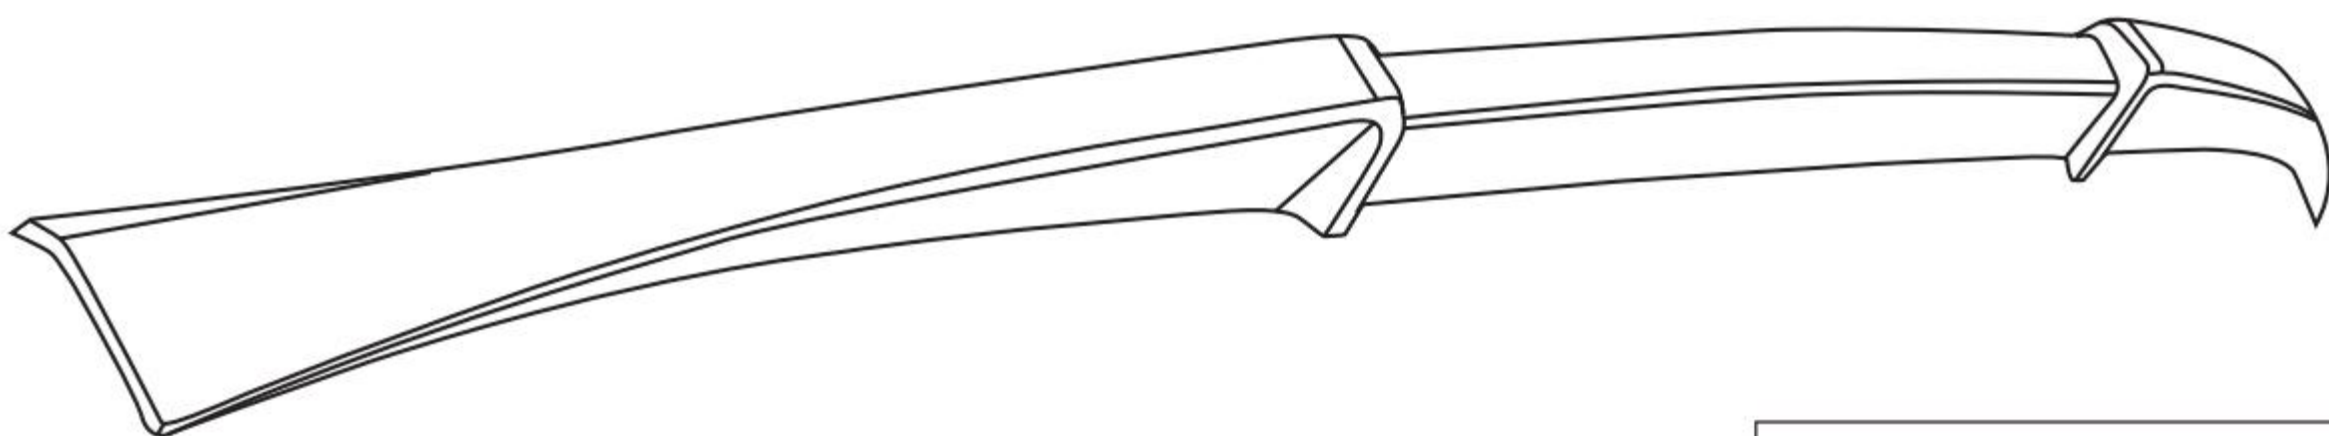



Double-Sided tape/Adhesive sealant
双面胶带/玻璃胶
3M™ VHB 4910 (10mm)