


Audi Rs6 Avant(2020)

Installation Manual

CARBON FIBER TOP WING

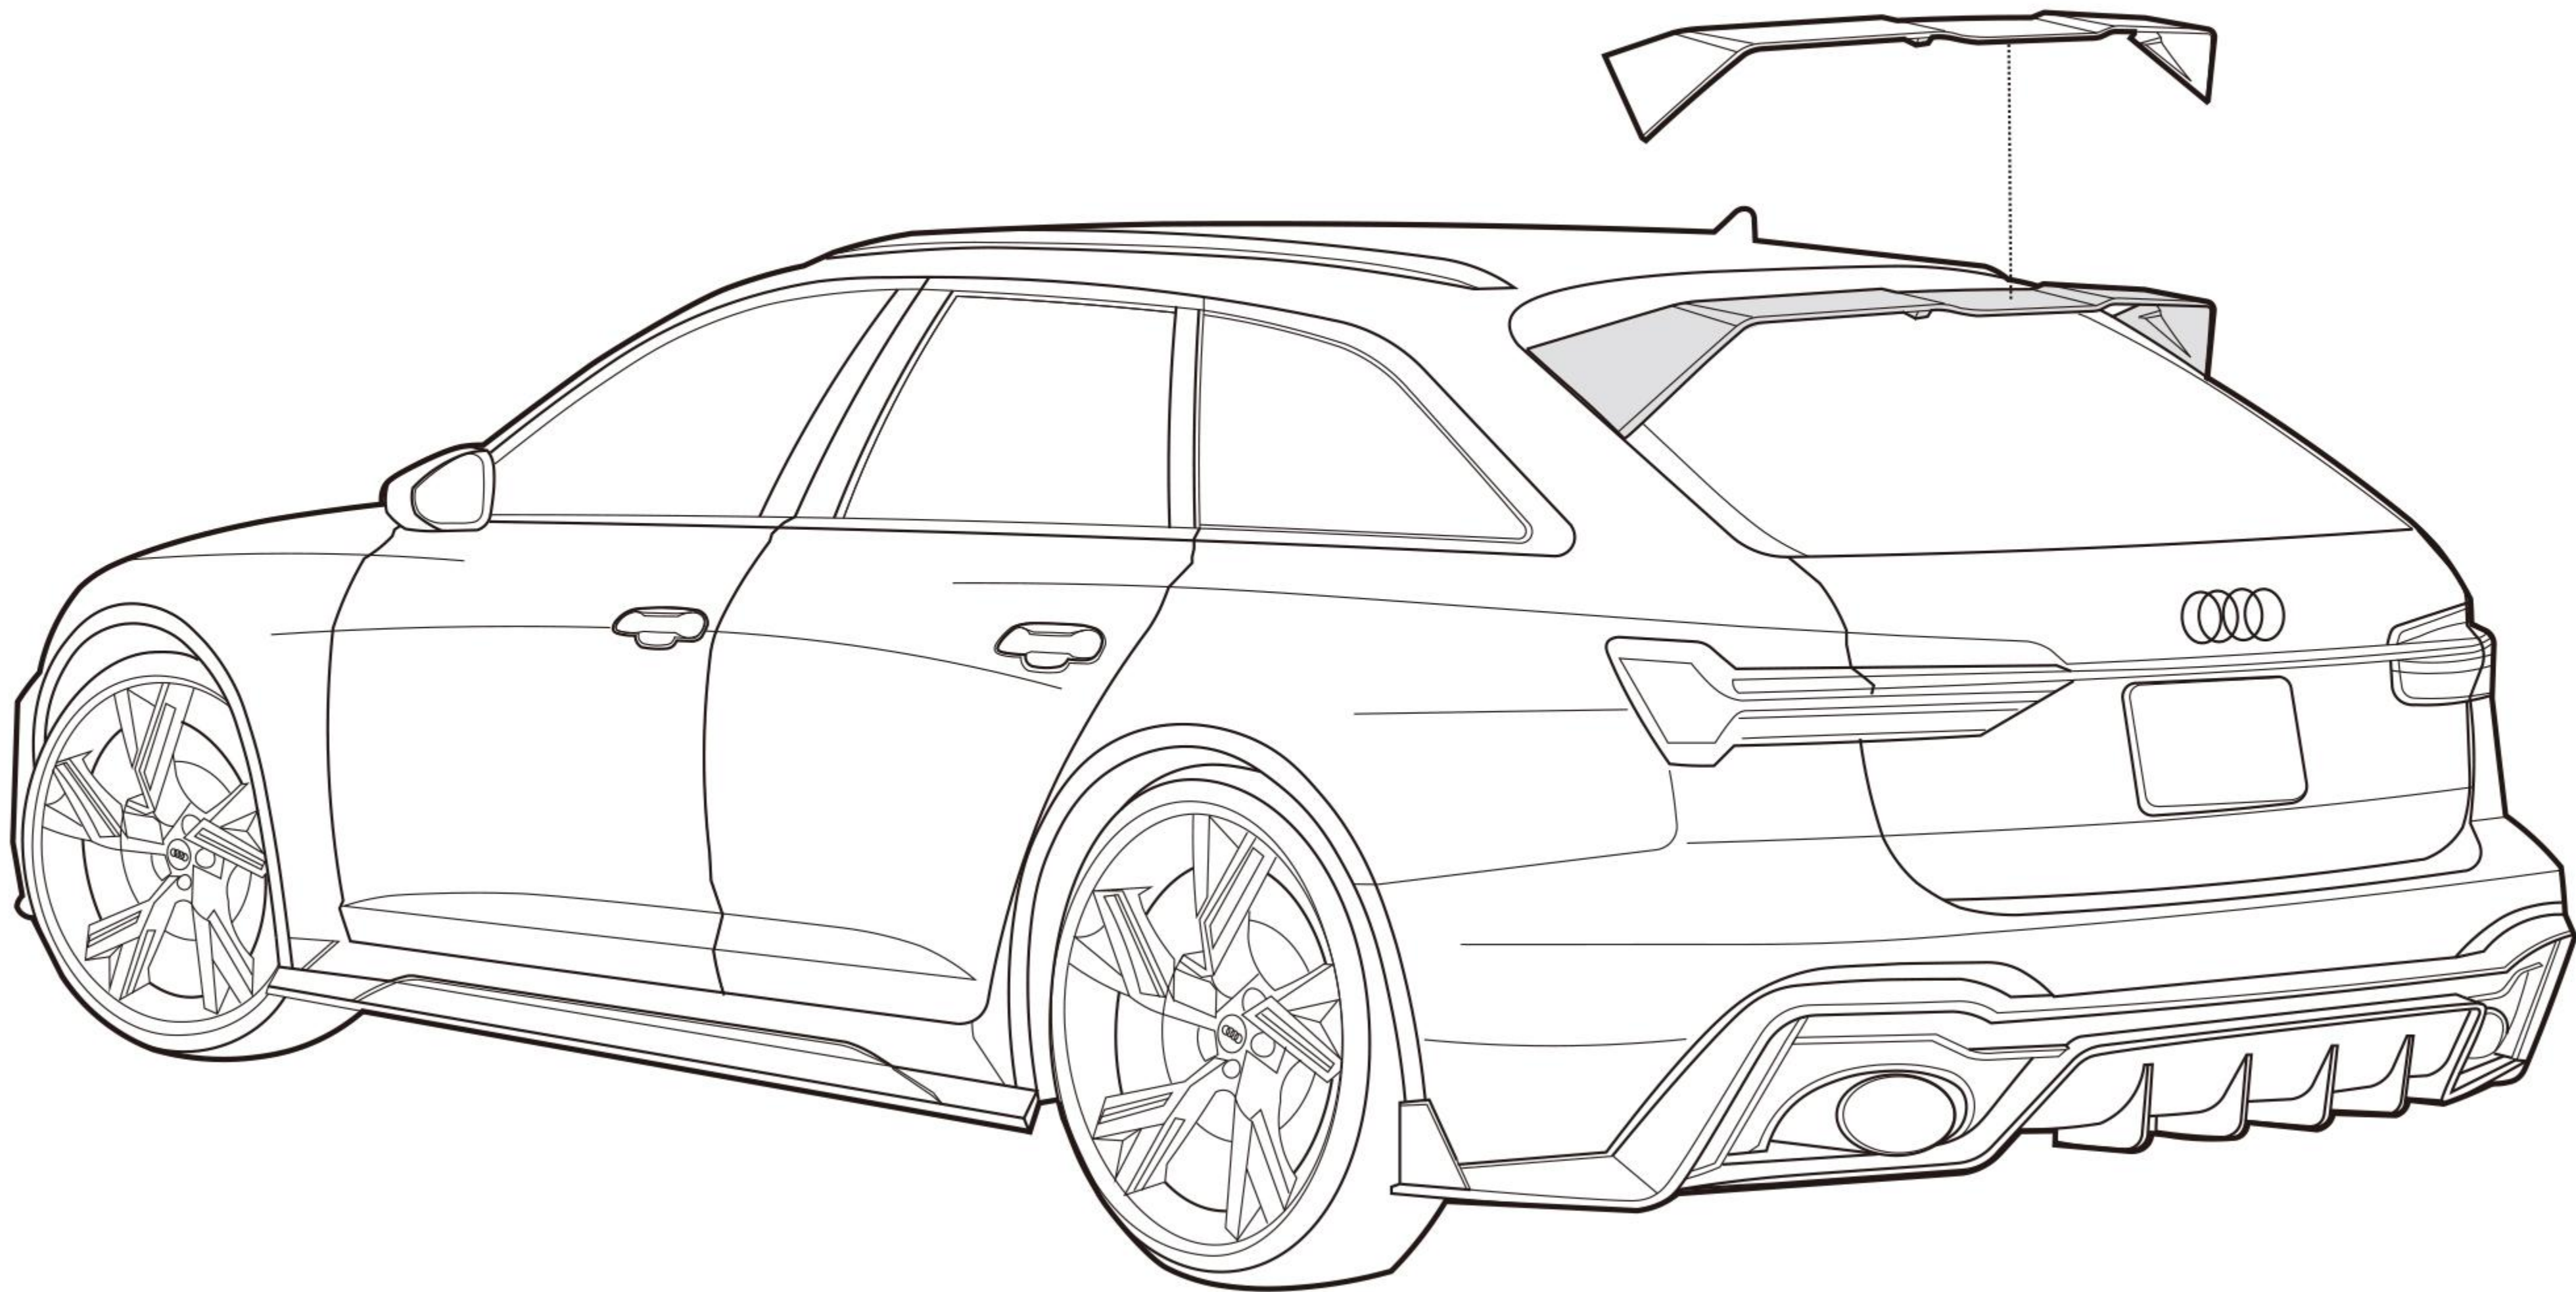


Rear

Carbon Fiber Top Wing

① After applying primer on the car body, remove the film of the double-sided tape slightly outwar (Or apply Adhesive sealant) . Once fitting is adjusted perfectly completely remove double-sided tape.

All Components

x1 Carbon Fiber Top Wing

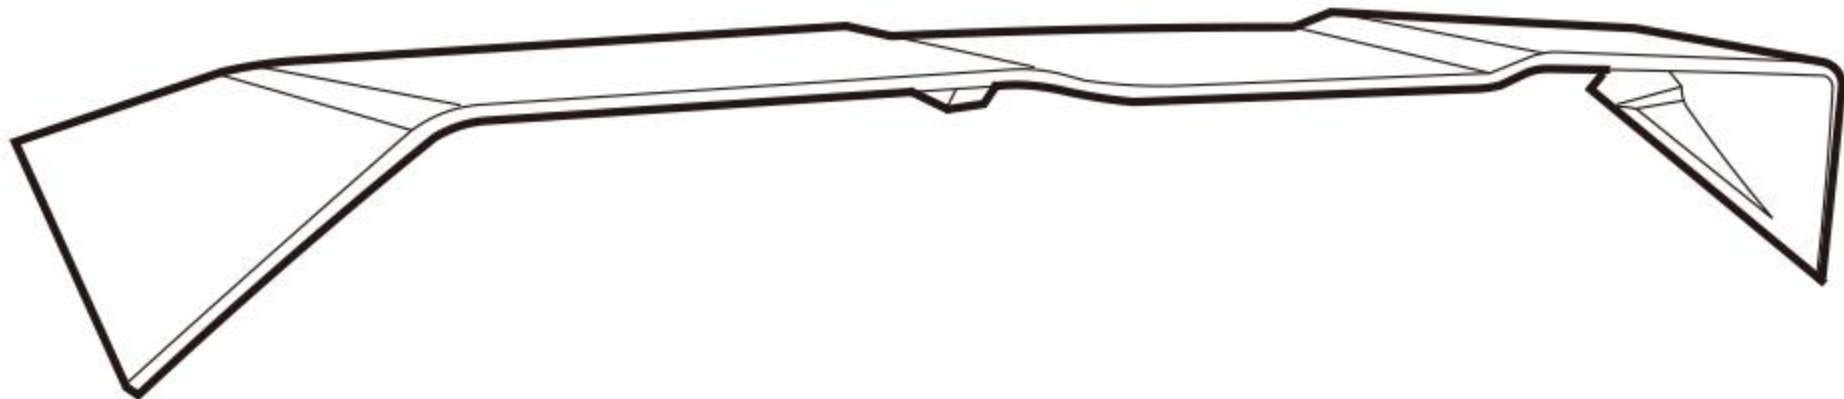

Double-Sided tape/Adhesive sealant

3M™ VHB 4910 (20mm)

Install Points

Double-Sided tape
/Adhesive sealant

