


Installation Manual

CARBON FIBER SIDE SKIRTS

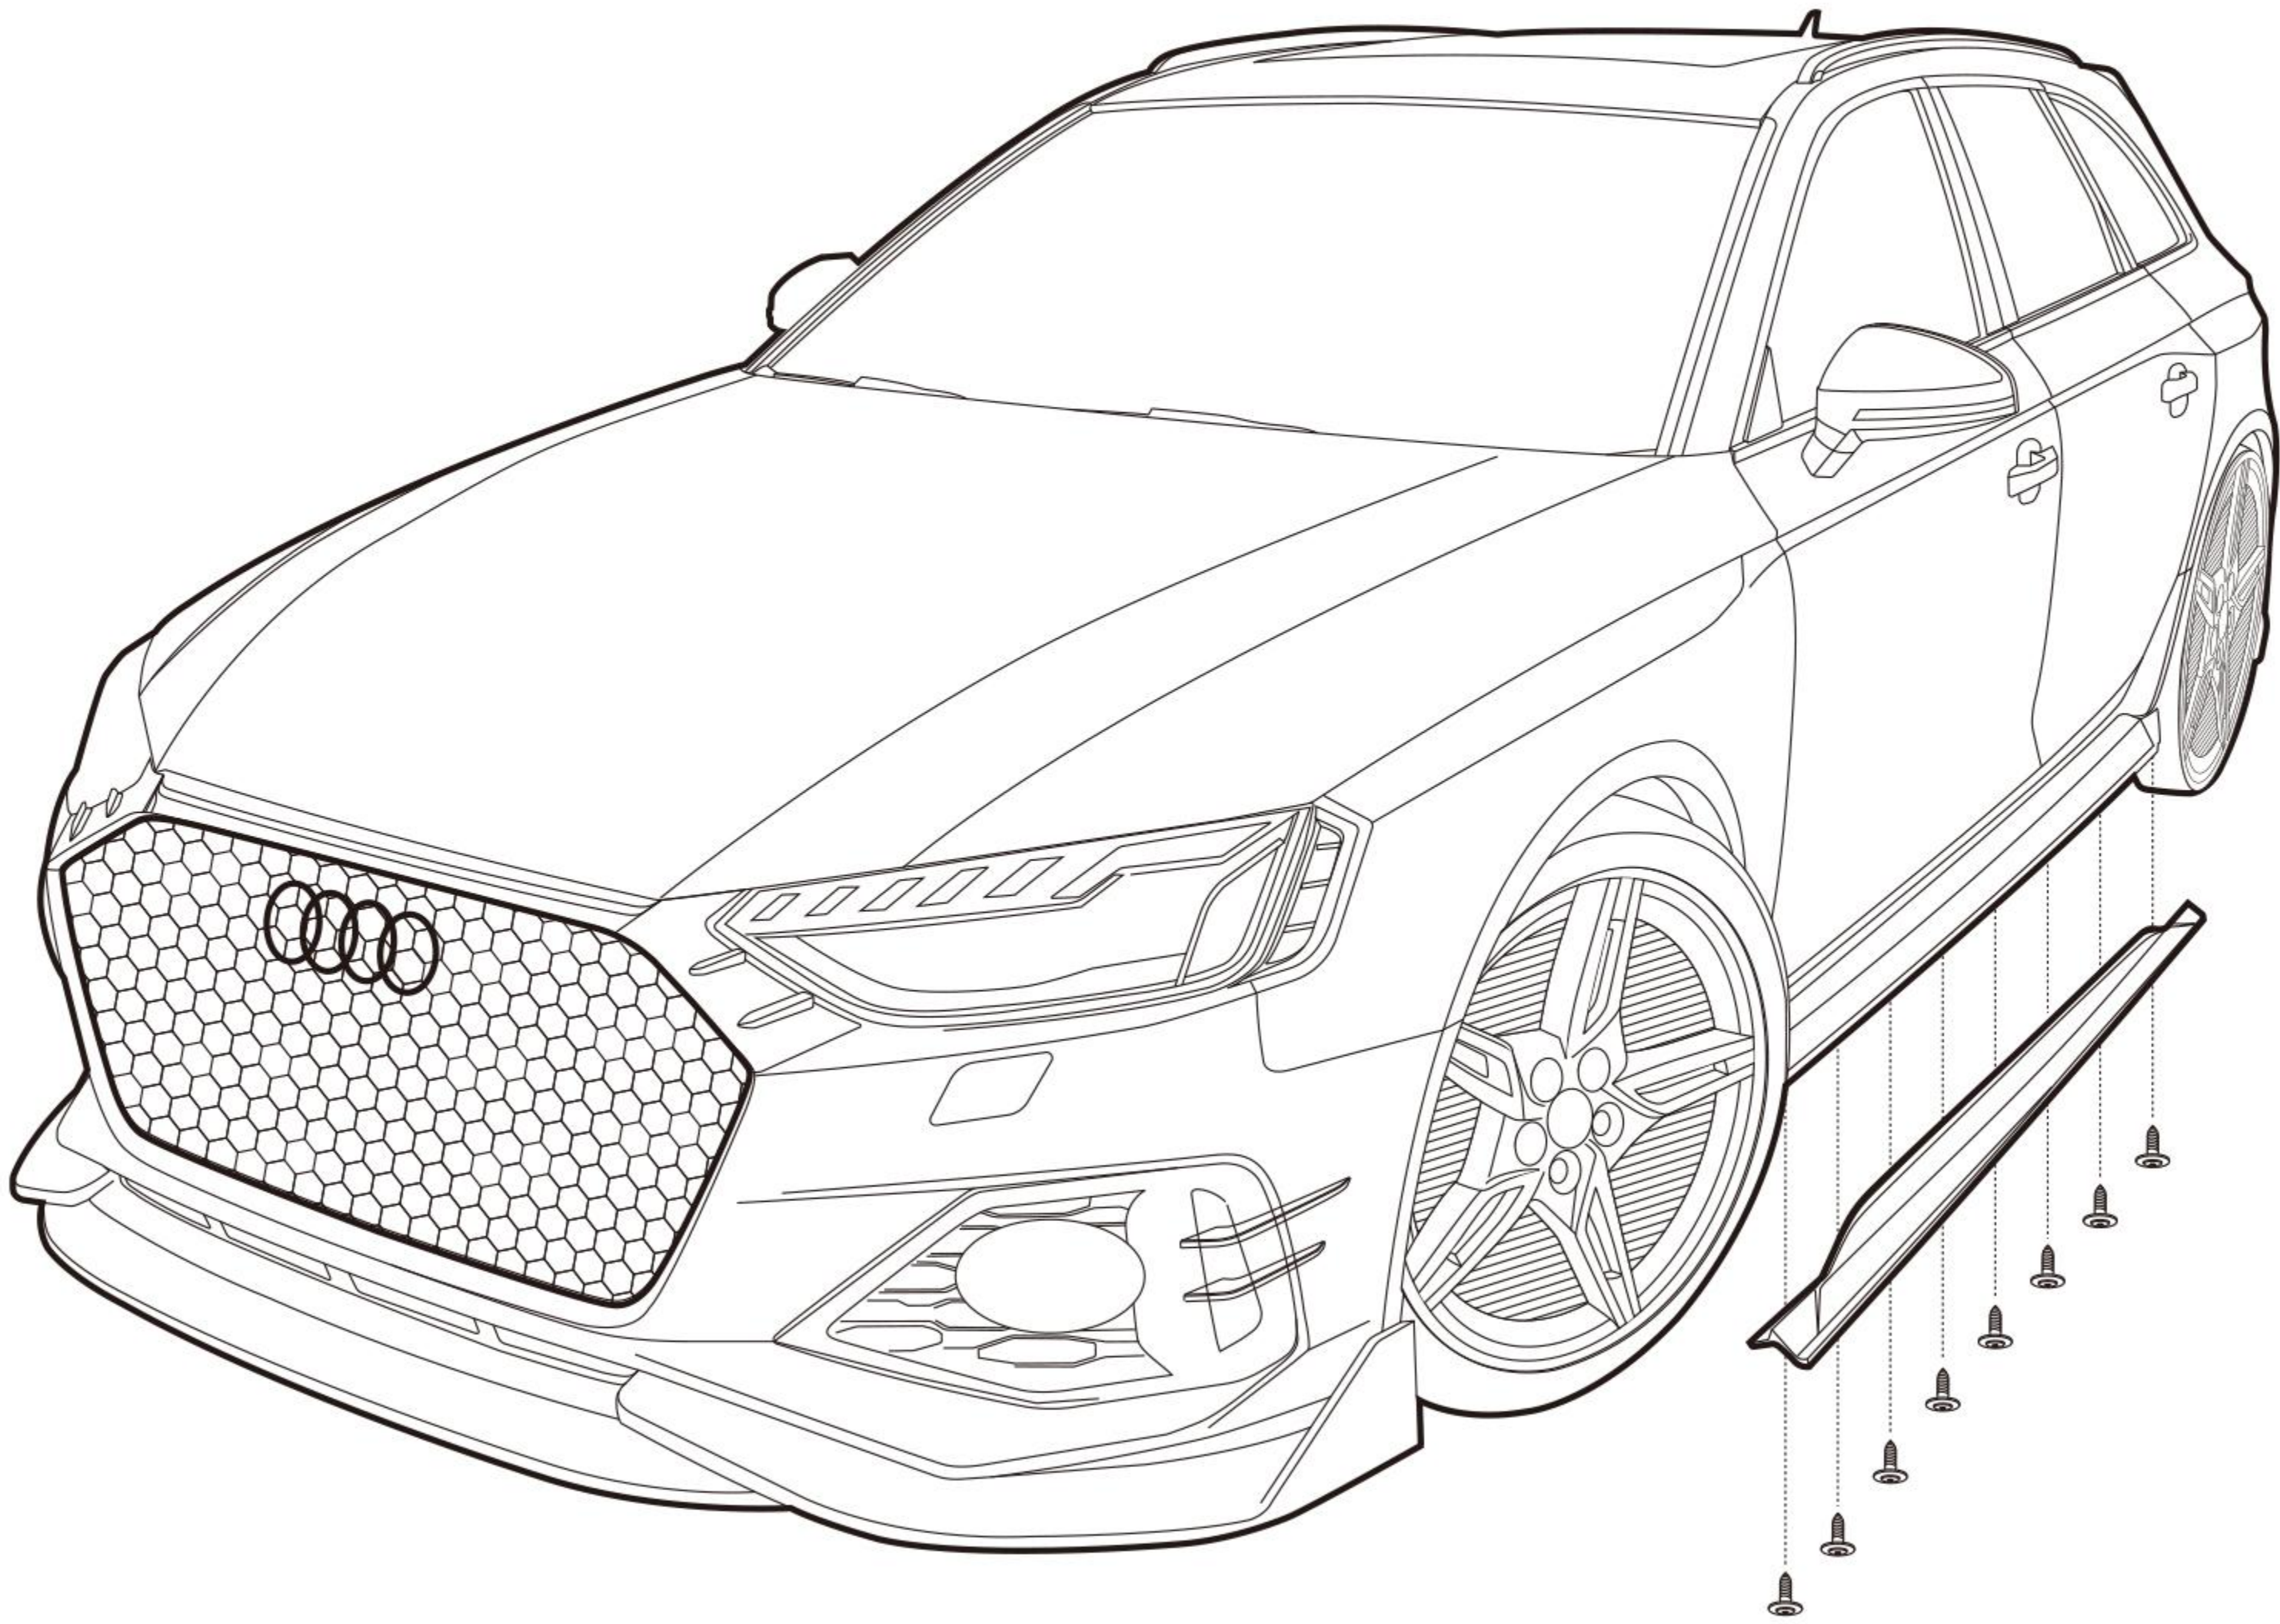


Side

Carbon Fiber Side Skirts

- ① Remove Genuine Bolts according to the designated Install point.
- ② After applying primer on the car body, remove the film of the double-sided tape slightly outward. Once fitting is adjusted perfectly completely remove double-sided tape.
- ③ Set the Genuine bolts and Screw with the power tool according to the designated Install points.

All Components

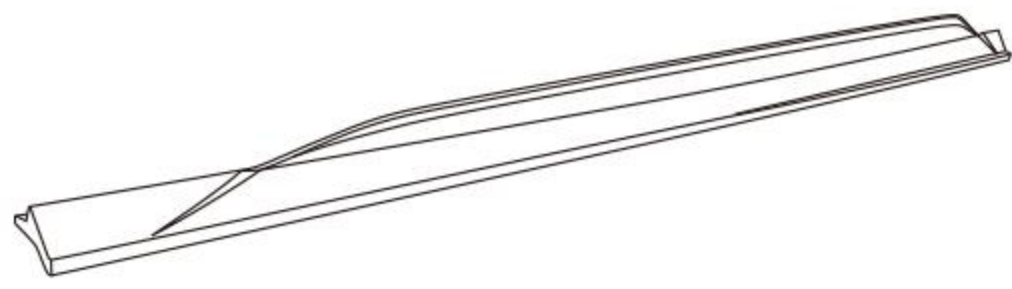

Carbon Fiber Side Skirts (LH, RH)


x2



x18

Self-Tapping screw

M5X16




x2

Adhesive sealant

Sikaflex®-221

Install Points

Adhesive sealant installation method ①Use alcohol/acetone to clean the car body surface where the glass glue product comes into contact. ②Use the included primer to paint the body (surface primer will scratch the paint). ③Apply Adhesive sealant to the sticking position and stick it on the car. ④Install the fixing screws at the bottom.

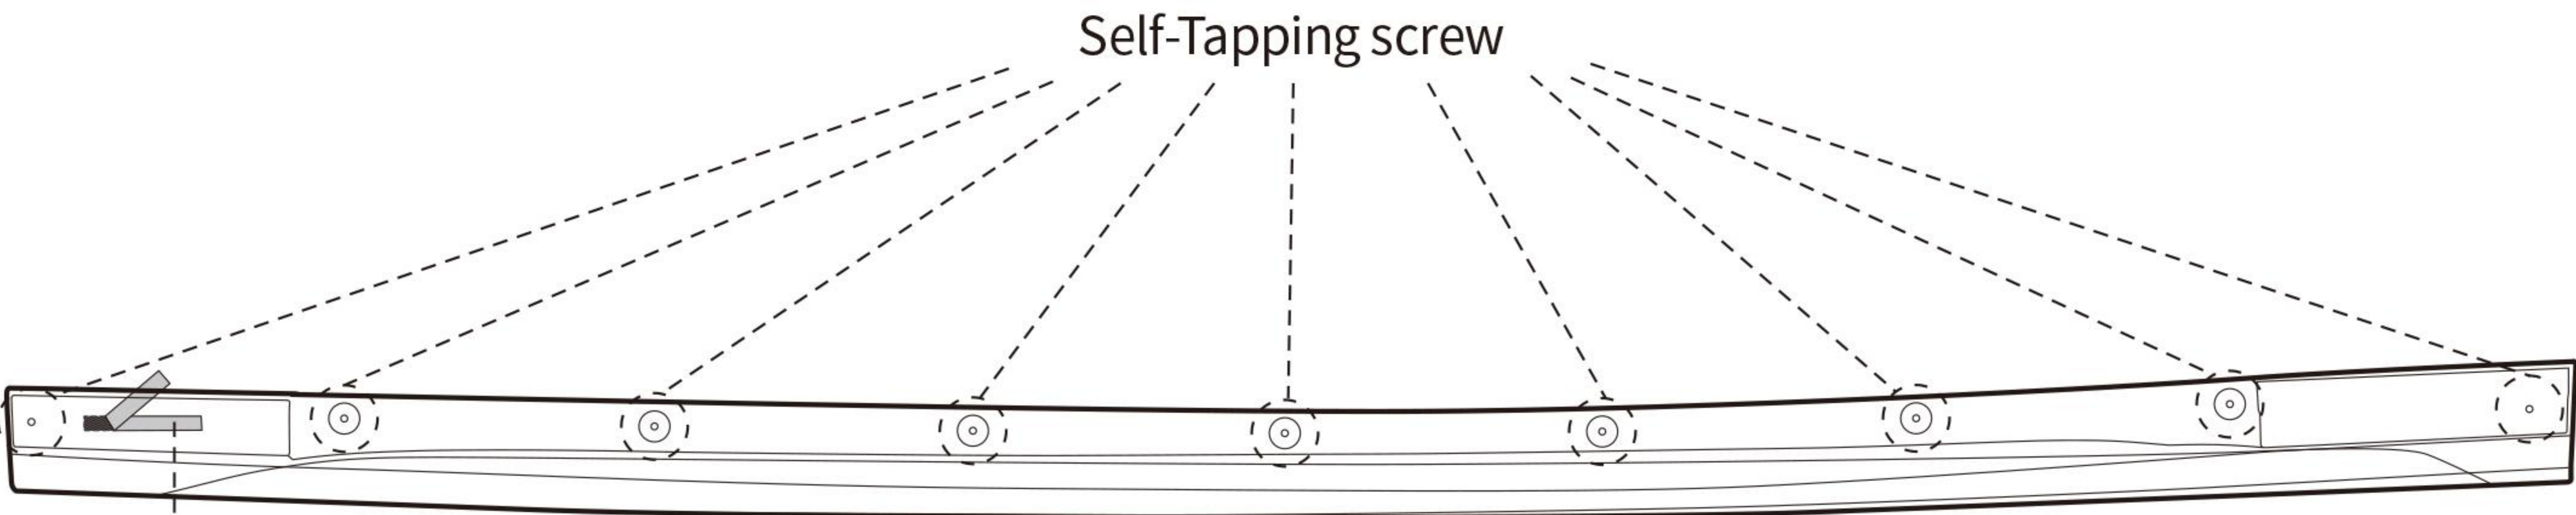

Adhesive sealant