


BMW G80 M3 (23-25)




Installation Manual 安装手册

CARBON FIBER SIDE SKIRTS

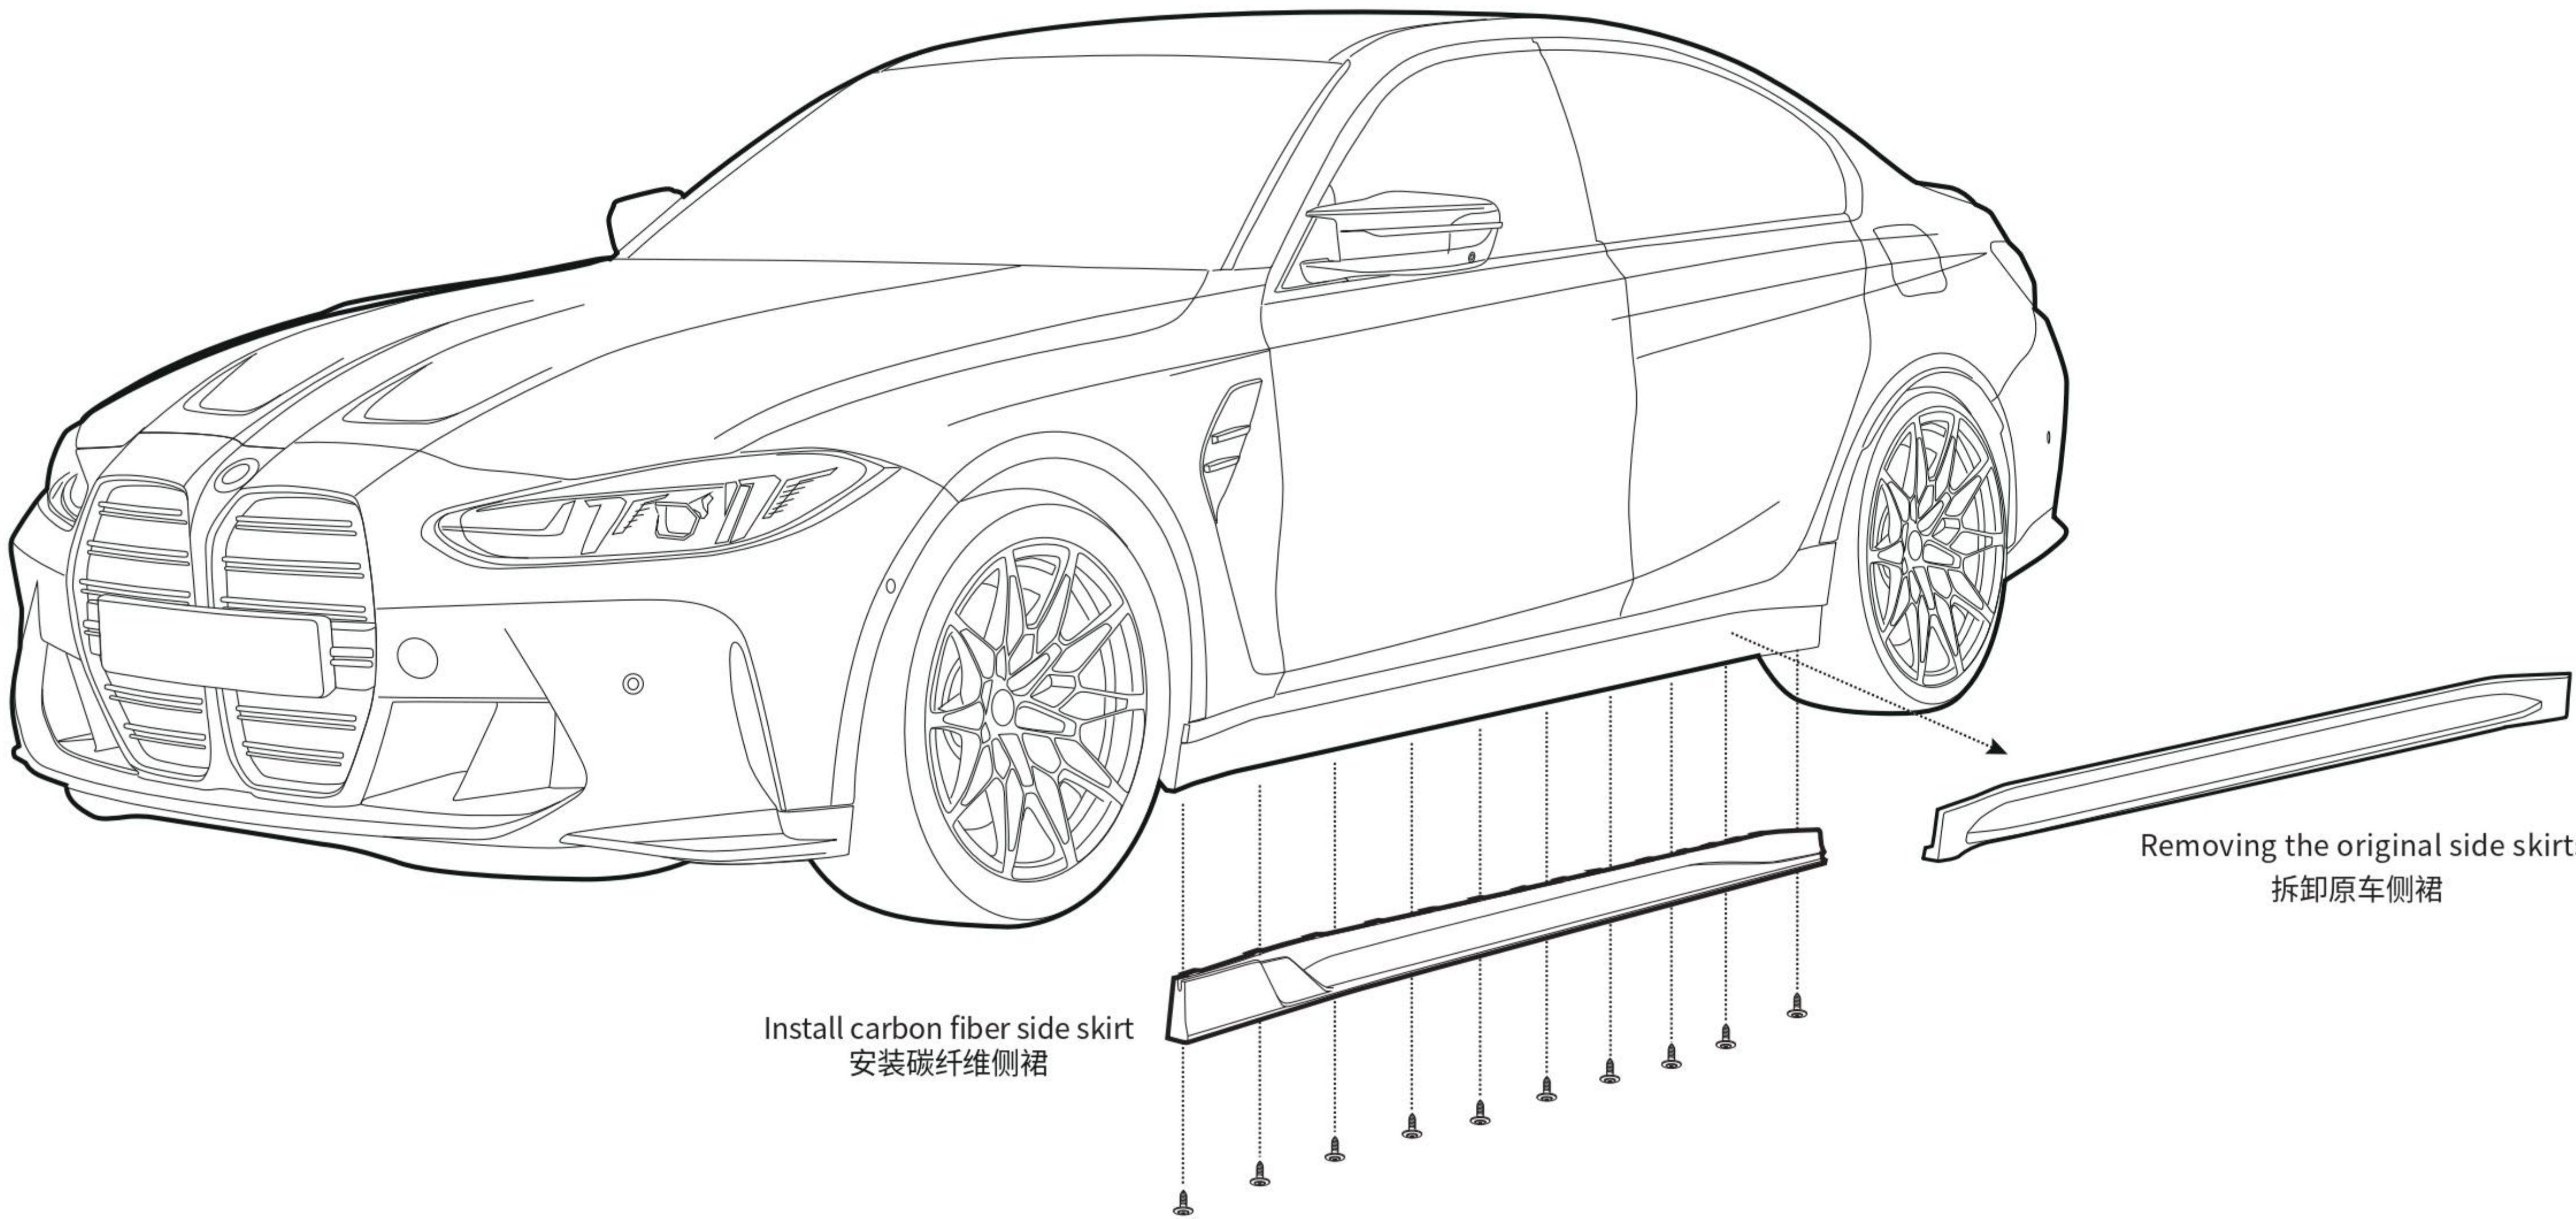

Install Points 安装点

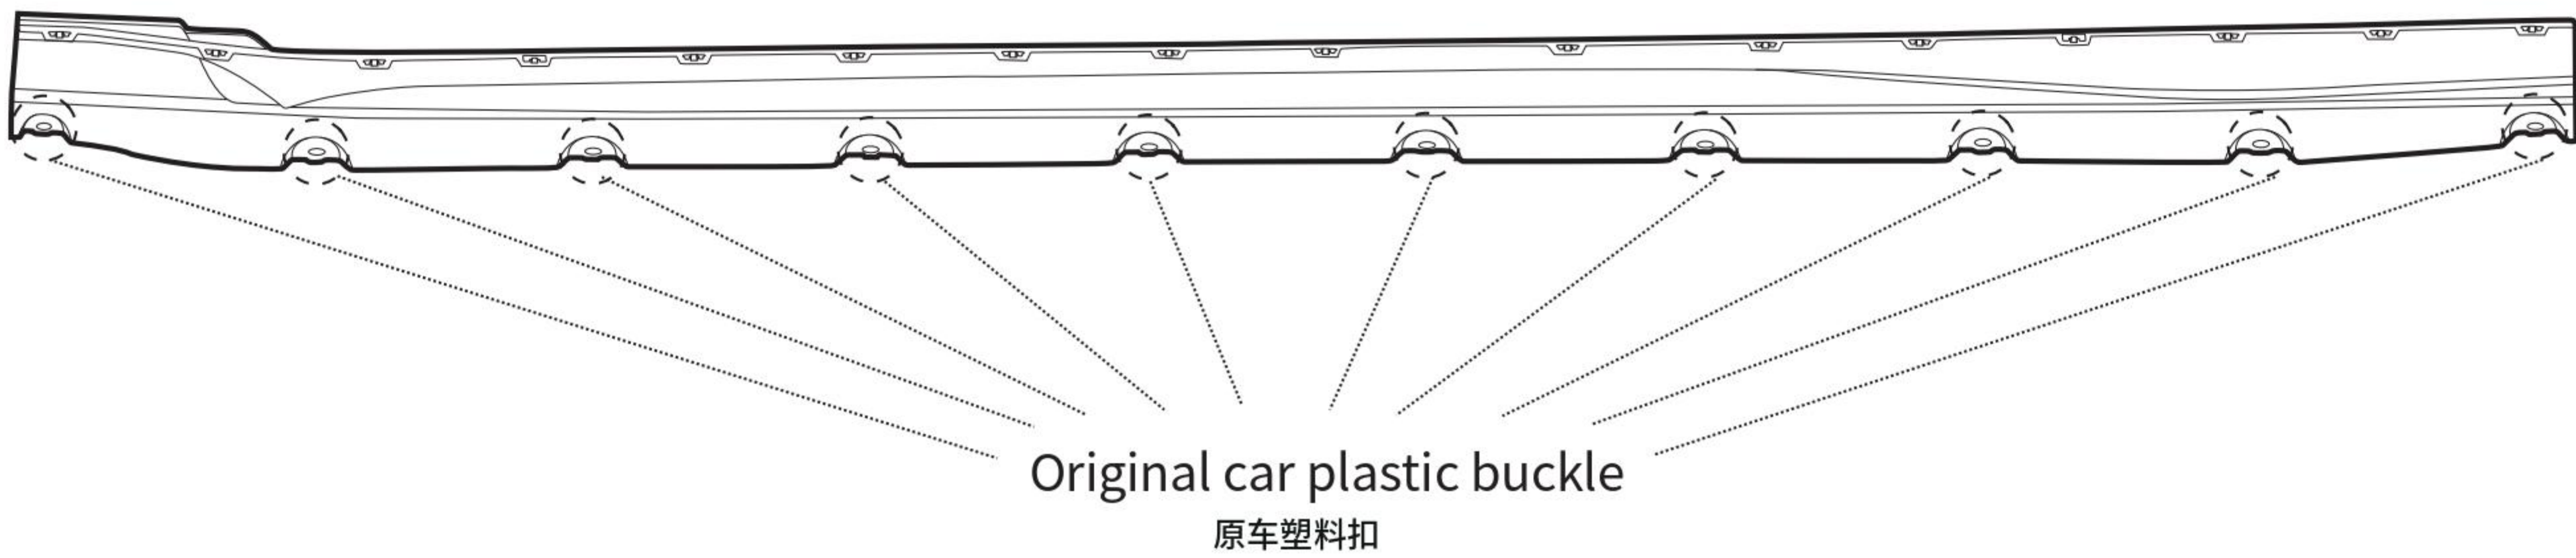

Front 前部

Carbon Fiber Side Skirts 碳纤维侧裙

- ① Remove the original side skirts.
- ② Install the carbon fiber side skirts directly to the car .
(the same as the original side skirts)
- ③ The bottom is fixed with original screws and plastic buckles.

- ① 拆下原车侧裙。
- ② 将碳纤侧裙直接安装到车上（和原厂侧裙安装方式一样）。
- ③ 底部用回原车螺丝和塑料扣固定。

All Components 所有组件

x2 Carbon Fiber Side Skirts
碳纤维侧裙



x18
Original car plastic buckle
原车塑料扣